



*

Model	Thread Size
LSTS	M16 x 1
LSTL	M20 x 1

Laser Specifications:
 Class 2 laser product
 Output < 1 mW
 Wavelength 650 nm

Using the Laser Sighting Tool

1. Screw LST onto front of sensor
2. Push button 'A' to turn on laser

WARNING: Do not aim laser directly or indirectly (via reflections) into eyes!

3. Align sensor and lock in place
4. Push button 'A' to turn off laser
5. Unscrew LST from front of sensor

To Change Battery

1. Unscrew two halves of LST
2. Remove battery
3. Replace battery with Lithium 1/2 AA 3.6 V battery
4. Reassemble LST

Please note: The battery must be capable of providing a discharge current of at least 40 mA.

Laser Sighting Tool (LST)

MATERIAL ALUMINIUM

FINISH BLACK ANODISED

All dimensions in mm