

3 YEAR
WARRANTY

Ω OMEGA™

User's Guide



**Shop online at
*omega.com***

e-mail: *info@omega.com*
**For latest product manuals:
*www.omegamanual.info***

HH931T, HH932T **Data Thermometer**



omega.com info@omega.com

Servicing North America:

**U.S.A.
Headquarters:**

Omega Engineering, Inc.

Toll-Free: 1-800-826-6342 (USA & Canada only)

Customer Service: 1-800-622-2378 (USA & Canada only)

Engineering Service: 1-800-872-9436 (USA & Canada only)

Tel: (203) 359-1660

Fax: (203) 359-7700

e-mail: info@omega.com

For Other Locations Visit omega.com/worldwide

Table of Contents

TABLE OF CONTENTS

1. Instrument Description.....	1-1
1.1 Specifications.....	1-1
1.2 Optional Accessories and Ordering Information.....	1-3
1.3 OMEGA Family of Thermometers.....	1-3
2. Preparation for Use.....	2-1
2.1 General Information.....	2-1
2.2 Feature Overview.....	2-1
2.3 Safety Notices and Information.....	2-2
2.4 Unpacking and Inspection.....	2-4
2.5 Battery Installation and Replacement.....	2-4
2.6 Making Your First Temperature Measurement.....	2-5
2.7 Recording Temperature Data.....	2-6
3. Operating Instructions.....	3-1
3.1 Keypad Functions.....	3-1
3.2 LCD Display.....	3-2
3.3 Setup Menu.....	3-3
3.4 View Modes and Statistics.....	3-4
3.5 Auto-Power Off.....	3-6
3.6 Backlight and Backlight Timeout.....	3-6
3.7 Hold Function.....	3-7
3.8 Trend Indicators.....	3-7
3.9 Battery Indicator.....	3-7
3.10 Probe Offset.....	3-8
3.11 Open Lead Detection Enable/Disable (SN 001201 and above only).....	3-9
3.12 Clear Function.....	3-10
3.13 Real-Time Clock.....	3-10
3.14 Measurement Data Collection Overview.....	3-10
3.15 Measurement Data Collection Configurations.....	3-10
3.16 Measurement Acquisition Interval.....	3-11
3.17 Internal Memory.....	3-12
3.18 Manual Measurement Storage.....	3-12
3.19 Automatic Measurement Storage.....	3-12
3.20 Recall Saved Measurement Data.....	3-13
3.21 Invalid Measurement Indications.....	3-13
4. Service Information.....	4-1
4.1 Inspection and Cleaning.....	4-1
4.2 Calibration.....	4-1
4.3 Troubleshooting.....	4-6
4.4 Diagnostic Routines and Error Codes.....	4-7
4.5 Memory Sterilization.....	4-8
A. Required Equipment.....	A-i
B. Expanded Instrument Uncertainties.....	B-i
C. Instrument Verification Data Sheet.....	C-i

Trademark Acknowledgments

The *Bluetooth*[®] word, mark, and logos are registered trademarks owned by Bluetooth SIG, Inc. and use of such marks by OMEGA, Inc. is under license. Android[™] and Google Play[™] are trademarks of Google Inc. Apple, iPhone, iPad, and iTunes are trademarks of Apple Inc.



Compliance





FCC Notice: Contains Panasonic Transmitter Module ENW89846A1KF, FCC ID: J7V1740.

1. INSTRUMENT DESCRIPTION

1.1 Specifications

GENERAL SPECIFICATIONS:			
Basic Accuracy	$\pm(0.04\% \text{rdg} + 0.3\text{ }^{\circ}\text{C})^1$		
Conformity	ITS-90		
Temperature Ranges	°C	°F	K
K	-200 to 1372	-328 to 2502	73 to 1645
J	-210 to 1200	-346 to 2192	63 to 1473
T	-250 to 400	-418 to 752	23 to 673
E	-250 to 1000	-418 to 1832	23 to 1273
B	600 to 1820	1112 to 3308	873 to 2093
N	-200 to 1300	-328 to 2372	73 to 1573
R	0 to 1760	32 to 3200	273 to 2033
S	0 to 1760	32 to 3200	273 to 2033
Connector Type	One (1) Mini-TC (HH931T)	Two (2) Mini-TC (HH932T)	
Probe Zero Function	Resolution 0.1 °C/°F/K		
Display	Four (4) digit LCD, with Temperature, Units, Function, Trend, Polarity, Battery, Data, Real-time Clock, and Decimal Indicators		
Display Backlight	Four (4) LED Backlight with 30-second timeout		
Display Resolution	0.1 (-99.9 to 999.9 °)	1 ° (< -99.9 °, > 999.9 °)	
Reading Rate	3 / Second for Readings and Trend Indicators		
Battery Type	3 AA (IEC LR6, ANSI 15) Alkaline		
Battery Life	1000 Hours Typical		
Battery Indicator	Four (4) Stage Battery Charge Indicator		
Statistics	Minimum Reading Maximum Reading Average Reading	Reading Range Standard Deviation T1–T2 (HH932T Only)	
Keypad	Twelve (12) momentary switches with audible and tactile feedback		
Clock	Real-Time Clock and Elapsed Statistics Run Time		
Power Cycle Configuration Retention	Instrument retains:		
	- Sensor Type - Temperature Unit - Offset Values	- Saved Measurements - Real-Time Clock	
Input Current	$\pm 50\text{ nA}$		

Instrument Description

Maximum Common Mode Voltage	42 V peak to earth	1 V p-p between T1 and T2	
Compliance	CE (2014/30/EU) / RoHS2 (2011/65/EU)		
ESD	IEC 61000-4 2:2009, Class B		
EMC	EN 55022:2010+A1:2015, Class A; EN 61000-4 3:2006+A2:2010, 10 V/m (80 MHz to 1 GHz)	MIL-PRF-28800F, Class 2	
DATA STORAGE AND COMMUNICATION			
Communication	<i>Bluetooth</i> [®] low energy technology / version 4.0		
Communication Range	10 m	30 ft	
Transmitter FCC ID	J7V1740		
Internal Data Storage	Last 1000 Measurements with Time Stamp		
Storage Modes	Automatic and Manual		
Remote Operation	Android™ and Apple Mobile Device Applications		
Internet Data Collection	Via OMEGA Thermometer Link™ mobile app and OMEGA Data Cloud™ data storage system		
Mobile Compatibility	Device	Operating System	
Android	 Devices with <i>Bluetooth</i> low energy technology / version 4.0 support	Android 4.3 or higher	
Apple		iPhone 4S or newer	iOS 5.0 or higher
		iPad 3 or newer	iOS 5.1 or higher
 <small>Omega Thermometer Link</small>			
OMEGA Data Cloud Requirements	PC or Mac OS computer with internet connection		
Data Storage Rate	User programmable		
	Local Storage	1 second minimum interval	
	Mobile and Cloud Storage	5 second minimum interval	
ENVIRONMENT:			
Standards	MIL-PRF-28800F, Class 2	UL 60079-0 § 26.4.2	
Operating Temp	-20 to 55 °C	-4 to 131 °F	
Temperature Coefficient	For specification variances due to ambient operating temperature, see the Expanded Instrument Uncertainty charts in <i>Appendix B</i> of this manual. For ambient operating temperatures not shown in <i>Appendix B</i> , accuracies shall be interpolated linearly.		
Humidity	<10 °C (50 °F): Non-condensing 10 to 30 °C (50 to 86 °F): 5 to 95% RH 30 to 40 °C (86 to 104 °F): 5 to 85% RH		

Instrument Description

	40 to 55 °C (104 to 131 °F): 5 to 60% RH	
Altitude	0 to 4600 m	0 to 15,092 ft
Vibration	Random 10 – 500 Hz, 0.03 g ² /Hz	
Shock	30g Half Sine	
Drop	4 Drops from 1 m to Concrete	
Storage Temp	-40 to 71 °C	-40 to 159 °F
PHYSICAL CHARACTERISTICS:		
Dimensions	193 x 84 x 28 mm	7.6 x 3.3 x 1.1 in
Weight (incl. Batteries)	HH931T: 301.2 g (10.6 oz.)	HH932T: 303.6 g (10.7 oz.)
¹ For complete instrument accuracies, see the Expanded Instrument Uncertainty charts in <i>Appendix B</i> of this manual.		

1.2 Optional Accessories and Ordering Information

PRODUCT	MODEL	DESCRIPTION
Thermocouple Probes		Visit OMEGA.com for available thermocouple probes
Printed Manual	M5612/1217	Operation Manual
Manual Translations		Chinese, Dutch, French, German, Japanese, Korean, and Spanish (download at OMEGA.com)

1.3 OMEGA Family of Thermometers

Thermocouple Thermometers	HH911T	Thermocouple Thermometer, Single Input
	HH912T	Thermocouple Thermometer, Dual Input
Data Thermometers	HH931T	Data Thermometer, Single Input
	HH932T	Data Thermometer, Dual Input

2. PREPARATION FOR USE

2.1 General Information

The OMEGA HH931T and HH932T Data Thermometers are high-accuracy handheld digital thermometers that provide accurate temperature readings in a wide range of manufacturing and service applications. With wireless communication to your mobile device and the OMEGA Data Cloud™, maintaining a record of your critical temperature data is easier, more efficient, and more accurate than ever before. These full-featured, durable, and versatile instruments simplify the process of temperature measurement through an intuitive user-interface. They are compatible with eight NIST-traceable thermocouple types: B, E, J, K, N, R, S, and T.

2.2 Feature Overview

- Data collection, storage, and analysis via OMEGA Data Cloud
- Two-way communication and control with the OMEGA Thermometer Link™ mobile app for Android™ and Apple mobile devices
- *Bluetooth*® low energy wireless technology
- Internal storage of up to 1000 measurements with time stamp
- 1000-hour battery life¹
- Four (4) digit dual LCD with LED Backlight
- All eight (8) NIST-traceable thermocouple types: B, E, J, K, N, R, S, and T
- Comprehensive real-time statistics: MIN, MAX, AVG, RNG, STDEV, and T1-T2²
- Easy to clean
- Probe offset function to minimize probe error
- 0.1° / 1 ° display resolution
- °F, °C, and K temperature units
- Reading HOLD mode
- Conforms to ITS-90 thermocouple tables
- Durable: Meets MIL-PRF-28800F, Class 2 requirements
- Tilt Stand/Magnet/Hanger

¹ Typical battery life under normal use conditions in laboratory environment. Continuous or repeated use of features such as the backlight, maintaining an active *Bluetooth* connection for extended periods, or use or storage at high or low temperature extremes may reduce battery life.

² T1-T2 is available on model HH932T only.

2.3 Safety Notices and Information

Symbols and Terms

Safety Notices denote hazards. They indicate an operating procedure, instruction, or practice that, if not correctly performed or followed, could result in damage to equipment, or injury or death to personnel. Do not proceed beyond a Safety Notice until all conditions and instructions are fully understood and complied with.



WARNING denotes a hazard that *could* result in injury to personnel or death.



CAUTION denotes a hazard that *could* result in damage to the unit or other equipment.



REMINDER denotes important information about instrument functions, menus, and measurements.

Instrument Safety Notices



MAINTENANCE INSTRUCTIONS WITHIN THIS MANUAL ARE FOR USE BY QUALIFIED SERVICE PERSONNEL ONLY. DO NOT ATTEMPT TO SERVICE THIS UNIT UNLESS YOU ARE QUALIFIED TO DO SO.

SHOCK HAZARD

Disconnect all temperature probes and turn the unit off before removing the battery cover.

Never connect thermocouple leads to any source where more than 42 Volts (peak) could exist between the lead and ground. If it is necessary to make measurements of an object at elevated electrical potential, the user is responsible for obtaining and properly using a probe that provides adequate insulation between the surface with elevated potential and the thermocouple wiring.

Always disconnect probe leads before opening the battery door or the instrument housing. Internal circuits can present a shock hazard if leads are connected to a source of elevated potential.

Do not use this instrument if the housing, probe wiring, probe, or probe handle are damaged or distorted. Housings and wire insulation are part of the personnel protection system, and if damaged could expose users to elevated potentials.

EXPLOSION HAZARD

Never use or store this product with batteries installed, or change batteries, in an environment where explosive or flammable vapors or dust suspensions may exist.

Do not attempt to recharge alkaline batteries.

Do not put batteries into bags designed to protect parts from electrostatic discharge (ESD). These bags are specially designed with metal shielding which can short circuit a battery.

Do not expose batteries to extreme heat or fire. Observe all regional laws and regulations when disposing batteries.

Never use this instrument or any temperature probe or sensor inside a microwave oven.

Preparation for Use

BURN HAZARD

Do not touch a temperature probe sheath that has been exposed to toxic substances or extremely high or low temperatures.

Do not attempt to measure temperatures beyond the range of the temperature probe. Probe damage or personal injury could result from exceeding a probe's maximum temperature rating.

CAUTION

RISK OF INCORRECT READING

Do not use when AC or DC voltages in excess of 1V exist between thermocouple channels (on instruments with more than one channel). Excessive voltage could result in an incorrect reading, or in more extreme cases, a blown fuse that will result in incorrect readings and need for repair.

RISK OF INSTRUMENT DAMAGE

Only replace batteries with size AA (IEC LR6, ANSI 15). Observe proper polarity when installing batteries. Do not mix old and new batteries.

Do not apply voltages across thermocouple leads in excess of normal thermocouple voltage for the selected range. Excessive input voltage could result in blown fuse, component damage, or fire. Application of excessive voltage is not covered by the warranty.

Avoid making sharp bends in probe or sensor lead wires. Bending lead wires at sharp angles can damage the wire and cause probe failure.

When using both thermometer inputs and a voltage differential exists between the two measurement points, at least one probe should be electrically insulated. If not, a ground-loop current can flow through the thermocouple leads causing measurement error or instrument damage.

Static discharge through a connected temperature probe may cause instrument damage. Use care to avoid static discharge when handling the instrument or connected probes.

2.4 Unpacking and Inspection

Each instrument is electrically and mechanically inspected before shipment. Upon receiving your new OMEGA Data Thermometer, unpack all items from the shipping container and check for any obvious damage that may have occurred during transit. Use the original packing materials if reshipment is necessary.

If any dents, broken, or loose parts are seen, do not use the equipment. Notify OMEGA immediately.

Check that all items are present. If any items are missing, notify OMEGA immediately.

The following items are included with every new instrument:

- One (1) Data Thermometer;
- One (1) Quick Start Guide;
- Statement of Traceability;
- Three (3) AA, 1.5 V batteries;
- One (1) Tilt Stand/Magnet/Hanger; and
- HH911T-070 Type K Wire Probe (quantity One (1) for HH931T, Two (2) for HH932T).
- Optional accessories (if purchased).

2.5 Battery Installation and Replacement

Three (3) AA 1.5 V batteries are supplied with the instrument, but not installed. Read the following battery replacement instructions before attempting to install or remove the batteries.

CAUTION

Always turn the instrument off and disconnect any input connections before replacing the batteries. Re-install the battery compartment cover before resuming use of the instrument.

CAUTION

The battery compartment is sealed with a rubber gasket. Use care to not damage the gasket when removing or installing the battery compartment cover.

CAUTION

Remove the batteries when storing the instrument for an extended period of time or in a high temperature environment to prevent battery leakage and possible damage to the instrument.



All measurement parameters may be reset to factory default if batteries are removed while the instrument is powered on. Always turn the instrument off before changing batteries.

To install or replace batteries:

Required Tools: Phillips Head Screwdriver

1. Identify the battery compartment located on the back of the instrument (see *Figure 1 below*);
2. Remove the two (2) battery compartment retaining screws;
3. Remove the battery compartment cover;

4. If present, carefully remove old batteries being careful to not damage the battery contacts;
5. Observing proper polarity, install three (3) new, AA alkaline (IEC LR6, ANSI 15) batteries;
6. Re-install the battery cover and two (2) retaining screws;
7. At initial power on after battery replacement, allow approximately 30 seconds for instrument to stabilize.

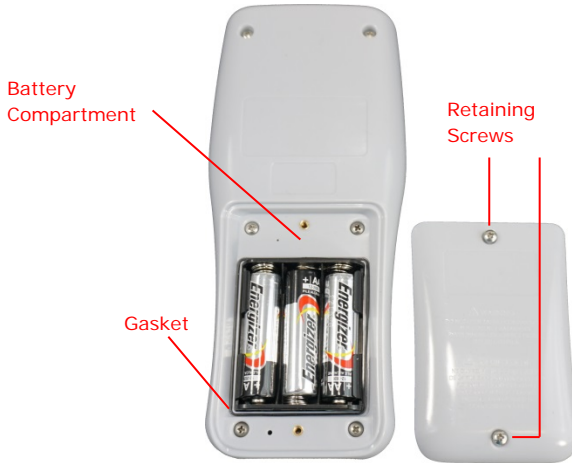


Figure 1: Battery Installation

2.6 Making Your First Temperature Measurement


OMEGA's 900 Series Data Thermometers are designed for easy operation, while still providing a feature-rich experience via the intuitive user interface.

To get started making temperature measurements right away, follow these steps:











1. Perform *Section 2.5, Battery Installation and Replacement*;
2. Connect a compatible temperature probe to the Channel 1 and/or Channel 2 input connector located at the top of the instrument;



To ensure best measurement accuracy, allow several minutes for the thermocouple probe and connector to thermally stabilize after connection to the instrument.

3. The instrument will immediately display a temperature measurement for the connected channels. However, to ensure valid and best accuracy measurements, continue to Step 4 below;
4. Set the desired measurement parameters as follows:
 - a. Enter the Setup Menu by pressing , hold the key down for approximately 1.5 seconds, and then release it;

Preparation for Use

- b. The active thermocouple type is flashing on the display. Use   to select the thermocouple type of the connected temperature probe (B, E, J, K, N, R, S, or T);
- c. Momentarily (do not hold) press  to save your selection and move to the next parameter;
- d. The active temperature unit is flashing on the display. Use   to select the desired temperature unit (°C, °F, or K);
- e. Momentarily press  to save your selection and move to the next parameter;
- f. Channel 1 probe offset value is flashing on the display. If the temperature probe's offset value is known, press   to set the Channel 1 probe offset to the probe's offset value. See *Section 3.10, Probe Offset*, for more information.
- g. Momentarily press  to save your selection and move to Channel 2 probe offset (if equipped);
- h. If desired, repeat Step (f) above for Channel 2;
- i. Momentarily press  to save your selection and exit the setup menu.

2.7 Recording Temperature Data

The OMEGA Thermometer Link mobile application provides convenient two-way communication between your OMEGA Data Thermometer and compatible *Bluetooth* low energy technology / version 4.0 mobile devices. OMEGA Thermometer Link duplicates the Data Thermometer display for easy monitoring from up to 30 feet away, and provides real-time measurement charting for both channels. See *Figure 2* below for a description of the OMEGA Thermometer Link user interface.

OMEGA Thermometer Link is also the gateway to the OMEGA Data Cloud™ (hhthermocloud.omega.com), where you can save, store, review, analyze, and download, all your measurement data. Once created, your OMEGA Data Cloud account can be personalized to meet your organization's needs with user-created locations, custom data filtering, and measurement charting.

Both OMEGA Thermometer Link and OMEGA Data Cloud are provided free to OMEGA customers for use with OMEGA Data Thermometers. If your organization has specific or unique data storage, interface, or security requirements, please contact OMEGA to discuss customization options.




		Open or close the mobile app menu
	Interface	View real-time measurement data
		Control most Data Thermometer features
	Logging	View instrument connection state, model, serial number, and the active user account and location
		Manually record a temperature measurement
	Chart	Real-time chart of current temperature measurement for each active channel
	Clock	View instrument connection state and current mobile device date and time
		Manually set instrument date and time from user-input date and time
		Automatically set instrument date and time from mobile device time
	Pairing	View available Data Thermometers
		Pair mobile device to Data Thermometer
Clear pairing to a paired Data Thermometer		
Account	View or change current account information	
Create Account	Create a new user account on the OMEGA Data Cloud	

Figure 2: OMEGA Thermometer Link User Interface Description

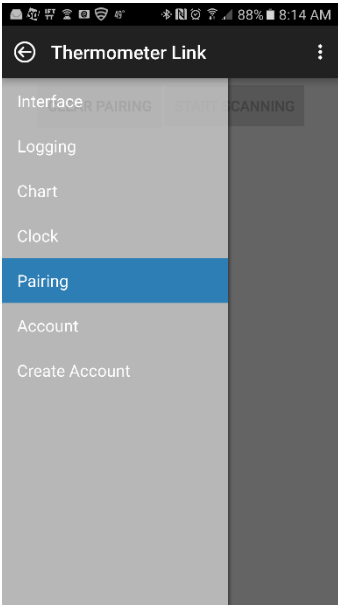To connect to the OMEGA Thermometer Link mobile app using the default account:



OMEGA Thermometer Link is initially set to save data to a default OMEGA Data Cloud account, the “OMEGAUser” account. This is a public account accessible by all OMEGA Data Thermometer users, and should not be used to store production measurement data. Before saving critical or sensitive temperature data, create a personalized account with a strong password through OMEGA Thermometer Link or at hhthermocloud.omega.com.

1. Before beginning, ensure your mobile device is *Bluetooth* low energy technology / version 4.0 compatible and has an active internet connection;
2. Visit the Google Play™³ store or iTunes and search for “OMEGA” to download OMEGA Thermometer Link;
3. Install the mobile app to your device and accept the license agreement and permissions requests;
4. Verify that *Bluetooth* wireless communication is active on your mobile device;


³ China customers may download the OMEGA Thermometer Link from 360 Mobile Assistant, Baidu App Store, or Tencent App Store.

Preparation for Use

5. On your Data Thermometer, press  to turn *Bluetooth* wireless communication on;






The display *Bluetooth* icon is flashing, indicating the instrument is in pairing mode.

6. In OMEGA Thermometer Link, touch  and select **Pairing**;
7. In the displayed list of available instruments, touch the entry that corresponds to your Data Thermometer's MAC address (located on back of instrument) and touch **Yes** in the resulting dialogue box;



The display *Bluetooth* icon is steadily illuminated, indicating the instrument is paired to the mobile device.

8. Touch  and select **Interface** to monitor real-time temperature measurements and to remotely control your Data Thermometer;
9. Touch  in OMEGA Thermometer Link, or press  on your Data Thermometer, to begin automatic data collection at the programmed measurement acquisition interval (default is 10s).

To access the OMEGA Data Cloud and view saved measurement data:

1. Go to hhthermocloud.omega.com;
2. Click **Login**;
3. Click **Login** to accept the pre-filled user name and password and access the default "*OMEGAUser*" account;



If a personalized user account has already been created for your organization, enter the appropriate username and password to access that account.

4. Click **View Data** to access your saved measurement data;
5. Click **Select Device** and choose your Data Thermometer's serial number from the drop-down list;
6. Click **Create Chart** to display your saved measurement data.

Congratulations! You're now ready to make accurate and reliable temperature measurements, wherever and whenever you may need to.

We know you are eager to begin using your new thermometer, but this overview is just the beginning. Please take a moment to familiarize yourself with this Operation Manual to learn about all the features and benefits of your new OMEGA Data Thermometer.

3. OPERATING INSTRUCTIONS

3.1 Keypad Functions

The instrument keypad is a twelve (12) key, sealed membrane keypad. Each key provides audible and tactile user feedback when pressed. Key functions are described in *Figure 3* below.

		Power instrument ON or OFF
	(1.5s)	Disable auto-power OFF
	(1.5s)	Enter instrument Setup Menu
		While in Setup Menu, save current value and step to next parameter
		Toggle display backlight
	(1.5s)	Disable backlight 30-second timeout
		Hold currently displayed measurement and pause statistics collection
	(1.5s)	Delete all saved measurement data and reset all statistics currently stored in memory
		While in Setup Menu, discard all unsaved changes and exit menu
	Cycle through view modes and statistics	
	While in Setup Menu, save changes and exit menu	
	Initiate or stop automatic data collection	
	Manually store the current measurement and time stamp	
	Review saved measurement data and time stamps	
	Activate <i>Bluetooth</i> connection pairing mode	
	Turn wireless communication OFF	
	While in Setup Menu, advance or reverse selected setting	
	While viewing saved data, advance or reverse displayed measurement	

Figure 3: Keypad Button Functional Description

The , , , and keys have multiple functions which can be accessed by momentarily pressing the key, or alternatively, by pressing and holding the key for approximately 1.5 seconds. Throughout this Operation Manual, the press and hold sequence is indicated by the key designator followed by the subscript (1.5s). For instance, (1.5s) indicates that the key should be pressed and held for 1.5 seconds, then released to access the desired function.

3.2 LCD Display

The display is a large, easy to read, dual LCD display, with an LED backlight for clear viewing in low-light conditions. It simultaneously displays temperature measurements for Channel 1 and Channel 2, current thermocouple type and temperature unit, trend indicators for both Channel 1 and Channel 2, and a battery voltage indicator.

In Statistics View, the display substitutes the Channel 2 temperature measurement with the active statistic result, and displays an active statistic mode indicator and the elapsed time of the current statistic session. See *Figure 4* below for further description of each display indicator.

<p>The diagram shows a dual LCD display with the following elements and callouts:</p> <ul style="list-style-type: none"> 1: HOLD 2: OFFSET 3: B E J K N R S T 4: Battery level indicator 5: T1 6: Channel 1 trend indicators (▲ ▼) 7: Channel 1 temperature measurement (93.2) 8: T1-T2 9: Channel 2 indicator 10: Channel 2 trend indicators (▲ ▼) 11: Channel 2 temperature measurement (103.2) 12: Active temperature unit (°C, °F, K) 13: DATA 14: MIN MAX AVG RNG STDEV 15: 23:54:19 16: CLK INT RCL 17: Bluetooth symbol 	<table border="1"> <tbody> <tr> <td>1</td> <td>HOLD function is active</td> </tr> <tr> <td>2</td> <td>T1 and/or T2 OFFSET is active¹</td> </tr> <tr> <td>3</td> <td>The active thermocouple type</td> </tr> <tr> <td>4</td> <td>Remaining battery life</td> </tr> <tr> <td>5</td> <td>Channel 1 indicator</td> </tr> <tr> <td>6</td> <td>Channel 1 trend indicators</td> </tr> <tr> <td>7</td> <td>Channel 1 temperature measurement</td> </tr> <tr> <td>8</td> <td>T1-T2 temperature measurement indicator²</td> </tr> </tbody> </table>	1	HOLD function is active	2	T1 and/or T2 OFFSET is active ¹	3	The active thermocouple type	4	Remaining battery life	5	Channel 1 indicator	6	Channel 1 trend indicators	7	Channel 1 temperature measurement	8	T1-T2 temperature measurement indicator ²
1	HOLD function is active																
2	T1 and/or T2 OFFSET is active ¹																
3	The active thermocouple type																
4	Remaining battery life																
5	Channel 1 indicator																
6	Channel 1 trend indicators																
7	Channel 1 temperature measurement																
8	T1-T2 temperature measurement indicator ²																
9	Channel 2 indicator ²																
10	Channel 2 trend indicators ²																
11	Channel 2 temperature measurement ² T1-T2 measurement result ² , or active statistic result																
12	Active temperature unit																
13	Automatic data collection active																

Figure 4 continued on next page . . .

14	Active statistic
15	Real-time Clock
	When viewing statistics, time elapsed since start of statistics collection
	When reviewing saved data, alternates between displayed data time and date stamp
16	Real-time clock mode indicator
17	Flashing: <i>Bluetooth</i> connection pairing mode
	Solid On: <i>Bluetooth</i> connection active

¹ T2 Probe Offset available on model HH932T only.

² Model HH932T only.



Figure 4: LCD Display Description





The LCD can display error information about the current measurement, as shown in Figure 5.


DISPLAY	DESCRIPTION
OPEn	No thermocouple probe is connected
-Or-	The applied temperature is greater than the maximum temperature for the selected thermocouple type
-Ur-	The applied temperature is less than the minimum temperature for the selected thermocouple type




Figure 5: LCD Error Indications

3.3 Setup Menu

 Key designators followed by (1.5s), e.g. , indicate that the key should be pressed and held for 1.5 seconds, then released to access the desired function.

Measurement settings are configured in the Setup Menu. Press  to access the Setup Menu. From within the Setup Menu, press  to step through the user-definable parameters and the   keys to advance or reverse the selected value for the active parameter. The active parameter value will flash on the display.






To enter the Setup Menu, press . The active parameter value will flash on the display. To differentiate between the date and real-time clock parameters when the date parameter is active, the **CLK** indicator is lit. When the real-time clock parameter is active, the **CLK** indicator is flashing.

Press  to save a setting and step to the next parameter. Press  to save a setting and exit the Setup Menu. Press  to disregard unsaved changes and exit the Setup Menu. If no key is pressed for 10 seconds, the current configuration is saved and the instrument will exit the Setup Menu.

Operating Instructions

 

Figure 6: Setup Menu Parameters and Values lists the user-definable parameters and the available values for each parameter.

To set a parameter value:

1. Press  to enter the Setup Menu;
2. Press  to cycle through parameters as shown in Figure 6: Setup Menu Parameters and Values until the desired parameter is reached;
3. To change the value of the current parameter, press  .
4. To save the current parameter value and cycle to the next parameter, press .

PARAMETER	AVAILABLE VALUES
Thermocouple Type	E, J, K, T, B, R, N, S
Temperature Units	°C, °F, K
T1 Probe Offset	±0.1 ° increments
T2 Probe Offset ⁴	
Date	Valid date on or after 01 01 16 (mm dd yy)
Real-Time Clock	Any valid 24-hour time (hh mm ss)
Measurement Acquisition Interval	Minimum 1 s (hh mm ss)
Open Lead Detection	ON, OFF

Figure 6: Setup Menu Parameters and Values

5. To save the current parameter value and exit the Setup Menu, press .
6. To disregard changes made to the current parameter value and exit the Setup Menu, press .



Instrument date and time may also be set using the OMEGA Thermometer Link mobile app (see Figure 2, page 2-7).



While in the Setup Menu, the **CLK** indicator will flash on and off when the date parameter is active, and remain on when the real-time clock parameter is active.



If no key is pressed for 10 seconds, the instrument will save the current configuration and exit the Setup Menu.

3.4 View Modes and Statistics


The instrument features multiple view modes including a variety of real-time statistics, all available at the touch of a button. Figure 7 below describes each view mode.

⁴ T2 Probe Offset available on model HH932T only.

VIEW MODE	DISPLAY INDICATOR	DESCRIPTION
T1-T2	T1-T2	Current Channel 1 measurement – current Channel 2 measurement
Minimum	MIN	Minimum temperature recorded during current session
Maximum	MAX	Maximum temperature recorded during current session
Average	AVG	Average of all temperatures recorded during current session
Range	RNG	Maximum - Minimum
Standard Deviation	STDEV	Standard deviation of all temperatures recorded during the current session ¹ .




¹ Standard Deviation is calculated using the population formula: $\sigma = \sqrt{\frac{\sum(x-\mu)^2}{N}}$


Figure 7: View Modes and Statistics


Press  to change view modes. For each mode, the active measurement or statistic result is displayed on the second line of the display.



The T1-T2 view mode displays the current Channel 1 measurement minus the current Channel 2 measurement. The display indicates **T1-T2** at the left side of the display. If either channel is not connected to a probe, or the current measurement on either channel is over- or under-range, T1-T2 view mode is not available.

When viewing statistics, the active statistic is indicated directly below the result. The elapsed time of the current statistics session is displayed in the lower-left corner of the display.

Statistics are calculated continuously, beginning when the instrument is powered on or when  is pressed. To pause statistics collection temporarily, press . To resume statistics collection, press  again.

It is important to note that changing parameter values or temperature probes will invalidate the current statistics session. When using statistics, always begin by pressing  to delete existing statistics data and initiate a new statistics session.

Press  to step through the available statistics. Statistics are displayed in the order shown in Figure 8 below. For dual-channel models, the LCD T1 or T2 indicators are lit to identify the channel's statistics currently being displayed.


 When using statistics, always begin by pressing  to clear existing statistics results and initiate a new statistics session.




The first line of the display indicates the current Channel 1 temperature, regardless of which view mode or channel's statistic is currently displayed.

MODEL	CHANNEL	STATISTIC VIEW SEQUENCE				
		MIN	MAX	AVG	RNG	STDEV
HH931T	T1	MIN	MAX	AVG	RNG	STDEV
HH932T	T1	MIN	MAX	AVG	RNG	STDEV
	T2	MIN	MAX	AVG	RNG	STDEV

Figure 8: Statistics Sequence


If the instrument records invalid measurement data during the statistics session such as an over-range, under-range, or open input value,  will be displayed for each affected statistic result.

To return to the active measurement mode, press  repeatedly to step through the remaining view modes, or cycle power.

3.5 Auto-Power Off




Key designators followed by (1.5s), e.g.  (1.5s), indicate that the key should be pressed and held for 1.5 seconds, then released to access the desired function.



To conserve battery life, the instrument automatically turns off if no key is pressed for 20 minutes. To disable this feature, press  (1.5s). The remaining battery life indicator will flash once, indicating auto-power off is disabled.

Auto-power off will remain disabled until instrument power is cycled. At next power on, auto-power off returns to the default enabled condition.

While data collection is active, the auto-power off feature is automatically disabled to ensure uninterrupted data collection.


3.6 Backlight and Backlight Timeout

The instrument includes an LED backlight feature to ensure measurement data can be easily read in low-light conditions. To activate the backlight, press .


Once the backlight is activated, it will automatically turn off after 30 seconds if no key is pressed to preserve battery life. To disable the backlight timeout feature, press  (1.5s). The backlight will flash to indicate the timeout feature has been disabled. To re-enable the backlight timeout feature, turn the backlight off then on by pressing  twice.

The backlight feature cannot be activated or deactivated from the OMEGA Link mobile app.

3.7 Hold Function

Press  to hold the current reading and/or statistics result, and to pause statistics accumulation. **HOLD** is displayed at the top-left of the LCD display. New measurements are not displayed, trend indicators are not refreshed, and statistics are not calculated while the hold function is active.

While the hold function is active, both automatic and manual data collection features remain available. Both methods continue to collect real-time temperature measurements, regardless of the measurement data displayed while hold is active.

To disable the hold function and resume normal operation and statistics data accumulation, press  again.

3.8 Trend Indicators

Trend indicators provide a visual representation of the measurement's stability, and separate indicators are provided for each channel. An up arrow indicates that the current measurement is trending upwards, while a down arrow indicates the measurement is trending downwards. Neither arrow is visible when the measurement is stable. For best accuracy, always allow the measurement to stabilize before evaluating or recording the measured temperature.

3.9 Battery Indicator



Battery depletion or battery replacement will reset all measurement parameters to their default values and deletes all existing statistics data. After battery replacement, set measurement parameters as required.

The battery voltage indicator provides a visual representation of approximate remaining battery life. It is located at the top-right of the display.

The battery voltage indicator uses three bars to represent remaining battery life. *Figure 9* shows the approximate battery life for each bar.

At zero (0) bars, the instrument will momentarily display **bATT** and initiate a shutdown sequence. To prevent disruption of the measurement process and statistics and data collection, the batteries should be replaced before the battery voltage indicator reaches zero (0) bars. See *Section 2.5, Battery Installation and Replacement*.

BARS	APPROX. BATTERY LIFE
3	100% - 50%
2	50% - 20%
1	20% - 5%
0	0% - Shutdown Initiated

Figure 9: Battery Voltage Indicator

3.10 Probe Offset

The probe offset feature compensates for temperature probe errors, significantly improving overall measurement uncertainty. Probe offset can be set for Channel 1 and 2 individually. Once set, the probe offset is automatically applied to all subsequent measurements and statistics on the offset channel.



Current statistics will be invalidated after changing settings such as probe offset. Press **CLR** (1.5s) to delete existing statistics data and initiate a new statistics session.



Probe offset rounding errors may occur if temperature units are changed while a probe offset is active. When using a probe offset, verify and if necessary correct the programmed probe offset after changing temperature units.

To set the probe offset when using an un-calibrated temperature probe:

1. Connect the temperature probe to Channel 1 or Channel 2 (as desired) of the instrument;
2. Place the probe into a known temperature reference such as a thermowell or ice bath⁵;
3. Allow the temperature probe to stabilize in the ice bath or thermowell by observing the instrument trend indicators for the appropriate channel;
4. Press **SET** (1.5s) to enter the Setup Menu;
5. Press **SET** three (3) times to cycle to the Channel 1 Offset parameter;
6. Observe the current Channel 1 temperature measurement displayed on the top measurement line of the display, and current offset value displayed on the second line of the display;
7. Press **▲▼** to set the offset in 0.1 ° increments until the displayed temperature equals the known temperature reference value;
8. Press **SET** to save the offset value and proceed to Channel 2 offset (HH932T only), or press **VIEW** to save the offset value and exit the Setup Menu.
 - a. Alternatively, to disregard the new offset value and exit the Setup Menu, press **CLR**.
9. **OFFSET** is displayed at the top-left of the LCD display.



Neither trend indicator is displayed when the temperature measurement has stabilized.

⁵ Probe offset measurement using an ice bath or thermowell should only be performed by personnel trained and qualified in the use of such instruments and related metrology methods.

Operating Instructions

To set the probe offset when using a calibrated temperature probe with a known offset:

1. Press **SET** (1.5s) to enter the Setup Menu;
2. Press **SET** three (3) times to cycle to the Channel 1 Offset parameter;
3. Observe the current offset value displayed on the second line of the display;
4. Press **▲▼** to set the offset in 0.1 ° increments until the displayed offset value equals the calibrated probe offset value;
5. Press **SET** to save the offset value and proceed to Channel 2 offset (HH932T only), or press **VIEW** to save the offset value and exit the Setup Menu.
 - a. Alternatively, to disregard the new offset value and exit the Setup Menu, press **CLR**.
6. **OFFSET** is displayed at the top-left of the LCD display.

3.11 Open Lead Detection Enable/Disable (SN 001201 and above only)

Open Lead Detection allows the unit to detect if a thermocouple probe is connected to the thermometer. This feature is not compatible with some thermocouple calibrators and can result in measurement instability.

Disabling Open Lead Detection in these situations can significantly improve reading stability. Once disabled, Open Lead Detection will remain disabled until changed by following the below steps, or the instrument is powered off.



If no thermocouple probe is connected and Open Lead Detection is disabled, the unit will not indicate OPEN and may display erratic readings.

To change the Open Lead Detection setting:


1. Press **SET** (1.5s) to enter the Setup Menu;
2. Press **SET** four (4) times for HH931T, five (5) times for HH932T, to cycle to the Open Lead Detection parameter;
 - a. **Old** is displayed on Line 1 of the LCD, and the current Open Lead Detection status is displayed on Line 2.
3. Press **▲▼** to change the Open Lead Detection setting;
 - a. ON indicates that Open Lead Detection is enabled;
 - b. OFF indicates that Open Lead Detection is disabled;


4. Press VIEW or SET to save the Open Lead Detection setting and exit the Setup Menu.
 - a. Alternatively, to disregard the Open Lead Detection setting and exit the Setup Menu, press CLR.

3.12 Clear Function

From active measurement or hold mode, press  (1.5s) to clear the statistics registers and begin a new statistics session. The LCD display will indicate **CLr** to confirm the action, and return to active measurement mode.



Pressing  (1.5s) deletes all measurement data currently saved in the instrument's internal memory. To prevent data loss, connect to the OMEGA Thermometer Link mobile app and OMEGA Data Cloud to upload saved data before performing this

From the Setup Menu, press  to disregard changes to the current parameter value and exit the Setup Menu.

3.13 Real-Time Clock

The real-time clock is displayed in the lower-left of the display. In active measurement mode, the clock displays the current time in 24-hour format (hh:mm:ss). See *Section 3.3, Setup Menu* to set the date and clock.

When reviewing saved measurement data, the clock alternates between the currently displayed data point time stamp and date stamp. The **CLK** indicator is lit when the time stamp is displayed, and is off when the date stamp is displayed. When viewing statistics, the clock displays the elapsed time of the current statistics session.

3.14 Measurement Data Collection Overview

The data collection features of the OMEGA Data Thermometers accurately record and store accurate time stamped measurements at the touch of a button. Saved data can be reviewed on the device, or uploaded to the OMEGA Data Cloud via the OMEGA Thermometer Link mobile app.


Measurement data is collected automatically at user-programmed intervals, or manually as desired by the user. All saved measurements can be viewed directly on the instrument, monitored in real-time with the mobile app, or reviewed, analyzed, and downloaded from the OMEGA Data Cloud.

Each saved measurement includes a time and date stamp based on the date and time programmed into the instrument. Through the mobile app and OMEGA Data Cloud, data collection sessions can be associated with user-customizable locations to establish an auditable record for a given asset, product, batch, bin, etc.

3.15 Measurement Data Collection Configurations

Data collection can be accomplished using three distinct configurations to provide the most flexibility and adaptability based on equipment availability and internet or cellular access.

Operating Instructions

If no compatible mobile device is available, measurement data may be collected and stored directly on the Data Thermometer. To manually save a measurement, press  while the measurement of interest is displayed. Up to 1000 time stamped measurements can be saved directly to the instrument.

Measurement data may also be collected and stored via the OMEGA Thermometer Link mobile app, without a connection to the internet and the OMEGA Data Cloud. Once connected to OMEGA Thermometer Link, any saved measurement data stored on the instrument is uploaded, and new saved measurements will be immediately transmitted to OMEGA Thermometer Link. Transmitted measurement data is stored on the mobile device and removed from the instrument.

When both a compatible mobile device and internet access are available, saved measurement data can be uploaded to the OMEGA Data Cloud for long-term storage, review, analysis, and download. See *Figure 10* below.

CONFIGURATION	DESCRIPTION
Data Thermometer	Measurement data stored on thermometer
	Limited to 1000 stored measurements
	Saved measurement data is reviewable on the thermometer
Data Thermometer + OMEGA Thermometer Link	Measurement data is stored on mobile device
	Number of stored measurements limited by available memory on the mobile device
	Real-time measurement monitoring
	When connected, any data stored in the thermometer internal memory is automatically uploaded to mobile device
Data Thermometer + OMEGA Thermometer Link + OMEGA Data Cloud	Measurement data stored on OMEGA Data Cloud
	Measurement data can be reviewed, analyzed, and downloaded from the OMEGA Data Cloud
	When connected, any data stored in mobile device memory is automatically uploaded to the OMEGA Data Cloud

Figure 10: Data Collection Configurations

3.16 Measurement Acquisition Interval

The measurement acquisition interval determines the time interval between saved measurements while in automatic data collection mode. The minimum acquisition interval is 1 second when storing data to the instrument's internal memory. When connected to the OMEGA Thermometer Link mobile app, the minimum supported acquisition interval is 5 seconds. See *Section 3.3, Setup Menu* to set the measurement acquisition interval.


Real-time measurements, trend indicators, and statistics collection are unaffected by the acquisition interval.

3.17 Internal Memory

Up to 1000 measurements may be saved directly to the instrument, including both automatically and manually saved measurements. Once 1000 measurements have been saved, each new saved measurement will replace the earliest measurement stored in memory.

When the instrument is connected to the OMEGA Thermometer Link mobile app, measurement data saved in instrument memory are automatically uploaded to the mobile device and removed from the instrument.


3.18 Manual Measurement Storage

Press  to manually save the current temperature data and time/date stamp. If the instrument is not connected to OMEGA Thermometer Link, the saved measurement data will be stored in the instrument's internal memory. When connected to the mobile app, existing saved data and new saved measurements are automatically transmitted to the mobile device and cleared from the instrument memory.




To avoid data loss, periodically connect to OMEGA Thermometer Link whenever possible to upload saved measurement data to the mobile device or OMEGA Data Cloud. Uploading saved measurement data clears the instrument memory.



If  is pressed while the hold function is active, the current real-time temperature measurement is saved, regardless of the measurement data currently displayed on the display.

3.19 Automatic Measurement Storage

Press  to start automatic measurement data collection. The **DATA** indicator is lit on the display. Measurement data is saved at the programmed measurement acquisition interval. If the instrument is not connected to OMEGA Thermometer Link, saved measurement data will be stored in the instrument's internal memory. When connected to the mobile app, existing saved data and new saved measurements are automatically transmitted to the mobile device and cleared from the instrument memory.




Using automatic measurement collection at fast measurement acquisition intervals while not connected to OMEGA Thermometer Link can quickly consume available instrument memory. To avoid data loss, periodically connect to OMEGA Thermometer Link whenever possible to upload saved measurement data to the mobile device or OMEGA Data Cloud. Uploading saved measurement data clears the instrument







While the hold function is active during automatic measurement storage, the current real-time temperature measurement is saved at each acquisition interval, regardless of the measurement data currently displayed on the display.



Pressing  will exit automatic measurement collection mode.

3.20 Recall Saved Measurement Data

Press  to recall and review measurement data stored in instrument memory. The first saved measurement and time/date stamp is shown on the display. The **CLK** indicator is lit when the time stamp is displayed, and is off when the date stamp is displayed.

Press   to step through the saved measurements. Press  again to return to active measurement mode.

3.21 Invalid Measurement Indications

The LCD display indicates when a measurement or statistic is invalid, as shown in *Figure 11* below.

INDICATION	DESCRIPTION
- Or -	The current measurement or statistic is over-range for the selected thermocouple type
- Ur -	The current measurement or statistic is under-range for the selected thermocouple type
OPEn	No probe is connected or the probe sensor is faulty
-----	Cannot compute a valid statistical result

Figure 11: Invalid Measurement Indications

4. SERVICE INFORMATION

4.1 Inspection and Cleaning

To extend the life of the instrument, inspect and clean the instrument regularly. Inspect the instrument for any significant abrasions, cuts, cracks, dents, or other signs of damage on the case, keypad, and display lens. Inspect the connectors for breaks, dirt, or corrosion. Ensure all screws are securely fastened, and if equipped, that the tilt stand/magnet/hanger is in good condition and locks into position properly.

With all screws securely fastened and the battery compartment cover in place, use a damp cloth or towel to wipe down the instrument. Use care to avoid scratching the display lens. Mild, non-abrasive detergents may be used providing the instrument is then wiped down with a clean damp cloth or towel.

4.2 Calibration

4.2.1 Verification Procedure

1. This procedure shall be performed within environmental conditions of 23 ± 1 °C and 5% to 95% RH.
2. The unit under test ("UUT") shall be acclimated to the controlled environment for a minimum of four (4) hours.
3. The equipment listed in *Appendix A* is required to fully verify the UUT to the expanded instrument uncertainties specified in *Appendix B*.
4. Refer to *Appendix C* for standard measurement points and tolerances for each thermocouple type.
5. One, several, or all the available thermocouple types may be verified as necessary. In the steps below, use the appropriate Thermocouple Cable and Thermocouple Calibrator settings as appropriate for the desired thermocouple type.
6. For two channel UUTs, both channels may be verified concurrently.
7. Set the UUT parameters as shown in *Figure 12* below. Refer to *Section 3.3, Setup Menu* as necessary for UUT parameter setup instructions.

PARAMETER	VALUE
Thermocouple Type	As Desired
Temperature Units	°C
Offset Ch. 1	0.0 °C
Offset Ch. 2 (HH932T only)	0.0 °C
Open Lead Detection Enable/Disable	As Needed (see <i>Section 3.11, Open Lead Detection Enable/Disable</i>)


Figure 12: UUT Verification Parameter Settings

8. Connect the miniature thermocouple connector of the Thermocouple Cable to Channel 1 of the UUT.
 - a. For two channel UUTs using the Split Thermocouple Cable, connect the miniature thermocouple connector of one leg to the UUT Channel 1 input, and the miniature thermocouple connector of the other leg to the Channel 2 input.
9. Connect the opposite end of the Thermocouple Cable (or the single-connector end of the Split Thermocouple Cable) to the Thermocouple Calibrator thermocouple output.
10. Set the Thermocouple Calibrator thermocouple type to the desired thermocouple type.
11. Allow at least five minutes for this connection to stabilize.
12. Set the calibrator to output to the first Standard Value in *Appendix C* for the desired thermocouple type.
13. Record the UUT measurement in the Reading column of *Appendix C* for the appropriate Standard Value.
14. Record the cable correction value for the Thermocouple cable in the Cable Correction column of *Appendix C*.
15. Subtract the Cable Correction value from the Reading and record the result as the Corrected Reading ($Reading - Cable Correction = Corrected Reading$) in *Appendix C*.
16. Compare the Corrected Reading to the tolerances stated in the 2-Sigma Tolerance column of *Appendix C* to determine whether the UUT measurement is within published specifications.
17. Repeat Steps 12 through 16 for each remaining Standard Value in *Appendix C* for the current thermocouple type.
18. Repeat Steps 4 through 17 for each desired thermocouple type.
19. If Open Lead Detection was disabled in Step 4 above, enable the feature as shown in *Section 3.11, Open Lead Detection Enable/Disable*.

4.2.2 Alignment Procedure

Preparation

1. This procedure shall be performed within environmental conditions of 23 ± 1 °C and 5% to 95% RH.
2. The unit under test ("UUT") shall be acclimated to the controlled environment for a minimum of four (4) hours.
3. The equipment listed in *Appendix A* is required to align the UUT to the expanded instrument uncertainties specified in *Appendix B*.
4. Remove the UUT battery door housing to expose the alignment access hole.

5. Press UUT  to turn the UUT on.
6. Set the UUT parameters as shown in *Figure 13* below. Refer to *Section 3.3, Setup Menu* as necessary for UUT parameter setup instructions.


PARAMETER	VALUE
Thermocouple Type	Type E ¹
Temperature Units	°C
Offset Ch. 1	0.0 °C
Offset Ch. 2 (HH932T only)	0.0 °C

¹ Other thermocouple types may be used in this procedure as desired. For instance, if the UUT is used primarily with Type J applications, Cold Junction Compensation may be aligned using Type J. Note however that the expanded instrument uncertainties provided in *Appendix A* assume alignment using Type E.

Figure 13: UUT Alignment Parameter Settings

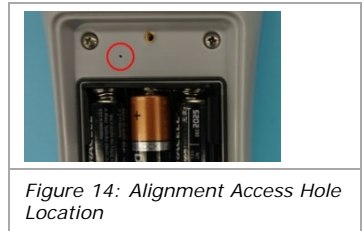7. Insert the Straightened Paper Clip through the alignment access hole and gently press the calibration enable switch located on the circuit board. See *Figure 14* for location.






Voltage Gain and Offset Alignment



8. The UUT display will indicate as follows:
 - a. Line 1: CAL1
 - b. Line 2: mV portion of Channel 1 voltage reading
 - c. Line 3: nV portion of Channel 1 voltage reading
9. Connect the miniature thermocouple connector of the Copper Mini-TC Cable to the Channel 1 input of the UUT.
 - a. For two channel UUTs using the Split Copper Mini-TC Cable, connect one miniature thermocouple connector to the Channel 1 input of the UUT, and the other connector to the Channel 2 input.
10. Connect the opposite end of the Copper Mini-TC Cable (or Split Copper Mini-TC Cable) to the appropriate output connectors of the DC Voltage Source.
11. Allow at least three minutes for the connections to temperature stabilize before proceeding.

CAUTION	Do not apply voltages greater than 80 mV DC to the UUT inputs. Voltages greater than 80 mV may damage the instrument.
----------------	---

12. Set the DC Voltage Source to output the first Applied Voltage value in *Figure 15* below.
13. Allow the DC Voltage source output to stabilize before proceeding.

14. The UUT will display the current voltage reading.
15. Allow the UUT displayed voltage to stabilize before proceeding.
16. Press UUT  to automatically adjust the UUT voltage reading to the Applied Voltage, ± 0.001 mV.
 - a. If the UUT displayed voltage is not within ± 0.001 mV of the Applied Voltage, press   until the UUT displayed voltage is within ± 0.001 mV, adjusting as close to the Applied Voltage as possible.
17. Press UUT . The display will change to rES1 [2, 3 ...] showing the actual measured value saved in the previous step.
18. Press UUT  again. This will increment to the next CAL value.
19. Repeat Steps 12 through 18 for each remaining value in *Figure 15* below. For single channel UUTs, omit Channel 2 values.
 - a. For two channel UUTs using the single-ended Copper Mini-TC Cable, disconnect the cable from the UUT Channel 1 input, and reconnect the cable to the Channel 2 input after completing CAL4 in *Figure 15* below. Repeat Step 11.

CHANNEL	UUT DISPLAY	APPLIED VOLTAGE (mV)
1	CAL1	-10
	CAL2	75
	CAL3	-10
	CAL4	30
2	CAL5	-10
	CAL6	75
	CAL7	-10
	CAL8	30





Figure 15: Gain Alignment Values

20. Remove the copper cable from the DC Voltage Source and UUT.


Cold Junction Compensation Alignment
21. Connect one end of the Type E⁶ Thermocouple Cable to the UUT Channel 1 input.
 - a. For two channel UUTs using the Split Thermocouple Cable, connect the miniature thermocouple connector of one leg to the UUT Channel 1

⁶ If substituting another thermocouple type, use the appropriate Thermocouple Cable for the selected thermocouple type.

Service Information

- input, and the miniature thermocouple connector of the other leg to the Channel 2 input.
22. Connect the opposite end of the Thermocouple Cable (or the single-connector end of the Split Thermocouple Cable) to the Thermocouple Calibrator thermocouple output.
 23. The UUT display will indicate as follows:
 - a. Line 1: CALA
 - b. Line 2: temperature in °C
 - c. Line 3: temperature in tenths of °C (out to 1 μ or 0.000001 °C)
 24. Set the Thermocouple Calibrator thermocouple type to Type E⁷.
 25. Set the calibrator to output 0.0 °C.
 26. Allow at least five minutes for this connection to stabilize.
 27. Press UUT   to set the UUT display equal to the Thermocouple Cable calibrated correction value \pm 0.02 °C.
 28. Press UUT .
 29. The display will change to rESA showing the actual measured value saved in the previous steps.
 30. For single channel UUTs, skip to Step 36 below.
 31. For two channel UUTs, continue with Step 32.
 - a. For two channel UUTs using the single-ended Thermocouple Cable, disconnect the cable from the UUT Channel 1 input, and reconnect the cable to the Channel 2 input. Repeat Step 26.
 32. Press UUT .
 33. The UUT display will indicate as follows:
 - a. Line 1: CALb
 - b. Line 2: temperature in °C
 - c. Line 3: temperature in tenths of °C (out to 1 μ or 0.000001 °C)
 34. Repeat Steps 27 and 28.
 35. The display will change to rESb showing the actual measured value saved in the previous steps.

⁷ If substituting another thermocouple type, set the Thermocouple Calibrator as appropriate for the selected thermocouple type.

36. Press UUT  to save the current alignment values and return the UUT to normal operation.

4.3 Troubleshooting

OMEGA's digital handheld thermometers are designed and built to provide years of uninterrupted use. In the event the instrument malfunctions or does not perform as expected, helpful troubleshooting tips are provided below. *Figure 16* below lists some of the more common issues and their resolutions.




SYMPTOM	DESCRIPTION	RESOLUTION
Unexpected reading on Line 2 of Display	Statistics View Mode is active	Press  to cycle through statistics views until active measurement is displayed (see <i>Section 3.4 View Modes and Statistics</i>)
Unexpected or Erroneous Measurement	Probe offset is active	Set probe offset to correct value for connected temperature probe (see <i>Section 3.10, Probe Offset</i>)
	Temperature probe has not stabilized	Observe display trend indicators and wait for stable measurement (see <i>Section 3.8 Trend Indicators</i>)
	Instrument is set to the wrong thermocouple type for the attached probe	Set the thermocouple type as appropriate for the attached probe (see <i>Section 3.3, Setup Menu</i>)
	When sourcing from a thermocouple simulator, Open Lead Detection is enabled.	See <i>Section 3.11, Open Lead Detection Enable/Disable</i> to disable.
Unresponsive	Hold Mode is active	Press  , and verify that the HOLD indicator is not active (see <i>Section 3.7, Hold Function</i>)
	Static discharge through connected probes	Press  to cycle instrument power

Figure 16 continued on next page . . .

SYMPTOM	DESCRIPTION	RESOLUTION
Shuts down unexpectedly or will not power on	Batteries are low or depleted	Replace batteries (see <i>Section 2.5, Battery Installation and Replacement</i>)
Connection	Instrument will not connect to mobile device	Ensure mobile device supports <i>Bluetooth</i> low energy technology / version 4.0 and device operating system is updated to the latest version
		Verify mobile device <i>Bluetooth</i> connection is active
		Ensure no other mobile apps have control of the <i>Bluetooth</i> connection or paired devices
	OMEGA Thermometer Link will not connect to OMEGA Data Cloud	Ensure either wireless or cellular internet connection is active
Verify a valid account number, username, and password are entered in OMEGA Thermometer Link		

Figure 16: Common Troubleshooting Issues

4.4 Diagnostic Routines and Error Codes


The instrument momentarily activates all display annunciators and segments during startup to allow for visual inspection of the LCD. Observe the LCD and verify all segments activate.

Internal diagnostic routines are also executed during startup. If any diagnostic routine detects a malfunction, an error will be displayed as shown in *Figure 17* below.

ERROR CODE	DESCRIPTION
Err ADC	Analog to digital converter error
Err CJC	Cold junction compensation error
Err FLSH	Flash memory error
Err InP	Stuck key or other keypad error

Figure 17: Diagnostic Routine Error Codes

4.5 Memory Sterilization

To erase all locally stored measurement data and reset accumulated statistics, press . See *Section 3.12, Clear Function* for instructions.

Instrument parameters will be retained. Refer to *Section 3.3, Setup Menu* to set instrument parameters as desired.

A. REQUIRED EQUIPMENT

EQUIPMENT	FUNCTION	RANGE	SPECIFICATION (2-SIGMA)	THERMOCOUPLE CABLE CALIBRATION UNCERTAINTY (2-SIGMA)
DC Voltage Source	DC Voltage Output	-10 to 75 mV	± (13 ppm of output + 0.66 µV)	N/A
Thermocouple Calibrator	Thermocouple Type B	600 to 800 °C 800 to 1000 °C 1000 to 1550 °C 1550 to 1820 °C	± 0.29 °C ± 0.23 °C ± 0.20 °C ± 0.22 °C	± 0.41 °C ± 0.32 °C ± 0.28 °C ± 0.31 °C
	Thermocouple Type E	-250 to -100 °C -100 to -25 °C -25 to 350 °C 350 to 650 °C 650 to 1000 °C	± 0.33 °C ± 0.11 °C ± 0.09 °C ± 0.11 °C ± 0.14 °C	± 0.47 °C ± 0.15 °C ± 0.13 °C ± 0.15 °C ± 0.20 °C
	Thermocouple Type J	-210 to -100 °C -100 to -30 °C -30 to 150 °C 150 to 760 °C 760 to 1200 °C	± 0.18 °C ± 0.11 °C ± 0.09 °C ± 0.11 °C ± 0.15 °C	± 0.25 °C ± 0.15 °C ± 0.13 °C ± 0.16 °C ± 0.22 °C
	Thermocouple Type K	-200 to -100 °C -100 to -25 °C -25 to 120 °C 120 to 1000 °C 1000 to 1372 °C	± 0.22 °C ± 0.12 °C ± 0.11 °C ± 0.17 °C ± 0.27 °C	± 0.31 °C ± 0.17 °C ± 0.15 °C ± 0.25 °C ± 0.38 °C
	Thermocouple Type N	-200 to -100 °C -100 to -25 °C -25 to 120 °C 120 to 410 °C 410 to 1300 °C	± 0.27 °C ± 0.15 °C ± 0.13 °C ± 0.12 °C ± 0.18 °C	± 0.38 °C ± 0.21 °C ± 0.18 °C ± 0.17 °C ± 0.25 °C
	Thermocouple Type R	0 to 250 °C 250 to 400 °C 400 to 1000 °C 1000 to 1767 °C	± 0.38 °C ± 0.23 °C ± 0.22 °C ± 0.27 °C	± 0.54 °C ± 0.33 °C ± 0.31 °C ± 0.38 °C
	Thermocouple Type S	0 to 250 °C 250 to 1000 °C 1000 to 1400 °C 1400 to 1767 °C	± 0.31 °C ± 0.24 °C ± 0.25 °C ± 0.31 °C	± 0.44 °C ± 0.34 °C ± 0.35 °C ± 0.43 °C
	Thermocouple Type T	-250 to -150 °C -150 to 0 °C 0 to 120 °C 120 to 400 °C	± 0.42 °C ± 0.16 °C ± 0.11 °C ± 0.09 °C	± 0.59 °C ± 0.23 °C ± 0.15 °C ± 0.13 °C

Appendix A continued on next page . . .


Appendices

EQUIPMENT	FUNCTION	RANGE	SPECIFICATION (2-SIGMA)	THERMOCOUPLE CABLE CALIBRATION UNCERTAINTY (2- SIGMA)
<p>Thermocouple Cables</p> <p>Copper Mini-TC Cable</p>				<p>Calibrated Thermocouple Cables with recorded correction values shall be used throughout this procedure to adhere to the expanded instrument uncertainties provided in <i>Appendix B</i>. Thermocouple Cables must be calibrated to the accuracies listed in the Thermocouple Calibrator Specification column of <i>Appendix A</i>, or better.</p> <p>Thermocouple Cables are only required for each desired thermocouple type.</p> <p>The thermocouple cables must be terminated at one end with a male miniature thermocouple connector for connection to the UUT. The opposite end should be terminated as appropriate for the thermocouple calibrator.</p> <p>For two channel UUTs, a split or “Y” cable may be used, terminated with two (2) male miniature thermocouple connectors. Correction values must be established for each leg of the Split Thermocouple Cable.</p> <p>Copper Mini-TC Cable is required for Voltage Gain and Offset alignment only. This cable does not require calibration.</p> <p>One end shall be terminated with a male miniature thermocouple connector for connection to the UUT. The opposite end shall be terminated with copper connections appropriate for the DC Voltage Source.</p> <p>For two channel UUTs, a split or “Y” cable may be used, terminated with two (2) male miniature thermocouple copper connectors.</p>
<p>Straightened Paper Clip</p>				<p>Required to access the calibration enable switch. Any rigid wire, approximately 0.8 mm in diameter, may be used.</p>

Appendices


B. EXPANDED INSTRUMENT UNCERTAINTIES

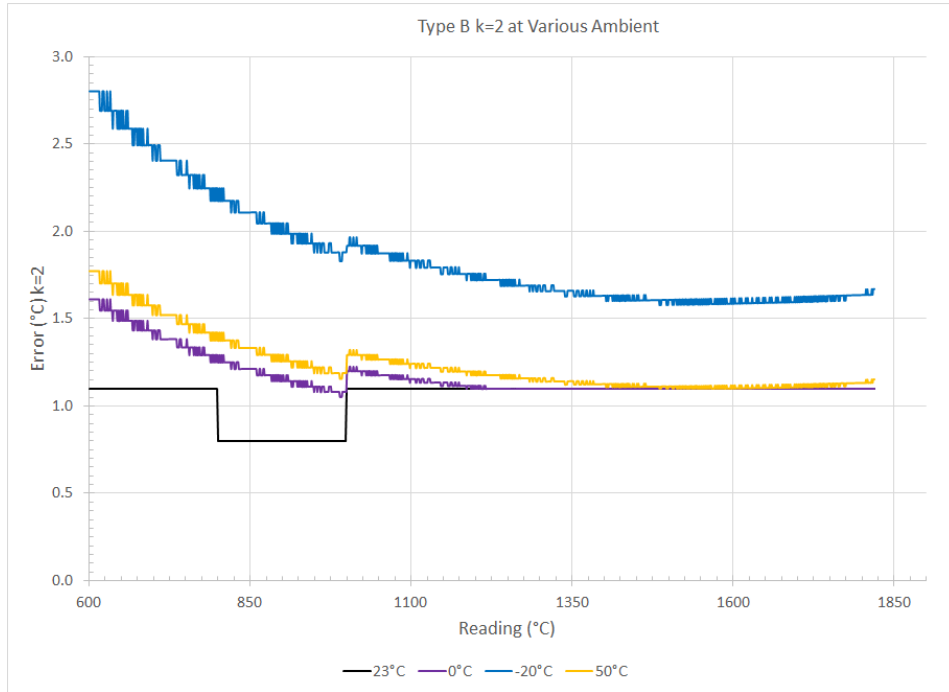Thermocouple Type B




Appendices

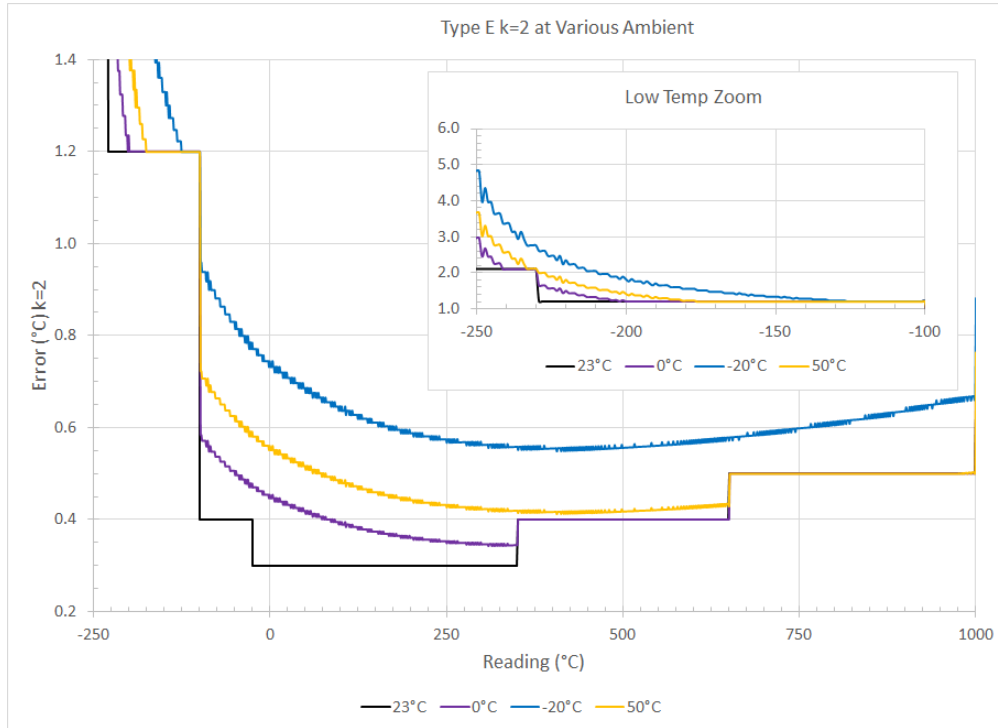Thermocouple Type E




Appendices

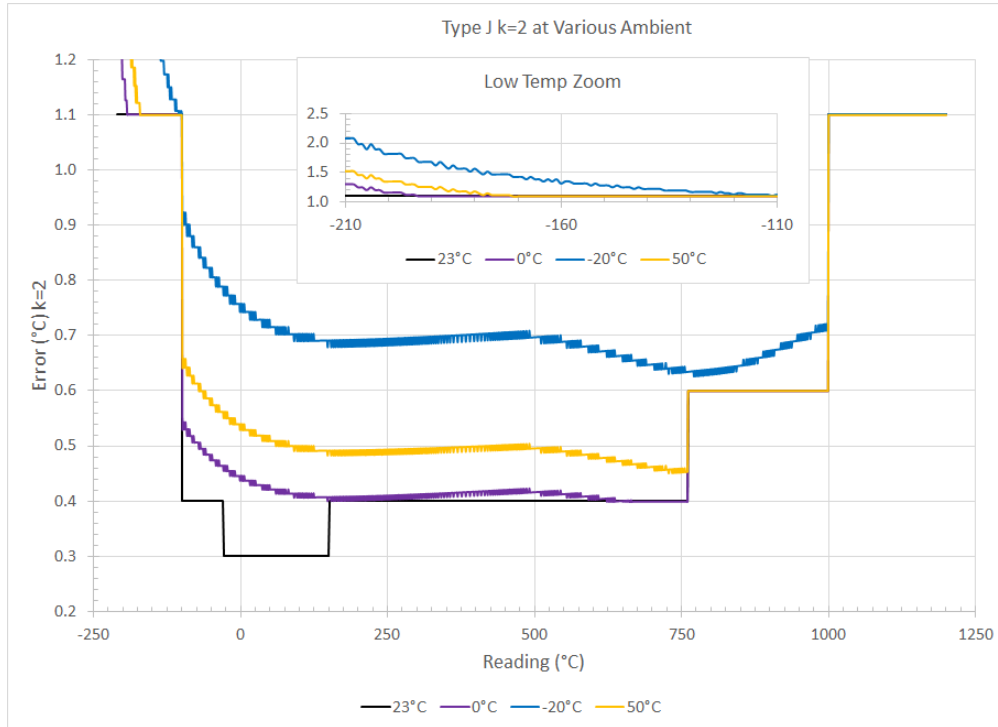Thermocouple Type J




Appendices

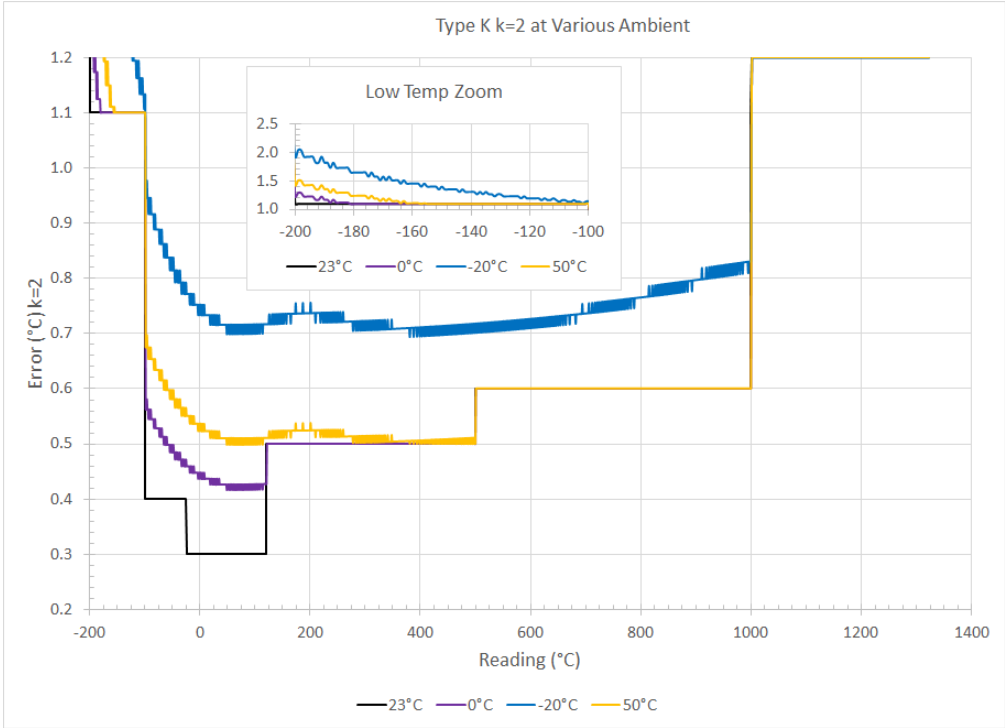Thermocouple Type K




Appendices

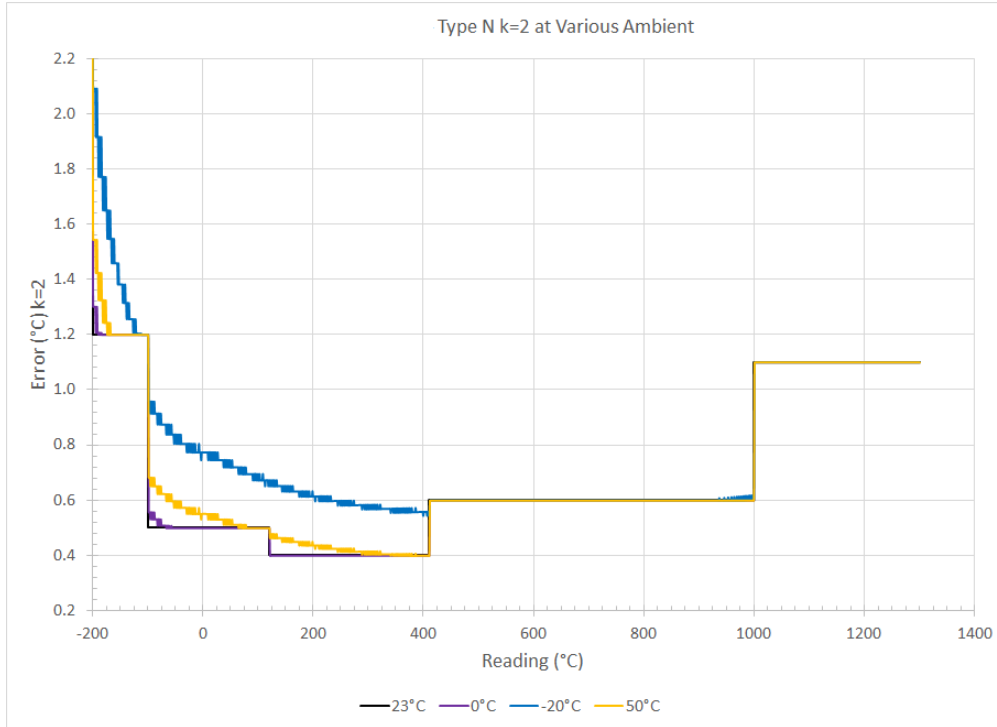Thermocouple Type N




Appendices

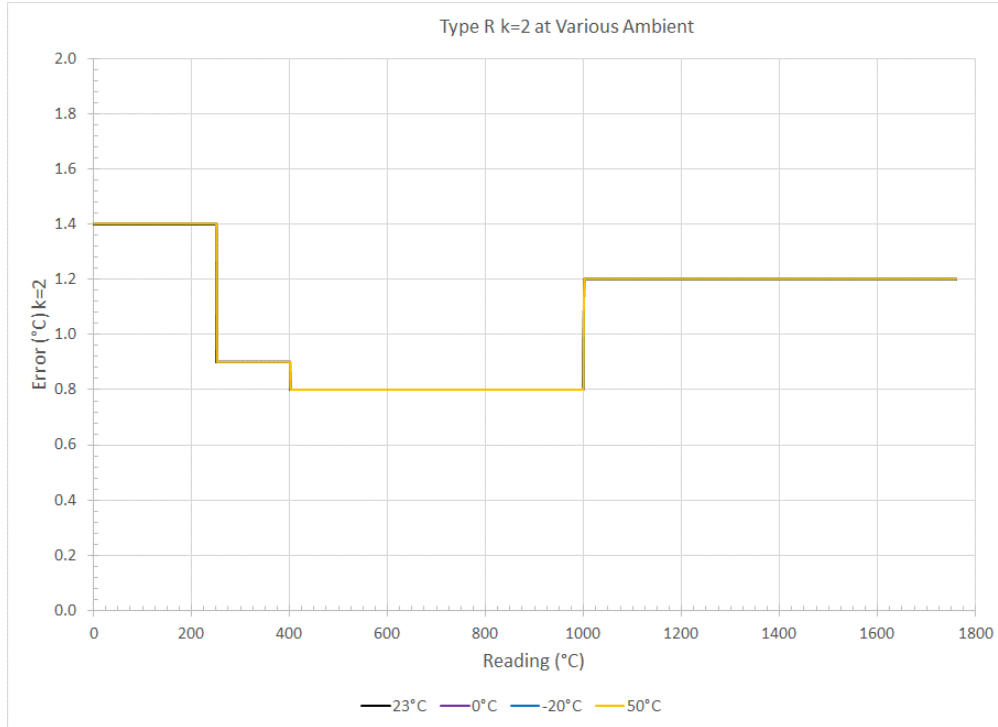Thermocouple Type R




Appendices

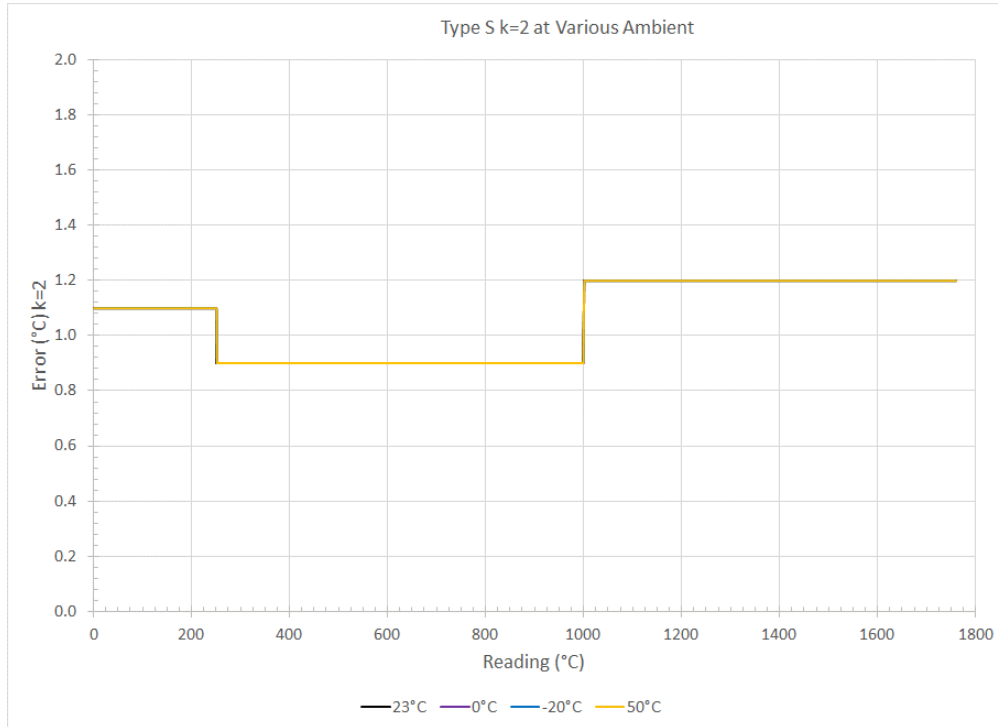Thermocouple Type S



Appendices

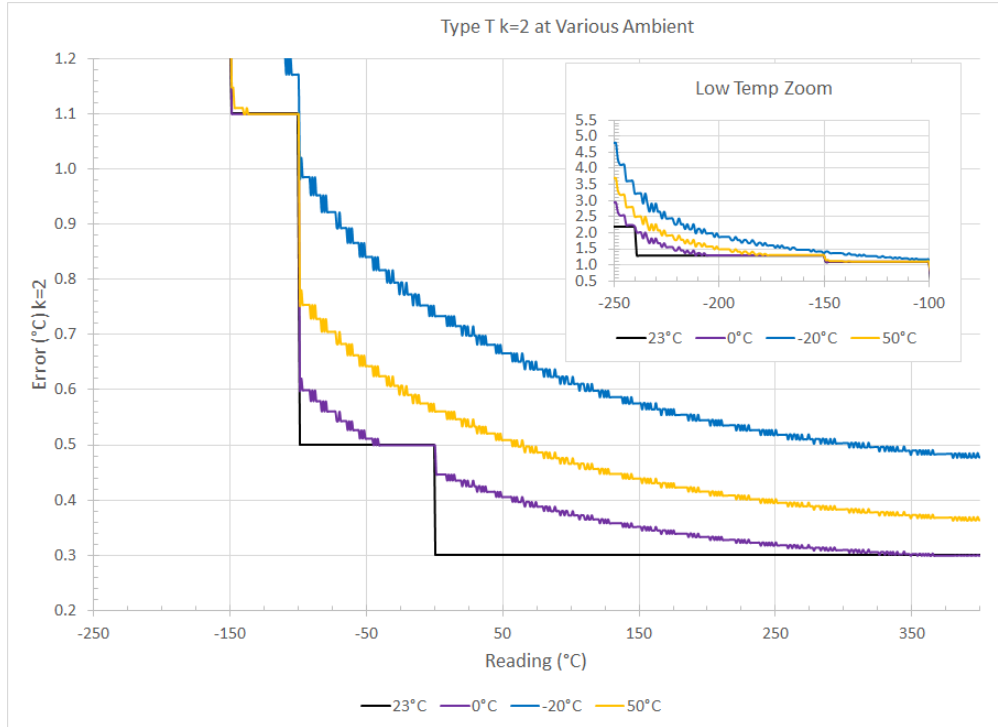Thermocouple Type T



C. INSTRUMENT VERIFICATION DATA SHEET

THERMO-COUPLE TYPE	STANDARD VALUE (°C)	READING (°C)	CABLE OFFSET (°C)	CORRECTED READING (°C)	2-SIGMA TOLERANCE (± °C)
B	600				1.1
	995				0.8
	1820				1.1
E	-250				2.1
	-95				0.4
	0				0.3
	995				0.5
K	-200				1.1
	-95				0.4
	0				0.3
	995				0.6
	1372				1.2
J	-210				1.1
	-95				0.4
	0				0.3
	995				0.6
	1200				1.1
N	-200				1.2
	-95				0.5
	0				0.5
	995				0.6
	1300				1.1
R	0				1.4
	995				0.8
	1760				1.2
S	0				1.1
	995				0.9
	1760				1.2
T	-250				2.2
	-95				0.5
	0				0.3
	400				0.3

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at omega.com*

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Communications-Based Acquisition Systems
- ☑ Data Logging Systems
- ☑ Wireless Sensors, Transmitters, & Receivers
- ☑ Signal Conditioners
- ☑ Data Acquisition Software

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **37 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **three (3) years product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a trademark of OMEGA ENGINEERING, INC.

© Copyright 2018 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.