



SOURCING SIMULATION TC

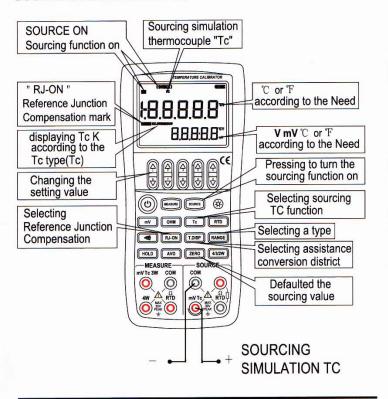


SOURCING RESISTANCE /SIMULATION RTD

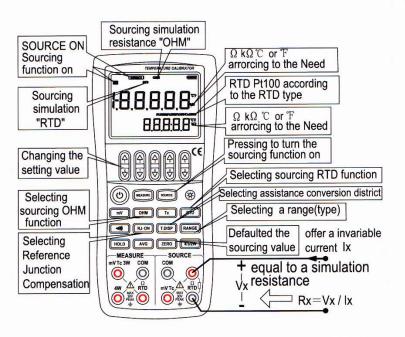


TEMPERATURE CALIBRATOR Quick Reference Guide

 \sum See Users Manual for"Safety information" and complete operating information

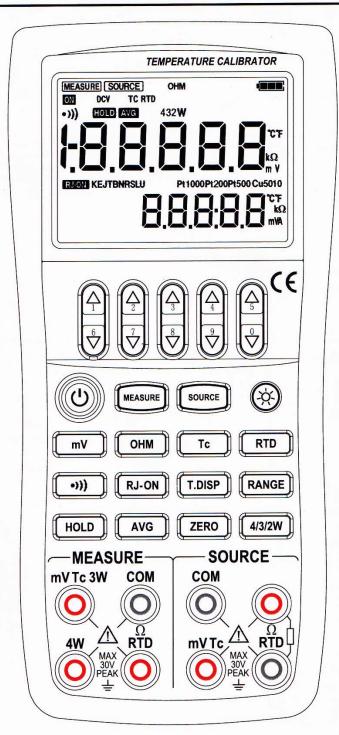

tel: +420 596 311 899 | fax: +420 596 311 114 | web: www.jakar.cz | e-mail: sales@jakar.cz



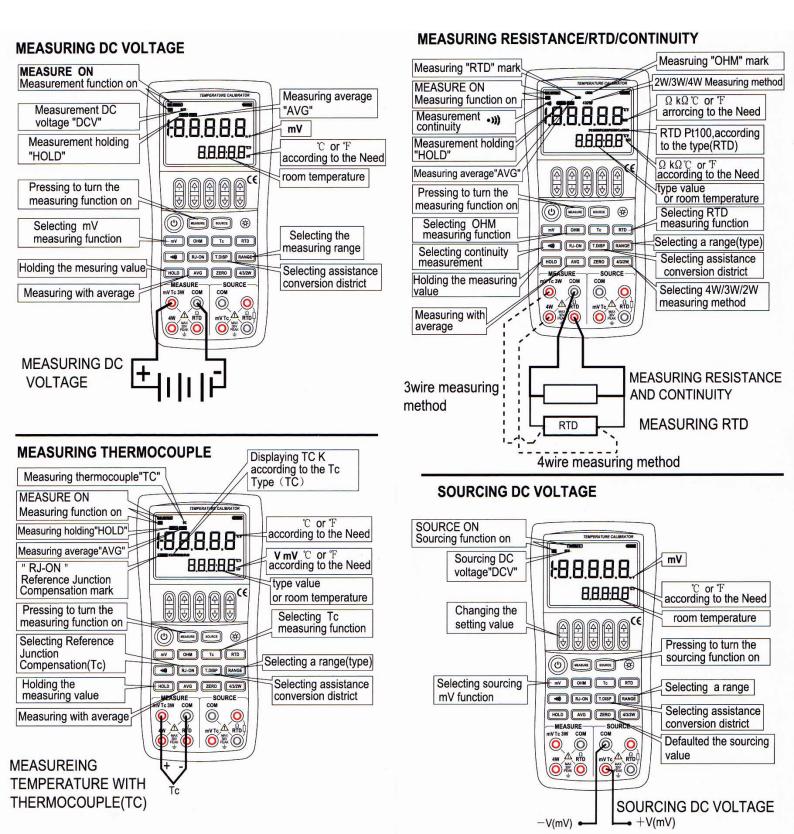

tel: +420 596 311 899 | fax: +420 596 311 114 | web: www.jakar.cz | e-mail: sales@jakar.cz