

1 YEAR
WARRANTY



User's Guide

Shop online at

omega.com®

Ω OMEGA™

omega.com

e-mail: info@omega.com

*For latest product manuals:
omegamanual.info*

ISO 9001
CERTIFIED
CORPORATE QUALITY
STAMFORD, CT

ISO 9002
CERTIFIED
CORPORATE QUALITY
MANCHESTER, UK

PHCN-962 pH/ORP Controller

omega.com[®]

ΩOMEGA™

OMEGAnet[®] Online Service
omega.com

Internet e-mail
info@omega.com

Servicing North America:

U.S.A.:

ISO 9001 Certified

One Omega Drive, Box 4047
Stamford, CT 06907-0047
Tel: (203) 359-1660
FAX: (203) 359-7700
e-mail: info@omega.com

Canada:

976 Bergar
Laval (Quebec) H7L 5A1, Canada
Tel: (514) 856-6928
FAX: (514) 856-6886
e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342/1-800-TC-OMEGA[®]
Customer Service: 1-800-622-2378/1-800-622-BEST[®]
Engineering Service: 1-800-872-9436/1-800-USA-WHEN

Mexico:

En Español: (001) 203-359-7803
FAX: (001) 203-359-7807
e-mail: espanol@omega.com
info@omega.com.mx

Servicing Europe:

Czech Republic:

Frystatska 184, 733 01 Karvina, Czech Republic
Tel: +420 (0)59 6311899
FAX: +420 (0)59 6311114
Toll Free: 0800-1-66342
e-mail: info@omegashop.cz

Germany/Austria:

Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
Tel: +49 (0)7056 9398-0
FAX: +49 (0)7056 9398-29
Toll Free in Germany: 0800 639 7678
e-mail: info@omega.de

United Kingdom:

ISO 9002 Certified

One Omega Drive, River Bend Technology Centre
Northbank, Irlam, Manchester
M44 5BD United Kingdom
Tel: +44 (0)161 777 6611
FAX: +44 (0)161 777 6622
Toll Free in United Kingdom: 0800-488-488
e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

Preface

This manual serves to explain the use of **PHCN-962** series controller / transmitter. This instruction manual is written to cover as many anticipated applications of **PHCN-962** series controller / transmitter.

The information presented in this manual is subject to change without notice as improvements are made, and does not represent a commitment of part of **OMEGA ENGINEERING**.

OMEGA ENGINEERING can not accept any responsibility for damage or malfunction of the unit due to improper use of the instrument..

Copyright©2007 OMEGA ENGINEERING , All right reserved .

SAFETY INFORMATION

OMEGA ENGINEERING. Controller / Transmitter shall be installed and operated only in the manner specified in the Instruction manual. Only skilled, trained or authorized person should carry out installation, setup and operation of the instrument.

Before powering up the unit, make sure that power source is connected to, is as specified in the top label. Failure to do so may result in a permanent damage to the unit.



Protect level against electric shock mainly depends on relevant installation rules.

TABLE OF CONTENTS

1 PREFACE	7
BEFORE USE	7
IN USE	7
SAFETY INSTRUCTION	8
2 PRODUCT DESCRIPTION	9
2.1 DESCRIPTION OF INSTRUMENT SPECIALITY:	9
2.2 MEASUREMENT AND CONTROL SYSTEM	10
2.3 APPEARANCE	11
2.3.1 INTRODUCTION OF DISPLAY	12
2.3.2 KEY INSTRUCTION	13
2.3.3 LED INDUCTION	13
2.3.4 PASSWORD	13
2.3.5 PREVIEW OF FUNCTION	14
3 INSTALLATION AND ACCESSORY	15
INSTALLATION	15
PHCN-962 CONNECTION DIAGRAM	16
MEASUREMENT MODE	17
4 CALIBRATION MODE	18
4.1 ENTERING CALIBRATION MODE	18
4.2 pH CALIBRATION	19
4.3 ORP–mV CALIBRATION	22
5 SET UP MODE	23
ENTERING SET UP MODE	23
5.1 P01: TEMPERATURE SET-UP SUB-FUNCTION	24
5.2 P02: OFFSET SET-UP SUB-FUNCTION	25
5.3 P03: OUTPUT ELECTRIC CIRCUIT (SP1/SP2) SUB-FUNCTION	26
5.4 P04: CONTROL MODE SUB-FUNCTION	27
5.5 P05: RELAY 1 SET-UP SUB-FUNCTION	28
5.6 P06: RELAY 2 SET-UP SUB-FUNCTION	29
5.7 P07: ALARM RELAY 3 SET-UP SUB-FUNCTION	30
5.8 P08: pH/ORP AND SENSOR CONFIGURATION SUB-FUNCTION	31

5.9	P09: TRANSMITTING RATE SUB FUNCTION	32
5.10	P10: REVERTING TO FACTORY DEFAULT SETTINGS	33
5.11	COMMUNICATION PROTOCOL	34
6 TECHNICAL PARAMETERS		38
6.1	TECHNICAL PARAMETERS FORM	38
6.2	PARAMETER SETTING AND FACTORY PRELIMINARY VALUE	39
APPENCLIX 2 – pH TEMPERATURE CORRESPONDING TO pH BUFFER SOLUTION		40
APPENCLIX 3 – HYSTERESIS BAND		41
APPENCLIX 4 – CONTROL MOVEMENT		42
ACCESSORY 5 – ABBREVIATIONS IN FUNCTION FORM		44



1 PREFACE

BEFORE USE

Thank you for using **OMEGA ENGINEERING. PHCN-962** series controllers and transmitters.

Although this series of pH/OPR controllers / transmitters use advanced technology and meet the requirements of current safety rules, improper use can also threaten the safety of users, and / or cause harmful influences to factory and other equipments. Therefore, before using pH/ORP controllers / transmitters, relevant person must read and understand contents of this instruction manual.

Following symbols used in this instruction manual are to mark safety instruction and appendix information:

	This symbol means contents and safety instructions and warning of potential dangerous. If they are neglected, person may be hunted and property may be damaged.
	This symbol means the contents are appendix information. If they are neglected, it will cause low efficient and even losing products.

Instruction manual should be kept accessible within the person who use pH/ORP controllers / transmitters.

If you have problems, which are not mentioned or cannot be explained in this manual, please contact with your suppliers. They will be very glad to help you.

IN USE



OMEGA ENGINEERING. pH/ORP controllers / transmitters, as described instruction manual, are intended to separate pH or ORP and temperature measurement.

Any other uses, or other unmentioned use in instruction manual, are not acceptable when they contradict the technical parameters

Other conditions of right use include:

- Notice remarks and requirements stated in instruction manual.
- Notice local safety regulations about safe operation.
- Notice information and warning of products that are used together with the transmitters in the contract. (Chassis, electrode, etc.)
- Notice required using environment and working condition.

SAFETY INSTRUCTION

	<p>pH / ORP transmitters should be installed and operated by qualified person who are familiar with the work.</p>
	<p>Transmitters with problems should not be installed and used.</p>
	<p>pH / ORP transmitters should be used under the required working condition.</p>
	<p>pH / ORP transmitters should be open and repaired by clients them selves.</p>
	<p>Mollified pH / ORP transmitters should not be used. Producers and suppliers do not bear responsibility for the damage and lose caused by modifying instruments without permission. Clients should bear all the risks.</p> <p>This instrument has a protection level of IP65. Please use waterproof cable glands when you connect the line. Also, please loose it when you open the cover. After connecting the line, please tighten the cable conductor according to the above table 3 with attached tie line, or it will cause danger because cable conductor or interface falls off when open the cover.</p> <p> Please make sure to cut the power when you open the cover to carry through any operation.</p>

2 PRODUCT DESCRIPTION

2.1 DESCRIPTION OF INSTRUMENT SPECIALITY:

OMEGA ENGINEERING. pH / ORP transmitters are used to measure pH or ORP and temperature value. pH or ORP measured value can use PLC or LIT to control precisely adding medicine.

This kind of transmitters has two versions: one is installing way and the other is wall hanging installing way. Transmitters can be used as monitor in water treatment, in electrolytic water cleaning, in process of chemical industry, in food process, in cleaning water or wastewater treatment and in neutralization process.

This transmitter has many user-friendly and safety features which include:


- Menu-driven programs that easy to set-up.
- Strong interference protected design can be used in strong.
- IP65 all-day water and air proofing can be used in any adverse circumstances.
- Built-in memory backup to ensure that setup parameter and calibration information are not erased if power off or power off in abnormal condition.
- Can separately set process temperature (TST1) and Calibration temperature (TST2) by manual operation. Without doing trivial manual temperature setting. If the temperature sensor fails. Under automatic temperature compensation mode, instrument will automatically switch to process temperature (TST1) of manual temperature compensation to compensate. This can ensure that the instrument can be working normally. Please refer to procedures of Item 5.1.
- pH measured value can make offset adjustment (adjusting scope $\pm 2\text{PH}$) so that users can calibrate online. Please refer to procedures of Item 5.2.
- Various choice of electric current output. 0/4-20mA Output scope can be set. (Over / pH). Please refer to procedures of Item 5.3.
- Two routes of relay contacts, users can choose high-low meta control independently and freely.
- Separately adjustable high and low set point hysteresis (dead bands) prevent oscillating of relays around the set points.
- Various adding-medicine control mode, users can choose precise adding-medicine (PLC) and LIT. Two groups of relays can switch high-low point control freely. Please refer to procedures of Item 5.4.
- Two kinds of electrode input, users can choose balanced input and imbalanced input. Users can choose balanced input mode under the strong interference industrial situation. Please refer to procedures of Page 17.
- Large dual display LCD for easy reading with clear multiple annunciators, alarm status and operational message annunciators. Long-life micro-switch key can set easily.
- Can set time of instrument and electrode to reduce person management. Instrument will automatically appear "CAL" at regular time to call person to make calibration and maintain once. Please refer to procedures of Item 5.7.
- Automatically clean relay design. Users can set cleaning time and install cleaning equipment by themselves. Please refer to procedures of Item 5.7.

- Glass electrode and Metal antimony electrode can be chosen and be used under different industrial situation and HF measurement situation. Please refer to procedures of Item 5.8.
- During calibrating and setting, hold function freezes output current (0/4 20ma) and releases control relays.
- LED indicators signal control activities to monitor controller status from a distance.
- Ultraviolet rays proofing, LCE of blue back light (LCD=liquid crystal display)
- RS-485 output can set tandem transmitting rate and ID NO. by itself. Maximum 100 instruments can be connected with computer to provide convenience management for terminating machine.

2.2 MEASUREMENT AND CONTROL SYSTEM

Typical measurement system includes:

- pH/ORP on-line transmitter
- United or separated temperature sensing instrument Pt1000 of pH/ORP compound electrode.
- Suitable pH/ORP measurement electric cable.
- Immersion, flow or processing parts with or without grounding electrode.
- Terminating controlling parts, eg. Pump or valve.
- 0/4~20mA can connect with recording instrument.
- RS485 can be used as multi-instrument communication.
- RL3 relay can be used as many controller and warning.

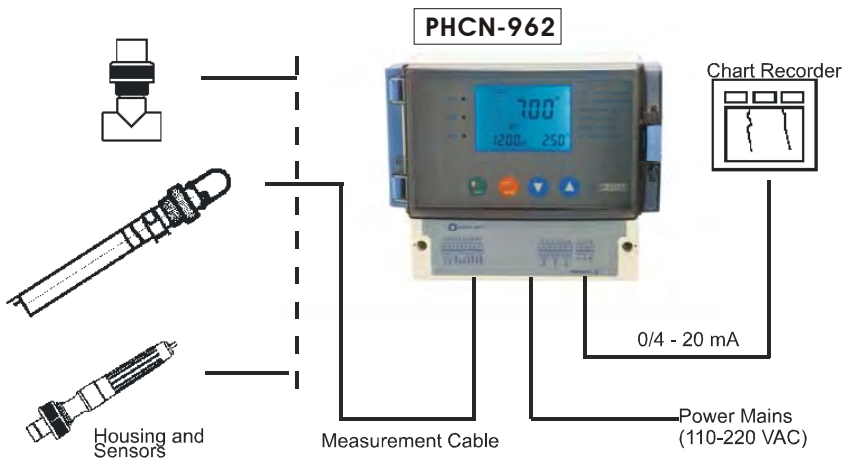

+


2.3 APPEARANCE

PHCN-962 Wall hanging installation



2.3.1 INTRODUCTION OF DISPLAY

Two liquid crystal regions show measured value and indication and parameters of various status.

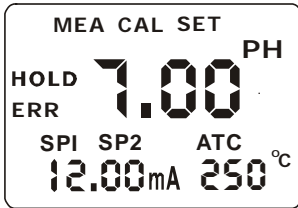




Mode Indication :

- **MEA** : measurement mode
- **SET** : set-up mode
- **CAL** : calibration mode

Status Indication:

- **HOLD** : relay actions and electric current output are hold.
- **ATC** : automatic temperature compensation indication, manual temperature compensation is not displayed.
- **ERR**: error or warning indication

2.3.2 KEY INSTRUCTION

KEY	Description
	<ul style="list-style-type: none"> • Mode switch key or quit key
	<ul style="list-style-type: none"> • Confirm key • Entering sub-function form of function group in setting mode • Confirm setting parameter and value • Starting calibrating in calibration mode • Back light on and off switch in measurement mode
	<ul style="list-style-type: none"> • Choose function group in setting mode Set parameter and value (If hold on pressing, value changing will be quicker.)

2.3.3 LED Induction

Relay Induction

SP1\SP2 LED show relevant working status of relays.



SP1\SP2LED light-on shows that relays are under working status.

2.3.4 Password

When entering calibration mode and setting mode, there are passwords. Passwords are set by factory and users can not modify them by themselves. Followings are those passwords:

Password	Mode / Instruction
028	Calibration Mode
058	Set-up Mode


2.3.5 PREVIEW OF FUNCTION

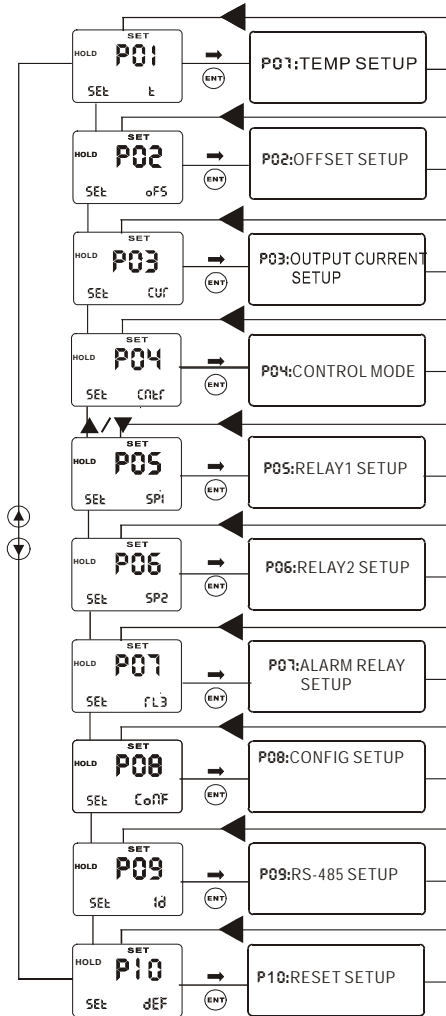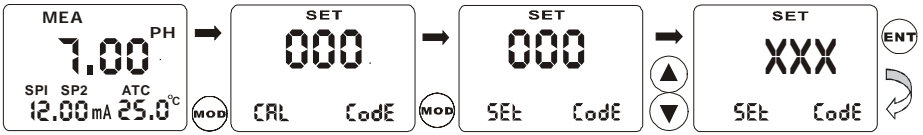

3 INSTALLATION AND ACCESSORY

INSTALLATION

Wall-hanging installation

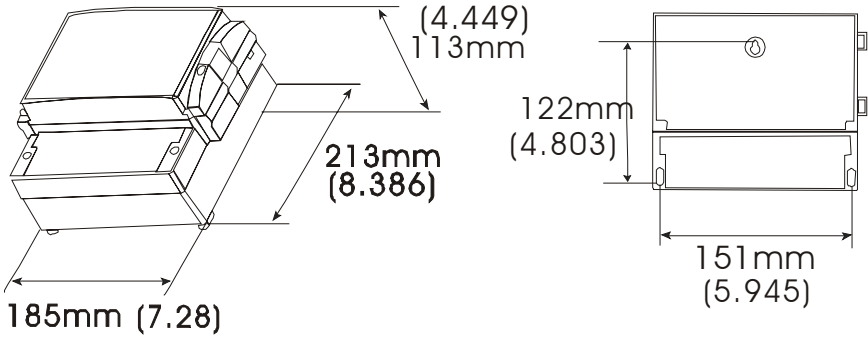


PHCN-962 connection diagram



Warning: Make sure to power off before connecting. The back panel consists of three connectors.

PHCN-962 series connection diagram

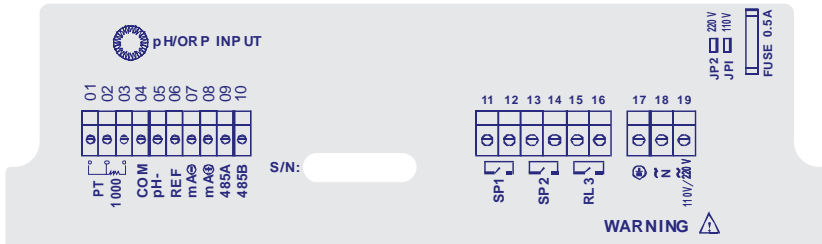


1. Temperature electrode positive terminal (PT1000)	17. Connect bigger earth wire
2. Temperature electrode negative terminal (PT1000)	18. Alternating connect earth wire
3. Temperature electrode sensing terminal (If use two-wire system, please use short circuit between 2 and 3).	19. Electric source input 110V/220V alternating current
4. COM (short circuit with 5 under normal status)	pH/ORP input terminal
5. pH negative terminal	Jodhpurs JP2 220V
6. REF	Jodhpurs JP1 110V
7. pH value 4 — 20mA Output, negative terminal	
8. pH value 4 — 20mA Output, positive terminal	
9. 485A output	
10. 485B output	
11. Relay A (SP1)	
12. Relay A (SP1)	
13. Relay B (SP2)	
14. Relay B (SP2)	
15. Clearing Relay	
16. Clearing Relay	

MEASUREMENT MODE

When the controller is initially powered on, it automatically enters into the Measurement mode after the large dual LCD displays all segments briefly.




Please notice: in order to get exact measurement information, users should calibrate measurement system (transmitter and electrode).

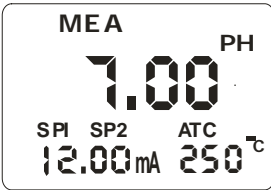


MEA at the top of the LCD shows that the instrument is under the status of measuring. The upper display shows pH or ORP value, while the lower display shows temperature value under pH measurement mode of ORP under ORP measurement mode. Annunciator at the left lower side of the display show the value of transmitting output electric circuit, which as the way that users calibrate the output electric circuit.


Such annunciators or icons, as pH, mV, %, at the right side of the display show the current different measurement mode of transmitters.

In measurement mode, you can press  key once or twice to enter into the function form of calibration or set password input.


Then input relevant password to enter into calibration mode or set up mode. Please refer to Item 3(Calibration Mode) or Item 4 (set up mode).

Press  key under measurement mode, you can open or close back light of LCD.


4 CALIBRATION MODE

You can press  once under measurement mode and then input password 28 to get access to calibration mode. Please operate according to following squares.

4.1 ENTERING CALIBRATION MODE

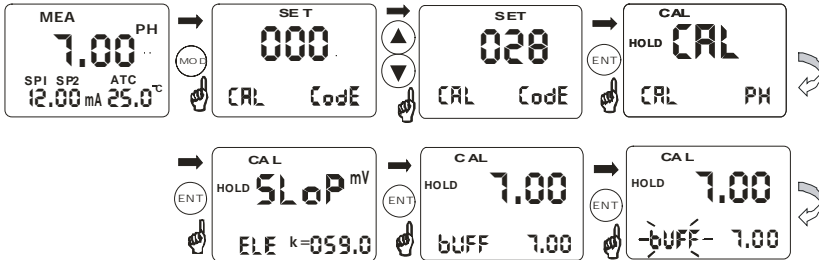



Put the sensor in to pH 7.00 buffer after, display value stable meter automatic lock the value 5 seconds later

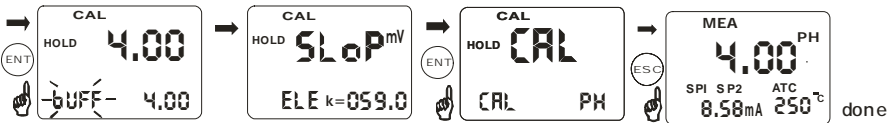


Put the sensor into pH 4.00 buffer after, display value stable meter automatic lock the value 5 seconds later

done






1. Press  once under measurement mode and enter into function form for password input of calibration mode.
2. After entering function form of calibration password input, LCD will ask you to input password. Press  to input calibration password 28, then press **ENTER** to confirm the password.
3. Press **ENTER** to enter into calibration sub function form, if instrument is set up as pH measurement mode, lower display will show CAL pH. If instrument is set up as ORP measurement mode, lower display will show CAL ORP. If you want to calibrate, please refer to relevant items. (please refer to upper pictures).





NOTE : Anytime press  to quit calibration mode and return to upper function. If return to measurement mode, old calibration information will be kept and used. After returning to measurement mode, password will automatically set up form 28 to 000 when entering calibration mode.




4.2 pH CALIBRATION







This instrument can conduct one point or two points calibration in pre-set standard buffer liquid. The value of standard buffer solution is based on 25°C. You should use those standard buffer solution which matches above solution when you calibrate the instrument.

1. Entering calibration mode as Item 4.1 described. LCD will show CAL pH. (pH Calibration mode).
Note : If LCD shows CAL ORP, please switch pH and ORP measurement mode according to the procedures of Item 5.8.
2. Press  key to enter into calibration, LCD will show slope and function form. The lower display will show ELE K=59.2, this function form shows the slope of last calibration. The upper display will show CAL and the main display zone will show SLOP. Press  key to enter into calibration procedures, LCD main display zone will show actual measured value, the right lower display will show the value of standard solution which should be calibrated.
3. Put electrode into the first standard buffer solution. You should put temperature electrode into the same solution under the automatic temperature compensation mode. As the same, you should put liquid earth wire electrode into the solution at the same time in balanced input mode.
4. You can select one point calibration or two point calibration: Press  key to calibrate at **6.86** or **7.00pH**. The lower display shows **BUFF 6.86(7.00)** to tell user the standard solution value under current calibrating. **BUFF** will blink when calibrating. During calibrating process, instrument will automatically distinguish signals which electrode input. If the signal input in required time is stable and in the slope permit range of the formality, the instrument will regard the calibration as a legal calibration, it will record and modify the zero point information of the electrode. The lower display will show **BUFF 1.68** to tell the standard solution value the second point of calibration. Users can press  or  key to select relevant calibration solution. **(USA 1.68>4.01>10.01>12.45) (NST 1.68>4.01>9.18>12.45).**

Press  twice to quit one-point calibration and return to measuring status. Press  to continue next point calibration.


Take electrode out of the first standard solution, clean it and put it into the second standard solution.

5. If select one point calibration, instrument will show the slope, but zero point adopts new calibration value while the slope remains the value of last calibration. If select two point calibration, the lower display will show the next value of standard buffer solution. Use  or  key to selects the second standard buffer solution from the pre-set standard buffer solution. Take electrode out of the first standard solution, clean it and put it into the second standard solution. Press  key, **BUFF** will blink. Instrument will modify the indication to the value of standard solution.
6. After finish the second calibration of standard buffer solution, instrument will automatically show SLOP on LCD main display zone. The right lower display shows the slope of electrode. Parameter of zero point and slope will be renewed after each calibration.

	<p>NOTE: Press  key to quit set up mode at any time. Instrument will return to measurement mode automatically.</p>
	<p>NOTE: Transmitter will show ERR when calibration is error. Under this situation, press  to quit and calibrate again from step 1. It will show ERR again under following situations:</p> <ol style="list-style-type: none"> (1) Use wrong standard solution or standard solution is expired. (2) Electrode is aging or not clean or bubble is broken. (3) Electrode wire is broken or leakage because of joint corrosion.
	<p>NOTE: When calibrating under manual temperature compensation, transmitter will automatically switch to calibration temperature from pre-set measurement temperature. When leaving calibration mode, transmitter will switch to measurement temperature again. (Please refer to Item 5.2 for setting measurement temperature and calibration temperature)</p>
	<p>NOTE: ELE K=59.1 presents the conversation coefficient 59.1mV/pH of pH electrode, which means each pH is converted by 59.1mV electric potential.</p> <p>For example: when slope is 90%, the conversation coefficient is $59.1 * 90\% = 53.19$.</p> <p>When the conversation coefficient is lower than 45mV, which is equal to 75%, users should change electrode. Instrument will show ERR automatically when the conversation coefficient is lower than 40mV, which is equal to 67% slope.</p>

4.3 ORP CALIBRATION


If transmitter be set up as ORP measurement mode. You can only calibrate one point.

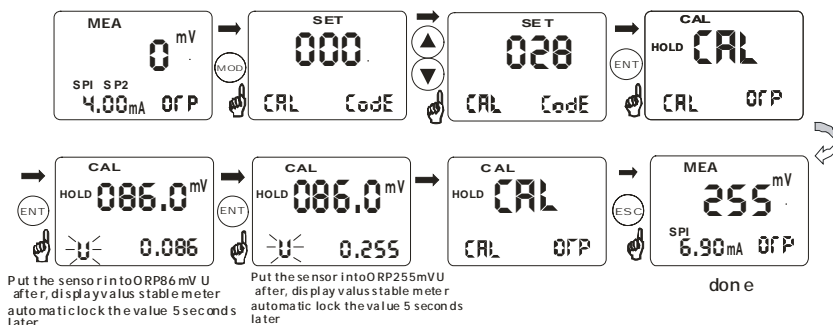



1. Entering calibration mode described as Item 4.1. LCD will show CAL ORP.

NOTE: If LCD shows CAL pH. Please switch to ORP mode from pH mode according to procedures of Item 5.8.

2. Put ORP electrode into ORP standard solution (86mV).


3. Press  key to begin calibrating. mV value displayed is the mV value output by ORP electrode. There is no offset value. The lower display will show U and blink. If one point calibration is finished, Then, the lower display shows 255mv to tell user to change standard solution.


4. Clean electrode and put it into relevant standard solution. Press  key to confirm. Instrument enters into calibration status. After calibrating, instrument automatically returns to slope display function form. Press  to return to measurement mode and finish calibration process.



5 SET UP MODE

ENTERING SET UP MODE

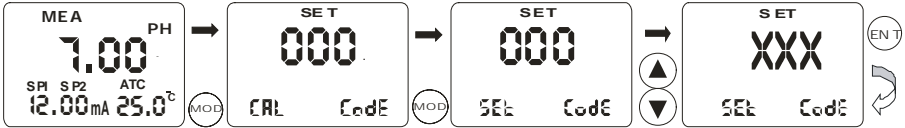In set up mode, transmitter can be set up according to your need.




1. Press  twice in measurement mode.

2. LCD ask you to input password. Use  or  to input the password.


– Input 058 to change parameter.




3. Press  to confirm.







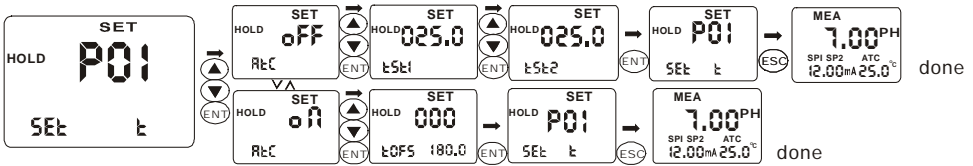









NOTE : Press  twice to quit set up mode at anytime. Instrument will return to measurement mode automatically.

5.1 P01 : TEMPERATURE SET-UP SUB-FUNCTION












1. Press  to enter from P01 screen. LCD main display zone show ON, which means automatic temperature compensation function, is open. User can press  or  to switch to OFF and close automatic temperature compensation function.

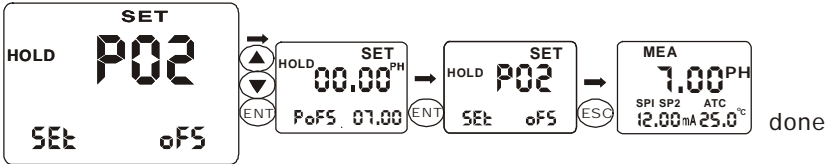2. Press  when automatic temperature compensation function is open, instrument enters into modifying status of temperature measurement value. LCD main display zone show current measurement value of temperature. The lower display TOFS tell users that they can use  or  to modify current temperature display value. Press  to confirm and return to P01 Sub-function form. Use  or  to select other sub functions or press  to return to measurement status.


3. In the status of manual temperature compensation, press  and instrument enter set up status of manual temperature compensation user can use  or  to set up process temperature TST1 and calibration temperature TST2. Press  to confirm and return to P01 Sub-function form or press  or  to select other sub functions to set up or press  to return to measurement status. TST1 is the compensation temperature under normal measurement while TST2 is the compensation temperature under calibration. Since temperatures are not the same in calibration and normal measurement when instrument is used, two set up values under manual temperature compensation status are convenient. Users will not set manual temperature compensation value back and forth. For example, if user's process temperature is **50.0°C** and the temperature of standard solution when calibrating is **10.0°C**, use can set TST1 as **50.0°C** and set TST2 as **10.0°C** for afterwards convenient use.

5.2 P02 : OFFSET SET-UP SUB-FUNCTION




1. In P02 sub-function form, Press . LCD main display zone shows **pH** actually measured value in pH measurement mode. The lower display shows **POFS**. The right lower display show offset. LCD main display zone shows ORP actually measured value in ORP measurement mode. The lower display shows UOFS. The right lower display show offset.
 2. User can press  or  to adjust offset to modify measurement value. Press  to confirm and return to P02 sub-function form. Use  or  to select other sub-function to set up.
-  Note : Press  to quit set-up mode at anytime. Instrument will return to measurement mode automatically.



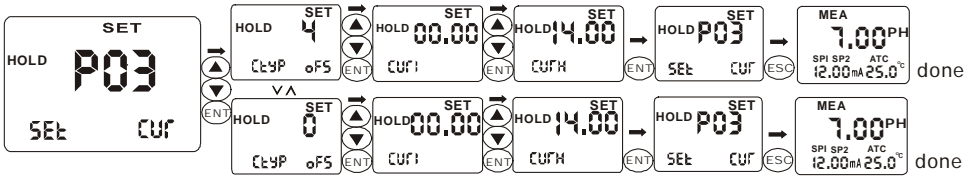





5.3 P03: OUTPUT ELECTRIC CIRCUIT (SP1/SP2) SUB-FUNCTION

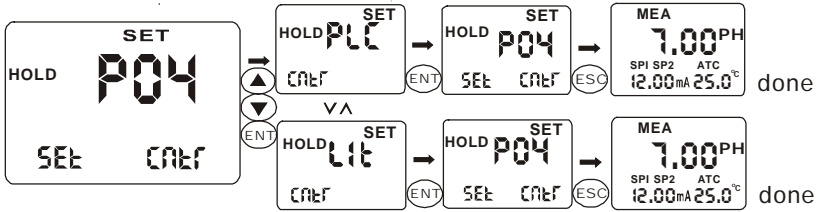


<p>1. Press to confirm in P03 sub-function. Entering set up of the sub-function.</p>	
<p>2. The lower display shows CTYP. The upper display shows 4 (it means electric circuit output from 4 mA to 20 mA). User can press or select 0 (it means electric circuit output from 0 to 20 mA). Press to confirm and enter into set-up of transmitting range.</p>	
<p>3. The lower display shows CURL while the upper display shows 0.00, which means that 0.00mA transmitting range indicates 0.00pH. User can press or to adjust the actual value. Press to confirm. The lower display shows CURH while the upper display shows 14.00, which means 20.00mA transmitting range indicates 14.00pH. User can press or key to adjust the actual value. Press to confirm and return to P03 sub-function firm. Use or to select other sub-functions and to set up.</p>	
<p>For example, set CTYP to 0 or 4, set CURL to 2.00 and set CURH to 10.00, which means 0/4.00mA indicates 2.00pH, 20.00mA indicates 10.00pH.</p>	
	<p>Note : Press to quit set-up mode at anytime. Instrument will return to measurement mode automatically.</p>
	<p>Note : This parameter allows you to set range of circuit output, but transmitting high point and low point can't be overlapped.</p>

5.4 P04 : CONTROL MODE SUB-FUNCTION







- | | |
|--|--|
| 1. Press  in P04 sub-function form to enter into concrete set up procedure. | |
| 2. The lower display shows CNTR while the upper display shows LIT. (The control mode of instrument is under limited control mode). User can press  or  to select PLC mode (The control mode of instrument is under proportion control mode). Press  to confirm and return to P03 sub-function form. Use  or  to select other sub-functions and to set up. | |
|  | Note : Press  to quit set up mode at any time. Instrument will return to measurement mode automatically. |

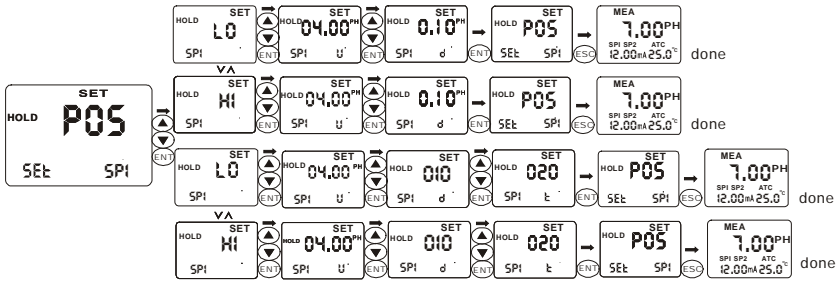



5.5 P05 : RELAY 1 SET-UP SUB-FUNCTION




1. In P05 sub-function form. Press  to enter into concrete set-up procedure.

2. The lower display shows SP1 while the upper display shows HI, which means set point 1 is under high-point control status. (If instrument control made is set up to LIT limited point control mode, relay begins to work when the measured value up to set value. If instrument control mode is set up to PLC proportion control mode, measured value must be raised to approach set value). Press  to confirm and enter into next set up procedure.

3. The lower display shows SP1 U while the upper display shows concrete value. User of the function form can press  or  to adjust the value to confirm concrete set up value. Press  to confirm and enter into next set up procedure.

4. This function form sets hysteresis band under limited control mode to protect relay, which may oscillate frequently around set point and be damaged. Controlling proportion range is set up under proportion control mode (this parameter is not lower than 5 under PLC mode) to confirm and adjust time period of adding medicine automatically. Press  to confirm and enter into next set up procedure. Under proportion control mode, this function form is used to set time period of whole controlling circle. Press  to confirm and return to P05 sub-function form. USE  or  select other sub-function and to set up.




Note : Press  to quit set up mode at any time.

Instrument will return to measurement mode automatically.

5.6 P06 : RELAY 2 SET-UP SUB-FUNCTION

Working principle of this part is the same as which of P05 relay 1 set-up sub-function. Please operate according to P05.

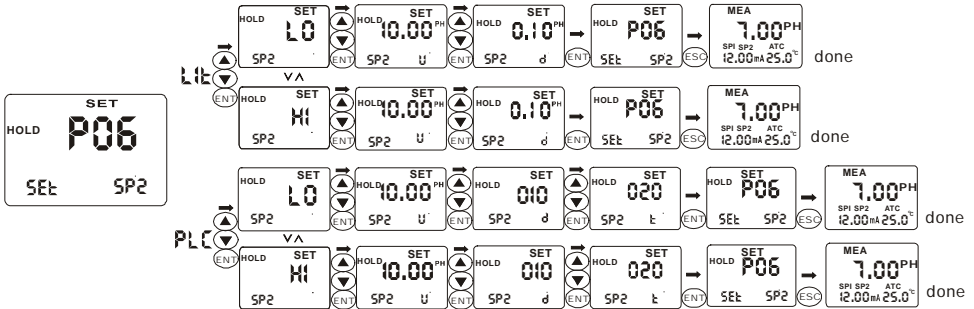

NOTE: Set-up value range of hysteresis band under limited control mode is from 0.00—2.00PH. For example, if high point is 7.00pH and hysteresis band is 0.50pH, movement range of the relay is from 6.50pH to 7.00pH. If low point is 6.00pH and hysteresis band is 0.20pH, movement range of the relay is from 6.00pH to 6.20pH.

NOTE : In PLC control mode, movements of the relay meet following formulas:

$$C * (VM - VS) * U * T / 14$$

C is discriminate parameter for high / low point.

It is -1 when set to high point and it is 1 when set to low point.

VM is measured value.

VS is set value.

U is control parameter.


T is time constant (represent the whole movement circle of relay)

For example, set high point is 7.00pH, actual measured value is 6.50pH, control parameter is 10, time constant is 10 seconds.

$$-1 * (6.50-7.00) * 10 * 10 / 14 = 3.57 \text{ second}$$

According to the above formula, pickup time of relay is 3.6 second and release time is 6.4 seconds. If the result of above formula is negative, relay won't move. If the result is move than T, relay keeps picking up until the result is less than T.

5.7 P07 : ALARM RELAY 3 SET-UP SUB-FUNCTION

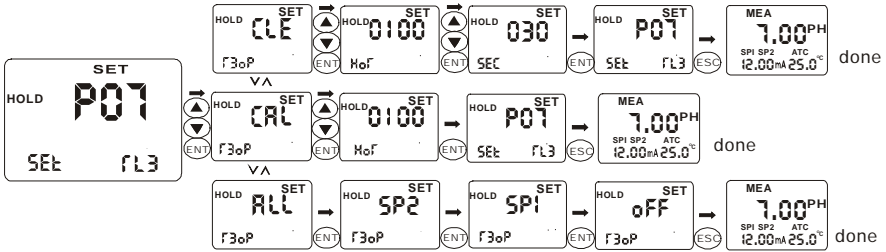

1. Select P07 sub function, Press to confirm. Enter into concrete set-up procedure.

2. Select concrete working mode. Press or to select suitable control mode.

- **CLE** = relay 3 as cleaning control relay
- **CAL** = relay 3 as calibrating indication relay
- **ALL** = move with two relays simultaneously
- **SP1** = relay 3 moves with SP1 (limited control mode only)
- **SP2** = relay 3 moves with SP2 (limited control mode only)
- **OFF** = relay 3 is off

Press **ENTER** to confirm your set up.

If user select CAL working mode, he can set calibration indicate intervals in the function form, use hours as the unit. In this way, instrument and electrode can keep their reliability.


If user select CLE working mode, he can set cleaning time intervals in the function form, use hour as the unit; cleaning continuous time, use second as the unit. In this way, instrument and electrode can keep their reliability. User can install cleaning equipment to increase service life and reliability of electrode.

3. Press to confirm and return to P07 sub-function form. Use or to select other sub-functions to set up.



NOTE : Press to quit set up mode at any time. Instrument will return to measurement mode automatically.

5.8 P08 : pH/ORP FUNCTION AND SENSOR CONFIGURATION SUB-FUNCTION

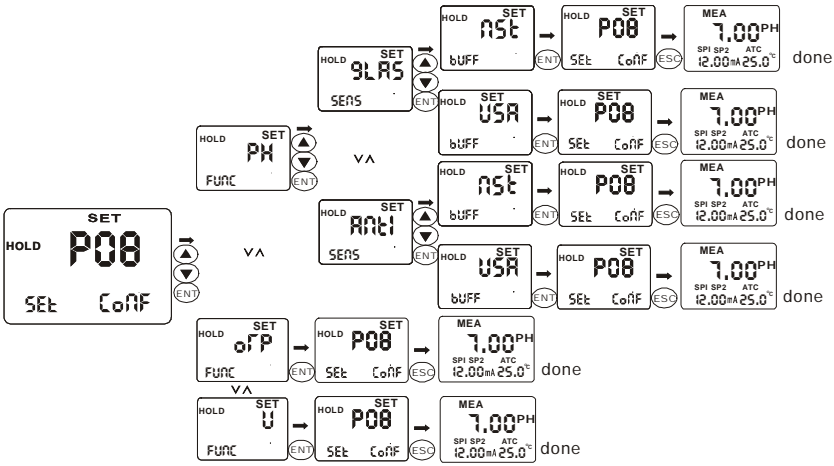


- In P08, Press to confirm and enter into concrete set up procedure.
- Press to confirm. If you select ORP or voltage measurement mode, after to confirm, instrument will return to P08 sub-function form. If you select pH measurement mode, instrument will enter electrode-select function form automatically. The lower display shows SENS, and main display zone. Shows electrode kind, glass electrode or antimony electrode. User can use or to select the electrode kind he need. Then, press to confirm and enter into select items for standard solution. The lower display shows BUFF while the upper display shows NST (Nist standard) or USA (USA standard). User can use or to select items according to kind of standard solution. Press to confirm and return to P08 sub-function form. Use or select other sub functions to set up.



NOTE : Press to quit set-up mode at any time. Instrument will return to measurement mode automatically.

5.9 P09 : TRANSMITTING RATE SUB FUNCTION

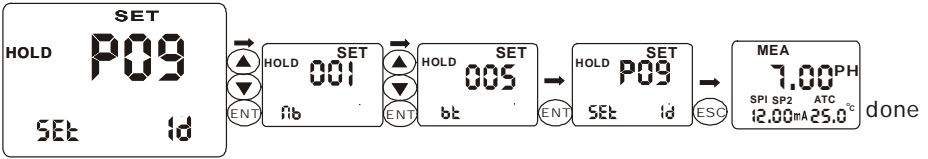

1. Press to confirm in P09 and enter in concrete set-up procedures.

2. The lower display shows **nb** while the upper display shows **001**, which indicates that user is setting communication address **ID NO.** of the instrument, from 001 to 128. Use or to select necessary ID and press to confirm. Then enter into next set up function form.

3. The lower display of the instrument shows **bt** while the upper display shows **005**, which indicates that user is setting communication rate function. Use or to select necessary communication rate. Press to confirm and return to P09 sub-function form. Use or to select other sub-function to set up.

4. Corresponding communication rate to codes.


bt	000	001	002	003	004	005	006	007
baud rate	300	600	1200	2400	4800	9600	19200	38400








Note : Press to quit set-up mode at any time.

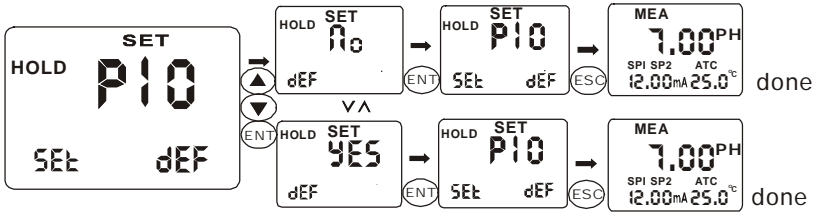Instrument will return to measurement mode automatically.

5.10 P10 : REVERTING TO FACTORY DEFAULT SETTINGS



1. Press  in P10 to enter into concrete set-up procedures.	
2. The lower display of the instrument shows DEF while the upper display shows NO (YES). User can press  or  to select necessary items. If select YES, all settings will be reset to factory default. User's setting will be lost.	
	NOTE : Press  to quit set-up mode at any time. Instrument will return to measurement mode automatically.

5.11 COMMUNICATION PROTOCOL

1、 protocol setting

This instrument uses RS-485 communication. It's can be connected with 1 to 64 instruments in 2 wires at the same time and communicate with PC. The distance of communication is around 1200M.

The data form is "N81"(1 start bit, 8 data bits,1 stop bit, NO verify check code)

The baud rate is 300 to 38400 bit/s (usually is 9600 bit/s)

Users have to set the ID(NB) of the instruments and the baud rate(BT) before connecting to RS-485

BT	0	1	2	3	4	5	6	7
Baud rate	300	600	1200	2400	4800	9600	19200	38400

Usually, the instrument is stand by in receiving status. Once it receives the correct ID then it will send out the data to PC. Finished sending it will enter to receive status again.

To avoid the conflict, each instrument has to use different ID(decided by NB)

All of the instruments and PC must use the same baud rate.(decided by BT)

2、 Data form

All one-word data is from -32767 to +32767, using the hexadecimal number system, the high bit is sign.

All one-byte is integer.

The data is ASCII code :the start sign is @(40H), the end sign is CR(0DH)

The other data use the ASCII code to express the hexadecimal number system

All data should be between 30H to 39H and 41H to 46H. the instructions are form 51H to 5AH.

Double-byte sending: the low byte is the first, the high byte is the second

One-byte sending: the high nibble is the first, the low nibble is the second.

A full communication form is :40 ,ID, the sequence of the instruction,CRC,0D

The ID is the number of the instrument(NB)

CRC is the Circulation redundant codes verification

3、 The communication instructions

- 1) RD: read floating data
- 2) RE: read the appointment data by start address and bytes (the large byte can not over 28 bytes)
- 3) RR: read all of data (8-word, 12-byte), totally 28 bytes.

4、 Introduce the instructions(the ID is 1)

- 1) RD (read the floating data): PC send :40,30,31,51,44,CRCH,CRCL,0D(8 bytes)
40: start byte
30 31: the ID of instrument (the hexadecimal: 0~3FH, ASCII: 30 30~33 46) ;
51 44: instruction of R, D
CRCH,CRCL: CRC
0D : the end byte

the response by instrument is "40, 30, 31, 52, 44, 30,
30,V1LH,V1LL,V1HH,V1HL,3X,V2LH,V2LL,V2HH,V2HL,3X,3X,3X,3X,3X,CRCH,CRCL,0D"

40 : the start byte

30 31 :the ID of instrument

52 44 30 30 : the fixed data

V1LH,V1LL, V1HH,V1HL: pH/ORP value

3X: the position of decimal(32:pH mode,2 decimal; 30:ORP/mV mode, no decimal)

V2LH, V2LL, V2HH, V2HL : temperature value

3X : the status of relay 1 , 30 :open ;31:close

3X : the status of relay 2 , 30 :open ;31 :close

3X : the status of relay 3, 30 :open; 31:close

3X : ERR status, 30 : correct; 31:error

3X : parameter modify, 30: no modify; 31:modify

CRCH,CRCL : CRC

0D : the end byte

Total : 24 bytes

- 2) RE (read the appointment data)
 The PC send : 40,30,31,52,45,30,30,adrH,adrL,lthH,lthL,CRH,CRL,0D (total 14 bytes)
 40 : the start byte
 30 31 : the ID of instrument (the hexadecimal: 0~3FH, ASCII: 30 30~33 46) ;
 52 45 : the instruction R, E;
 30 30 :reserve
 adrH adrL : the address of the start parameter byte(the hexadecimal: 0~1BH ; ASCII : 30 30~31 42) ;
 1thH 1thL : the count of the parameters (the hexadecimal: 1~1CH ; ASCII : 30 31~31 43) ;
 CRCH CRCL : CRC
 0D : the end byte

The adr is the start address(00~1BH) ,1th is the count of the byte. The table is the relation of the adr and parameter.

adr	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D
para	TST1	TST1	TST2	TST2	SP1U	SP1U	SP2U	SP2U	CURL	CURL	CURH	CURH	POFS	POFS
adr	0E	0F	10	11	12	13	14	15	16	17	18	19	1A	1B
para	HOR	HOR	AAA	FUNC	R3OP	TOFS	SEC	SP1D	SP1T	SP2D	SP2T	NB	BT	CONF

If adr>1BH or adr+1th>1BH, the return the error code: 40,30,31,52,45,2A,2A,CRH,CRL,0D
 The 2A 2A is the error sign

If the address range is correct then the instrument will send back data :
 40,30,31,52,45,D1,D2,D3,.....Dn,CRH,CRL,0D

- 40:the start byte
 30 31 : the ID
 52 45 : the fix data
 D1~Dn : parameters from instrument to PC
 CRCH , CRCL: CRC
 0D : the end byte

- 3) RR (read all of parameters) the PC send : 40,30,31,52,52,CRH,CRL,0D(8 bytes)
 40: the start byte
 30 31 : the ID

52 52 : the instruction of R, R
 CRCH,CRCL : CRC
 0D : the end byte

The instrument response : 40,30,31,52,52,D1 , D2,.....,D55 , D56,CRH,CRL,0D(64 bytes)
 40 : the start byte
 30 31:ID
 52 52 : the fix data
 D1~ D56 : the parameter of sending (8 double byte,12 byte, total 28 bytes)
 CRCH , CRCL: CRC
 0D: the end byte

4、 Notice for programming the communication program

If the instrument receives the data with the start byte is 40 and the count of sequence data over 16 bytes and did not find the 0D then the data is invalid. The instrument will not do any response.

If the sequence data is not between 00H to 0FH, the sequence data is invalid. The instrument will not do any response. But the other errors, ex: the wrong instruction, the wrong address, the wrong parameter counts, the wrong CRC and so on, the instrument will response the wrong information.

All parameters, please see the following table, some parameters are include decimal.

para	TST1	TST2	SP1U	SP2U	CURL	CURH	POFS	HOR	AAA	FUNC
decimal	1	1	0/2	0/2	0/2	0/2	0/2	0	0	0
para	R3OP	TOFS	SEC	SP1D	SP1T	SP2D	SP2T	NB	BT	CONF
decimal	0	1	0	0/2	0	0/2	0	0	0	0

The PC display the reading values should be include the decimal.

TOFS is the correct value of temperature, the setting range is 0~200, the display range is -100~100, so the PC should be subtract 100 and display with sign.

- 1) FUNC is the display mode of instrument : 0=mV; 1=ORP; 2=pH
- 2) R3OP is the mode of relay 3: 0=NOR ; 1=SP1 ; 2=SP2 ; 3=ALL ; 4=CAL ; 5=CLE ◦
- 3) AAA is the reserve parameters
- 4) CONF is a byte parameter, the define is following,
 - Bit 7 : temperature compensation : 1=automation 2>manual
 - Bit 6: current output, 1=4~20mA ; 0=0~20mA ;
 - Bit 5: SP1 , 1=HI ; 0=LO ;
 - Bit 4: SP2 , 1=HI ; 0=LO ;
 - Bit 3 : control mode , 1=PLC ; 0=Lit ;
 - Bit 2 : electrode selection , 1=ANTI ; 0=GLAS ;
 - Bit 1: buffer, 1=NST ; 0=USA;
 - Bit 0 :reserve

6 TECHNICAL PARAMETERS

6.1 TECHNICAL PARAMETERS FORM

PHCN-962 Transmitter / Controller	
pH Range	-2.00 to 16.00 pH
Analytical degree & precision	0.01 pH and ± 0.01 pH
mV Range	-1999 to 1999 mV
Analytical degree & precision	1 mV / ± 1 mV
Temperature	-9.9 to 130 °C
Analytical degree & precision	0.1 & ± 0.5 °C
Temperature electrode	Pt 1000
Temperature compensation	Automatic (± 10 °C offset adjustment) / manual
Set point and control function	
Control function	Limited point / proportion (pulse length)
Cleaning circle	From 1 to 999 hours
Cleaning time	From 1 to 999 seconds
Control hysteresis band	0.01 to 2 pH
ORP hysteresis band	1 to 200 mV
Relay output	Three SPST relays · 250V1A
Communication	
RS-485	client program
Electric current information and connection	
Electric source	110 or 220 V AC / 60 or 50 Hz
Signal output / load	0/4 – 20 mA isolated current output
Signal output load	600 Ω
pH / ORP input	BNC (10^{13} impedance)
Connection terminal	Removable plug-in unit
Main fuse wire	250 mA, anti-surge
Alarm function	
Function (switch able)	Close
Display	
LCD(liquid crystal display)	Big-size screen of crystal display, blue back light
EMC Specification	
Electromagnetic emission	EN 50081-1
Electromagnetic induction	EN 50082-1
Environmental conditions	
Working temperature	-10 to 50 °C (14 to 122 °F)
Humidity	10 to 95% (no frozen dew)
Protection grade	NEMA 4X, IP 65

6.2 PARAMETER SETTING AND FACTORY PRELIMINARY VALUE

NO.	Indication	Parameter Name	Symbol	Contents	Remark	Valid range	Factor y value
01		LOCK	LOC	Password for entering function		0~200	0
02	P1	ATC	AtC	Auto temperature compensation		ON/OFF	OFF
03	TC	TSET1	tSt1	Temperature set up of manual	Only valid for manual	-10.0~100.0℃	25.0
04		TSET2	tSt2	Calibration temperature set up		0.0~60.0℃	25.0
05		TOFS	tOfS	Temperature measurement offset	Only valid for manual	-10.0~10.0℃	0.0
06	P2	POFS	POFS	PH value measurement offset	Only valid for PH mode	-2.00~2.00PH	0.00
	OFS	VOFS	VOFS	mV value measurement offset	Only valid for ORP mode	-200~200mV	0
07	P3	CTYP	CtyP	Type of current output		0/4 ~20mA	4
08	CUr	CURL	CUrL	Low limit of transmitting output	PH mode: 0.01PH unit	-1999~1999	0
09		CURH	CUrH	High limit of transmitting output	ORP mode: 1mV unit	-1999~1999	1400
10	P4Cntr	CNTR	Cntr	Control way of relay 1, 2		PLC/ Lit	Lit
11	P5	SP1	SP1	Way set up of relay 1		HI / LO	LO
12	SP1	SP1U	SP1U	Setting value of relay 1	PH mode: 0.01PH unit	-1999~1999	400
13		SP1D	SP1d	Relay 1 hysteresis / proportion	ORP mode: 1mV unit	0~200 (2.00)	10
14		SP1T	SP1t	Relay 1 circle (second)	Only valid for PLC	0~200 seconds	20
15	P6	SP2	SP2	Way set up of relay 2		HI / LO	HI
16	SP2	SP2U	SP2U	Setting value of relay 2	PH mode: 0.01PH unit	-1999~1999	1000
17		SP2D	SP2d	Relay 2hysteresis / proportion	ORP mode: 1mV unit	0~200 (2.00)	10
18		SP2T	SP2t	Relay 2 circle (second)	Only valid for PLC	0~200 seconds	20
19	P7 rL3	R3OP	r3OP	Working mode of relay 3		OFF/SP1/SP2/ ALL/CAL/CLE	CAL
20		INT	HO _r	Interval (hour)	valid for calibration and cleaning mode	0-999	100
21		DUR	SEC	Operating time (second)	valid for cleaning mode	0-200	30
22	P8	FUNC	FUnC	PH / ORP/mV select		PH/ORP/mV	PH
23	CONF	SENS	SenS	Antimony / glass electrode select	Only valid for PH mode	Anti/GLAS	GLAS
24		BUFF	buFF	USA/nST standard select		NST/USA	USA
25	P9	NB	nb	Set ID number for 485		0-63	1
26	ID	BT	bt	Communication rate		0-7	5
27	P10 DEF	DEF	dEF	Reverting to factory default setting	Reset to factory default parameter.	YES/NO	NO


APPENCLIX 2 – pH TEMPERATURE CORRESPONDING TO pH BUFFER SOLUTION

Following form shows standard pH value of pH standard buffer solution under different temperature

Temperature (°C)	pH 1.00	pH 4.01	pH 6.86	pH 7.00	pH 9.00	pH 9.18	pH 10.01
0	0.96	4.01	6.98	7.12	9.33	9.47	10.32
5	0.99	4.01	6.95	7.09	9.24	9.38	10.25
10	0.99	4.00	6.92	7.06	9.16	9.32	10.18
15	0.99	4.00	6.90	7.04	9.11	9.27	10.12
20	1.00	4.00	6.88	7.02	9.05	9.22	10.06
25	1.01	4.01	6.86	7.00	9.00	9.18	10.01
30	1.01	4.01	6.85	6.99	8.95	9.14	9.97
35	1.01	4.02	6.84	6.98	8.91	9.10	9.93
40	1.01	4.03	6.84	6.97	8.88	9.07	9.89
45	1.01	4.04	6.83	6.97	8.85	9.04	9.86
50	1.01	4.06	6.83	6.97	8.82	9.01	9.83
55	1.01	4.08	6.83	6.97	8.79	8.99	9.81
60	1.02	4.10	6.84	6.98	8.76	8.96	9.79
70	1.02	4.12	6.85	6.99	8.72	8.92	9.76
80	1.02	4.16	6.86	7.00	8.68	8.89	9.74
90	1.02	4.20	6.88	7.02	8.65	8.85	9.73

Appendix 3 – hysteresis band


Simple Explanation on the Function of Hysteresis Band

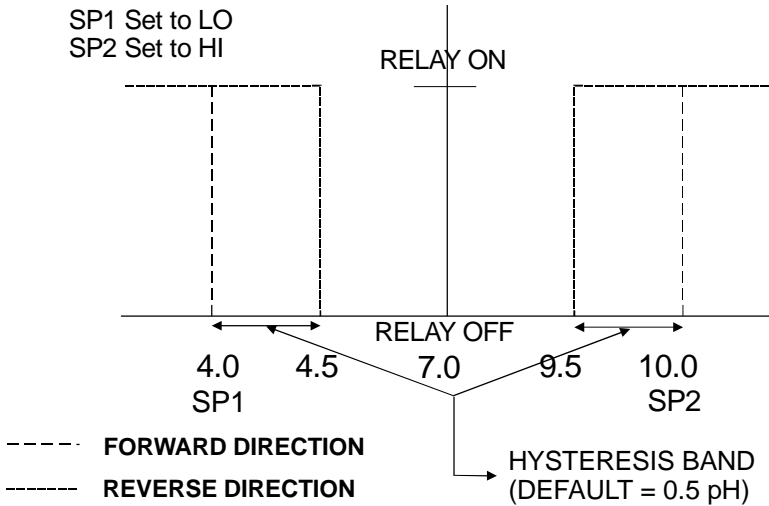


The controller relay activates when the set-point is reached. In the reverse direction, it closes. Relay continues to be active till the value reaches the amount set by hysteresis band.

APPENCLIX 4 – CONTROL MOVEMENT


General Instructions Concerning Controller Setting

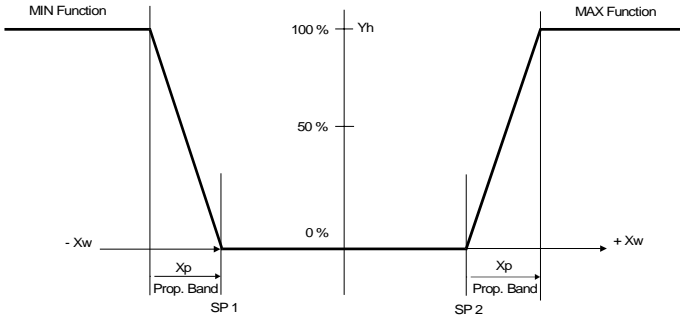

Control characteristic of P-Controller as proportional controller

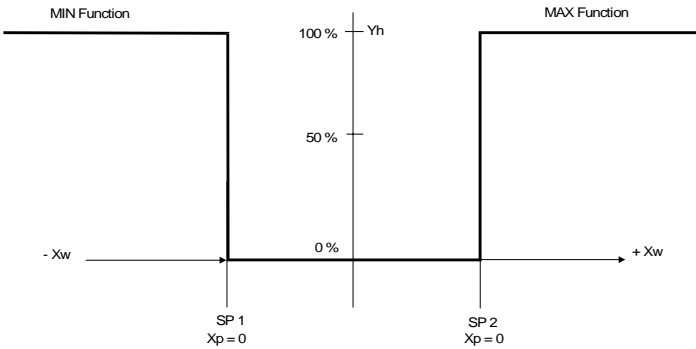

Control characteristic of P-Controllers as limit value switch **Control signal of pulse length control**

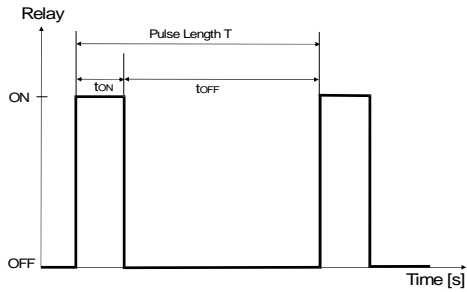

Control signal and pulse length control

Out put of relay controlled by hysteresis band is time. Crile T for open or close is constant. Different value comes from limited value, increase or decrease of open time is in accordance with proportion range.

Following applications :

$$t_{ON} + t_{OFF} = T \text{ (Const.)}$$

greater divergence \rightarrow greater t_{ON}

Xp exceeded $\rightarrow t_{ON} = T$ (relay remains picked up)

ACCESSORY 5 – ABBREVIATIONS IN FUNCTION FORM

<i>Character</i>	<i>Meaning</i>
MEA	Measurement mode
CAL	Calibration mode
ENT	Confirm
OFS	Zero point offset
SET	Set up
ATC	Automatic temperature cor
SP1	Set point 1
SP2	Set point 2
LO	Low limit
HI	High limit
CNtr	Control
Lit	Limited point control
PLC	Pulse length control
RL3	Relay
OUT	Output signal
CONF	Configuration
CLE	Clean
GLAS	Glass electrode
ANTI	Antimony electrode
DEF	Default
CUR	Output electric circuit 1

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. **BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS).** The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY RETURNS**, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY REPAIRS**, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2006 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

**Where Do I Find Everything I Need for
Process Measurement and Control?
OMEGA...Of Course!
Shop online at omega.com**

TEMPERATURE

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- Transducers & Strain Gages
- Load Cells & Pressure Gages
- Displacement Transducers
- Instrumentation & Accessories

FLOW/LEVEL

- Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- Totalizers & Batch Controllers

pH/CONDUCTIVITY

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

DATA ACQUISITION

- Data Acquisition & Engineering Software
- Communications-Based Acquisition Systems
- Plug-in Cards for Apple, IBM & Compatibles
- Datalogging Systems
- Recorders, Printers & Plotters

HEATERS

- Heating Cable
- Cartridge & Strip Heaters
- Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

ENVIRONMENTAL

MONITORING AND CONTROL

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater Treatment
- pH, Conductivity & Dissolved Oxygen Instruments