

1 YEAR
WARRANTY

Ω OMEGA™ User's Guide



OM-CP-OCTPRO **Portable Data Acquisition Logger**



omega.com info@omega.com

Servicing North America:

**U.S.A.
Headquarters:**

Omega Engineering, Inc.

Toll-Free: 1-800-826-6342 (USA & Canada only)

Customer Service: 1-800-622-2378 (USA & Canada only)

Engineering Service: 1-800-872-9436 (USA & Canada only)

Tel: (203) 359-1660

Fax: (203) 359-7700

e-mail: info@omega.com

For Other Locations Visit omega.com/worldwide

PRODUCT OVERVIEW

Device Overview

The Omega OM-CP-OCTPRO is a portable, multi-use industrial data logger with eight channels and a user-friendly touchscreen interface. This versatile logger measures and records temperature, current, voltage and pulse simultaneously and displays data in real time. The OM-CP-OCTPRO is compatible for use with many thermocouple, RTD or thermistor probes as well as a number of voltage output sensors, current switches, transmitters and transducers.

Versatility makes OM-CP-OCTPRO the perfect companion for industrial engineers, quality assurance professionals, compliance officers or automotive technicians. The OM-CP-OCTPRO is very easy to use and configure via the built in capacitive touchscreen graphic display.

The OM-CP-OCTPRO is a powerful, independent tool. Unlike many other data loggers, the OM-CP-OCTPRO delivers an all-in-one data collection and monitoring solution that does not require a PC or any downloaded software for operation.

TABLE OF CONTENTS

5 User Interface

14 Logging Data

17 Viewing Data

19 Managing Data

24 Device Settings


26 Specifications

28 Index

External Features



- **Power Button:** To power on and power off the device, hold down the Power button for 3 seconds.
- **Home Button:** The Home button will return the user to the home screen (details on [page 6](#)).
- **Input Ports:** The OM-CP-OCTPRO features 8 sensor channel inputs plus one alarm port and a ground (details on [pages 3-4](#)).
- **LCD Touchscreen:** 5 inch LCD capacitive touchscreen.
- **USB Port:** The OM-CP-OCTPRO has a built-in USB port for downloading data to a flash drive.
- **Power Input:** Charging port.

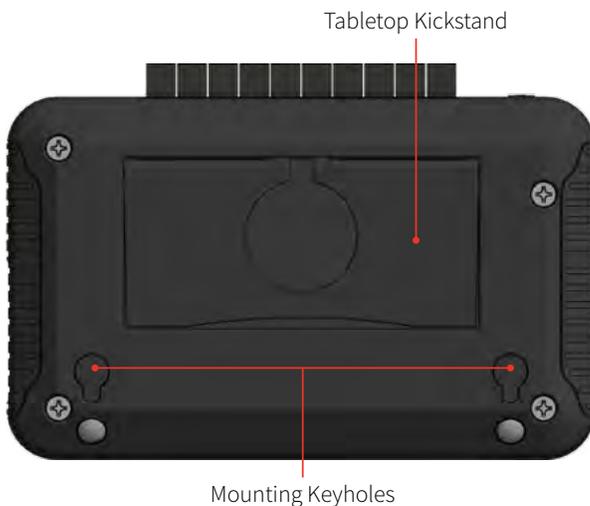


PRODUCT OVERVIEW

Device Orientation

The OM-CP-OCTPRO display can rotate 180 degrees depending on the desired orientation of the device. This option is available from the Settings menu under the Display section. **Please note:** Power restart required in order to apply screen rotation.

Desktop Orientation

For handheld and tabletop use, the inputs will be on the top. Note port number as it relates to device orientation.

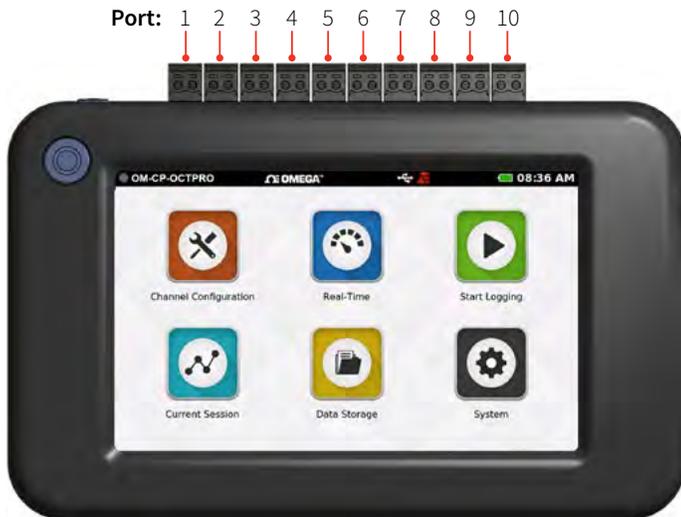

Wall Mount Orientation

For wall mount use the unit will be rotated so that the inputs will be on the bottom.



Tabletop Orientation

The OM-CP-OCTPRO features a built in kickstand on the back of the device for use on a flat surfaces.



Device Ports

The OM-CP-OCTPRO features 10 ports. Please refer to the images above for the port number as it relates to device orientation.

Channels and Functions

- Ports 1 thru 8 are sensor input channels (Temperature, Current or Voltage)
- Port 9 serves as an alarm output
- Port 10 serves as a ground for the device

Frequency or Pulse Counter

Can only be used on port 1

3-Wire and 4-Wire PT100 RTD Sensors

Use ports 1-2, 3-4, 5-6, or 7-8

2-Wire PT100 RTD Sensors

Can be used on ports 1-8

PRODUCT OVERVIEW

Sensor Types & Measurement Ranges

Each of the 8 input channels can be individually configured for the following types and sensor ranges.

| PARAMETER | INPUT TYPE | RANGE |
|-------------------------------|-------------------------|---------------------------|
| Current | Current input | -5 mA to 50 mA |
| Frequency (port 1 only) | Frequency input | 0 to 25,000 Hz |
| Pulse / Counter (port 1 only) | Pulse input | 0 to 4,000,000,000 Pulses |
| Voltage | Volt input | -0.5 V to 12.0 V |
| Voltage | Millivolt input | -100 mV to 2450 mV |
| Temperature | Thermistor NTC-1 (2252) | -25 °C to +150 °C |
| Temperature | Thermistor NTC-2 (10K) | -25 °C to +150 °C |
| Temperature | PT100 RTD 2-Wire | -200 °C to +850 °C |
| Temperature | PT100 RTD 3-Wire | -200 °C to +850 °C |
| Temperature | PT100 RTD 4-Wire | -200 °C to +850 °C |
| Temperature | Thermocouple J | -210 °C to +760 °C |
| Temperature | Thermocouple K | -270 °C to +1370 °C |
| Temperature | Thermocouple T | -270 °C to +400 °C |
| Temperature | Thermocouple E | -270 °C to +980 °C |
| Temperature | Thermocouple R | -50 °C to +1760 °C |
| Temperature | Thermocouple S | -50 °C to +1760 °C |
| Temperature | Thermocouple N | -270 °C to +1300 °C |
| Temperature | Thermocouple B | +50 °C to +1820 °C |


Powering, Charging and Downloading Data



USER INTERFACE

Top Menu Bar

The top bar of the OM-CP-OCTPRO Interface features status icons and useful information to refer to while using the device.

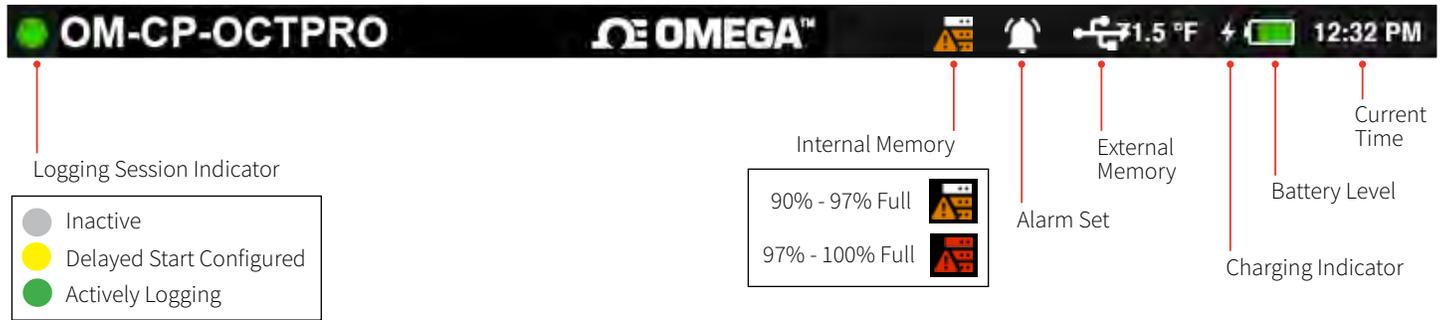

Home Screen

The Home screen will display the following options when the Home button is selected.

- **Channel Configuration:** Configure parameters and options for each channel.
- **Real-Time:** Quickly view Real-Time data for all active channels.
- **Start Logging:** Start logging using current settings. (Stop logging if device is actively logging.)
- **Current Session:** View data from the current logging session as graph, tabular or real-time.
- **Data Storage:** View, Copy, Delete and Add notes to logged sessions.
- **Settings:** Access device preferences and options.



USER INTERFACE

First Time Use

Follow these steps when the device is powered up for the first time or if the battery has been removed or replaced.

1

POWER BUTTON

Press and hold the Power Button for 3 seconds to power up the device.



2

SCREEN READY

Wait for the device to initiate, you will see the Omega logo when complete.



3

SELECT SCREEN ORIENTATION

For desktop use, inputs are facing upward.
For wall mounted use, inputs are facing downward.



4


SET UP INITIAL DATE AND TIME

Enter the local date and time to be used by the device and click **Next** to continue to Home screen.



5


When the device presents the Home screen it is ready to use.

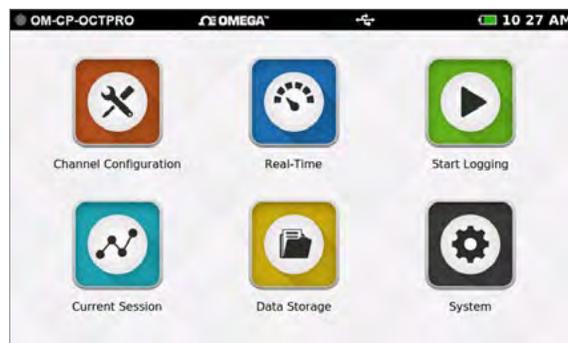

USER INTERFACE

Channel Configuration

When the Channel Configuration icon is selected, the device will display the screen shown below

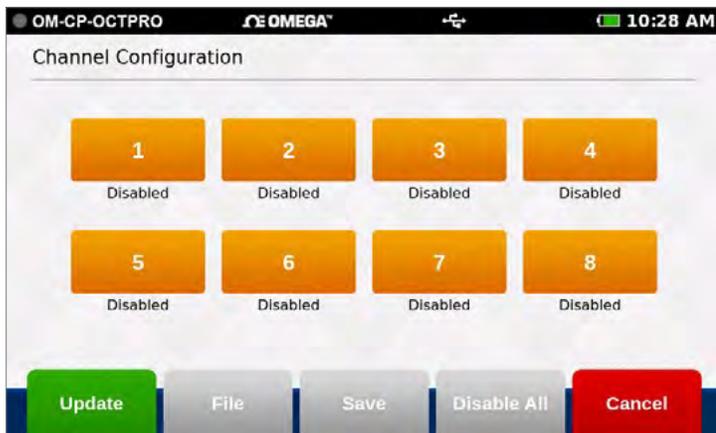


- **Channel 1-8:** Configures the type of channel input, units, engineering units (if applicable), alarms and user calibration adjustments.
- **Update:** Applies the current channel configuration to make the device ready to start logging or display real-time data.
- **File:** Loads previously saved channel configurations.
- **Save:** Saves the current channel configuration so it may be loaded and used later.
- **Disable All:** Clears the configuration of all channels, returning them to the default disabled status.
- **Cancel:** Cancels changes and then goes back to the Home screen.



Select Channel Configuration

Channel Setup

When the user selects a Channel, the device will display the Channel Setup screen with several options.

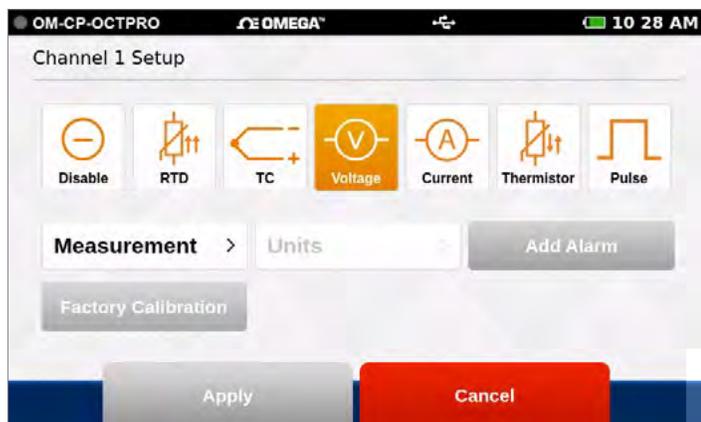

- **Disable** (Channel is not being used)
- **RTD** (RTD probe)
- **TC** (Thermocouple probe)
- **Voltage**
- **Current**
- **Thermistor** (Thermistor probe)
- **Pulse** (Only available on channel 1)



Select Channel Configuration




Select Channel

USER INTERFACE

Measurement Setup

When the user selects a Measurement Parameter, the device will display the relevant options for that selection. Example shown are the Voltage options.

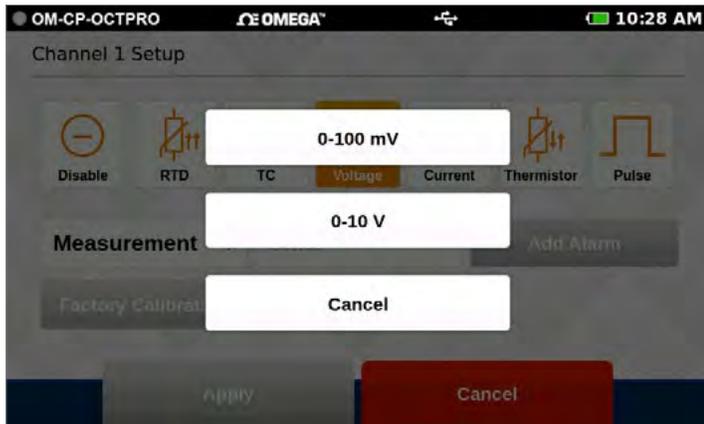


Select the **Measurement** button to display a pop-up screen of relevant measurement types to choose from.




Measurement Units

When the user selects the Units button, the device will display a pop-up menu of the relevant options for that selection. Example shown are the Voltage options.

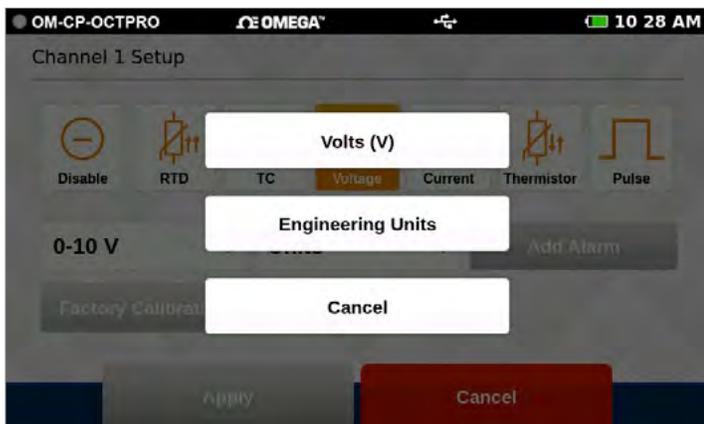

Engineering Units: This will be an option to set up if the user selects the Voltage, Current or Pulse sensor (see details below and on [page 9-10](#)).

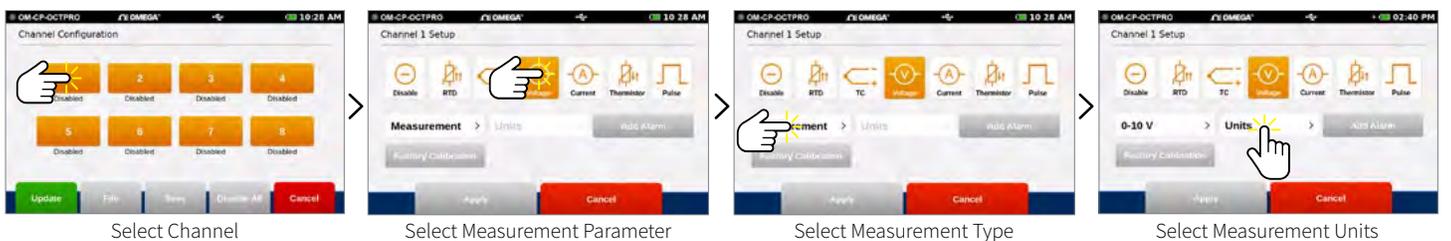


USER INTERFACE

Engineering Units

Engineering Units can be applied to any channel measuring Voltage, Frequency or Pulse to display readings in a user selected custom unit of measure.

- **Gain:** User selected gain value.
- **Offset:** User selected offset value.
- **Units Label:** User selected label to display.
- **Apply:** Saves the settings.
- **File:** Retrieves a previously saved Engineering Unit setting.
- **Save:** Saves the Engineering Unit setting for future use.
- **Wizard:** Allows the user to set up units by entering the input and output values for low and high scale points. The unit will automatically calculate the gain and offset from these values.
- **Cancel:** Returns the user to the Channel Configuration screen.

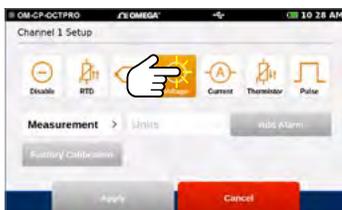


Select Measurement Parameter



Select Measurement Type



Select Measurement Units

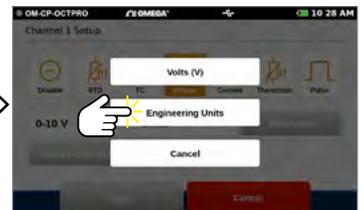

Select Engineering Units

USER INTERFACE

Setting Up Engineering Units

Channel 1 Engineering Unit (V)

| | |
|---------------------|--------------|
| Gain | Offset |
| Value | Value |
| Unit of Measurement | Abbreviation |
| Descriptive | Symbolic |

Apply File Save Wizard Cancel

Enter the unit of measurement and abbreviation.

Channel 1 Engineering Unit (V)

| | |
|---------------------|--------------|
| Gain | Offset |
| Value | Value |
| Unit of Measurement | Abbreviation |
| ppm | ppm |

Apply File Save Wizard Cancel

Click the **Wizard** button to launch the Engineering Unit Wizard.

Channel 1 Engineering Unit Wizard

| | | |
|-------------------|------------|---------------|
| | Input (mA) | Output (mg/l) |
| Low Scale Point: | Value | Value |
| High Scale Point: | Value | Value |

Apply Cancel

Enter the low and high scale point inputs and outputs and click **Apply**.

Channel 1 Engineering Unit (V)

| | |
|---------------------|--------------|
| Gain | Offset |
| 62.5 | -250 |
| Unit of Measurement | Abbreviation |
| ppm | ppm |

Apply File Save Wizard Cancel

The gain and offset are automatically set. Click **Save** to save the engineering units to the channel and click **Apply** to apply the changes to current logging session.

USER INTERFACE

Keyboard Function


When the user taps in any text field within the interface, the keyboard will appear. The numeric keypad appears when the Gain and Offset fields are selected. The keyboard appears when Unit of Measurement and Abbreviation fields are selected.

To prevent the keyboard from obscuring content, the screen will always focus on the selected field and bring it into view. Once the text field is complete, the user can tap anywhere on the screen and the keyboard will disappear from view.



Alarms

Users can create one alarm configuration per channel with up to two alarm values per channel (above and below threshold).

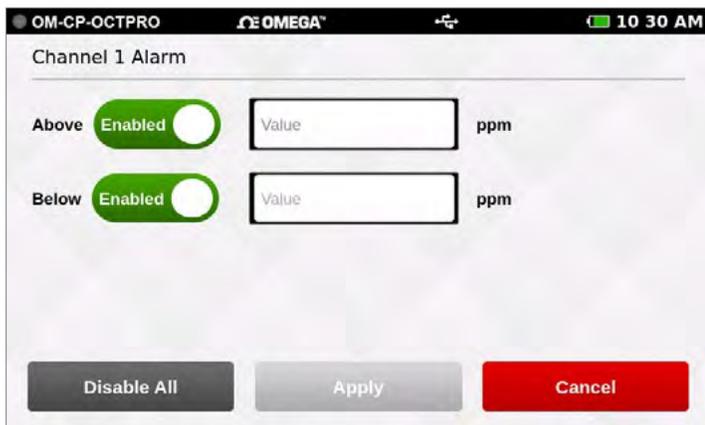

- **Above:** Indicates the high reading threshold at which the alarm becomes active.
- **Below:** Indicates the low reading threshold at which the alarm becomes active.
- **Enabled/Disabled:** Tap the button to either enable or disable the text field to enter desired alarm value.
- **Disable All:** Clears the alarm settings.
- **Apply:** Applies the setting to the current channel.
- **Cancel:** Cancels changes and then returns the user to the Channel Configuration screen.



Select Channel Configuration



Select Channel




Select Add Alarm


USER INTERFACE

Factory Calibration

The OM-CP-OCTPRO comes with a complete Factory Calibration and provides users the ability to adjust the calibration settings per channel, and roll back to the factory settings at any time. **Note:** For best performance and accuracy, Factory Calibration should be performed at least once every 12 months.

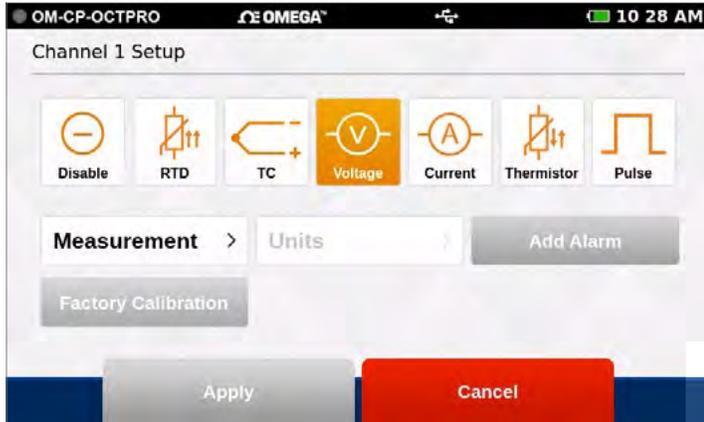


Factory Calibration: Indicates the device is currently in the factory calibrated state.

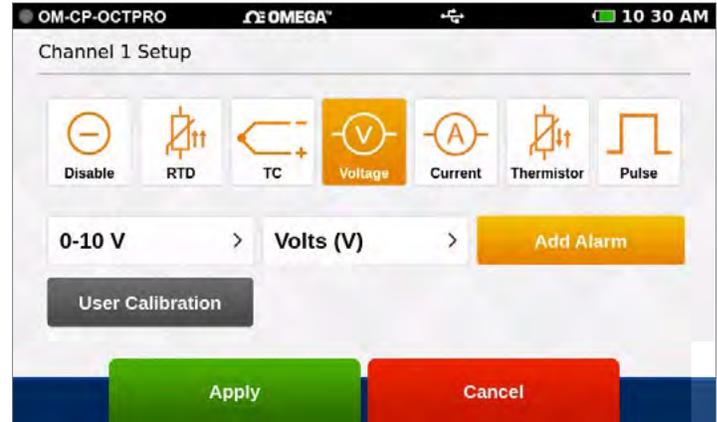

User Calibration: Indicates the calibration settings have been modified by the user.

Channel Configuration Overview

An example of a completed channel configuration screen is shown below.

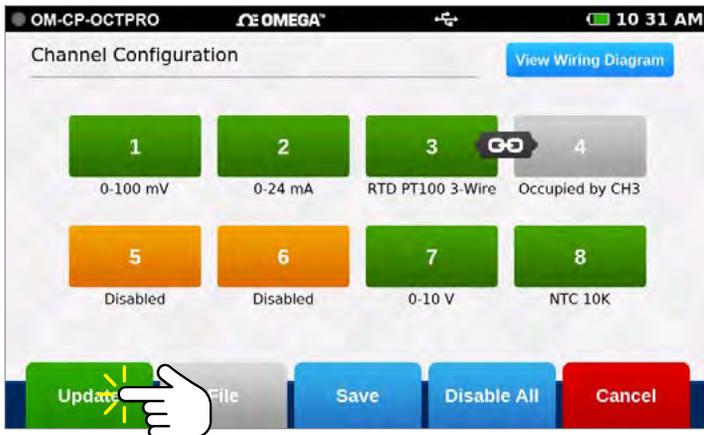

Apply Channel Configuration

Once channels are configured as desired, the user must then select **Update** to use those settings.

A pop-up as shown to the right will confirm that settings have been applied.




- **View Wiring Diagram:** Shows how to properly wire the device.
- **Green Channel:** Enabled channel.
- **Orange Channel:** Disabled channel.
- **Linked Channels / Gray Channels:** 3 or 4 wire RTD sensor types can be selected for Channels 1, 3, 5 and 7. This sensor type will also occupy the next sequential channel and will be visually represented with a Link icon as seen between Channels 3 and 4 on the screen to the left.
- **Update:** Once the user has configured the channel settings, this button will apply the current settings to all channels.
- **File:** Loads previously saved configurations.
- **Save:** Saves the current Channel Configuration so it may be loaded and used in the future.
- **Disable All:** Clears the programmed channels to disable all.
- **Cancel:** Cancels user changes and then goes back to the Home screen.

USER INTERFACE


Save Configuration Settings

Completed channel configurations can be saved for repeated use. The user can select Save from the channel configuration screen to select a name for the saved settings file and apply them.

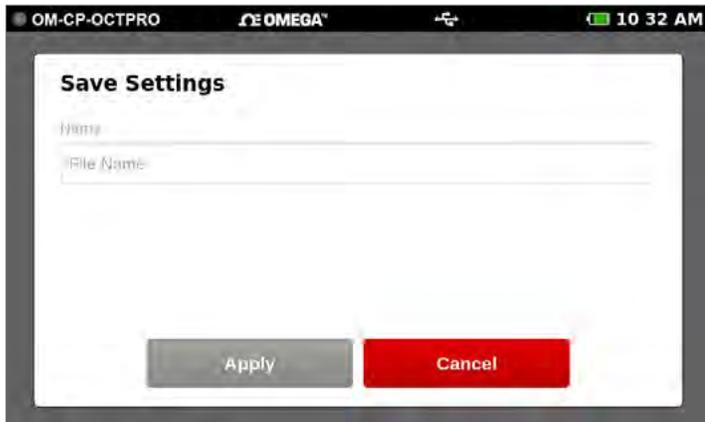


Load Configuration Settings

Saved channel configurations can be easily loaded for repeated use. The user can select File from the channel configuration screen to choose from the list of previously saved settings files. **Note:** Loading a saved settings file will replace the existing configuration.

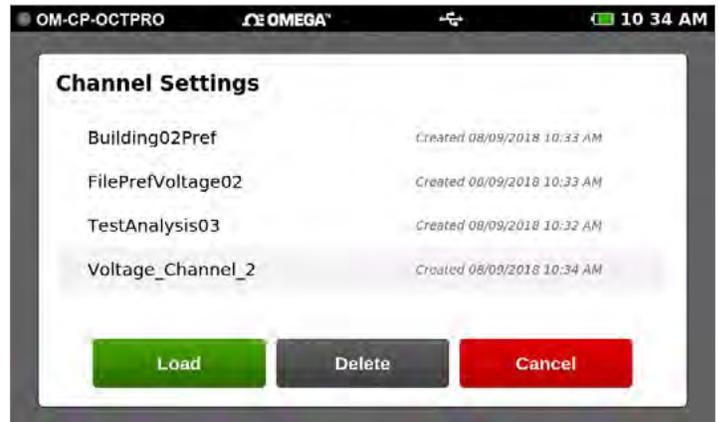

Select Channel Configuration

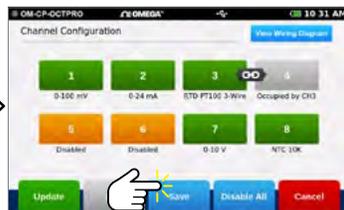

Select Save




Select Channel Configuration




Select File

Wiring Diagram

From the channel configuration screen, the user can select the Wiring Diagram button to display the proper wiring of the unit based on the currently applied configuration. *Please note the position of channel 1 in regards to screen orientation.*

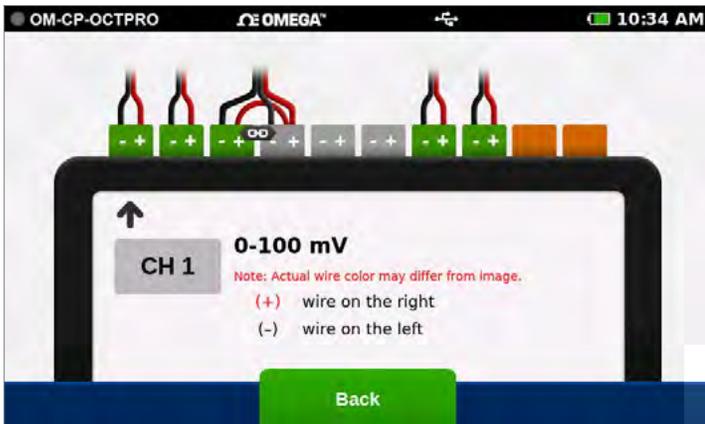

Select Channel Configuration

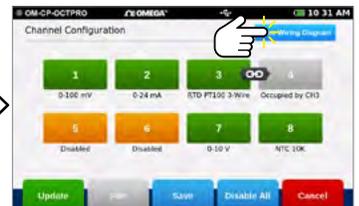


Select View Wiring Diagram

LOGGING DATA

Start Logging

When Start Logging is selected from the Home screen, the Logging Configuration screen will appear and the user will be prompted to name the data logging session. If the user has not already configured the channels, they will be prompted to configure prior to starting a logging session. The user will be able to configure start time, stop time, and reading rate in addition to naming the logging session.

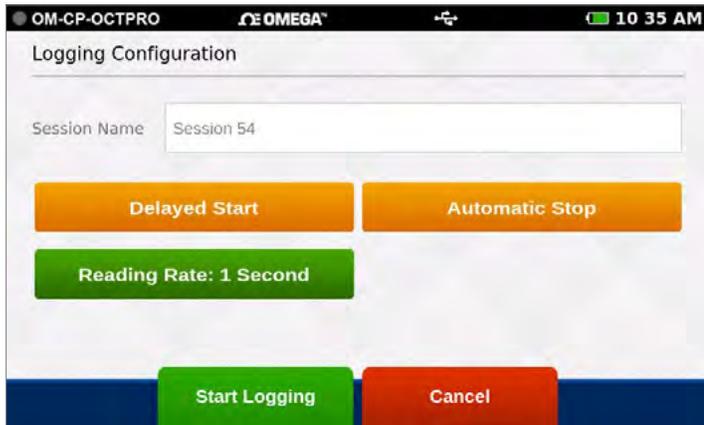

Select Start Logging




Keyboard will appear when user taps in the session text field.

- **Session Name:** Enter the desired name for the logging session. If no name is given, a unique default name will be assigned (i.e. Session 1).
- **Delayed Start:** Select a Delayed Start time or tap the Start Logging Data button to start immediately.
- **Automatic Stop:** The user has the option of selecting an Automatic Stop time. If no time is selected, the user will use the Stop Logging button on the Home screen to manually stop the device.
- **Reading Rate:** The reading rate will default to 1 minute or use the setting of the last session configuration. Maximum number of readings per session is 1,000,000.
- **Start Logging Data:** Begins logging data immediately.
- **Cancel:** Cancels user changes and returns back to the Home screen.

Delayed Start

Selecting Delayed Start will bring up the following configuration screen.

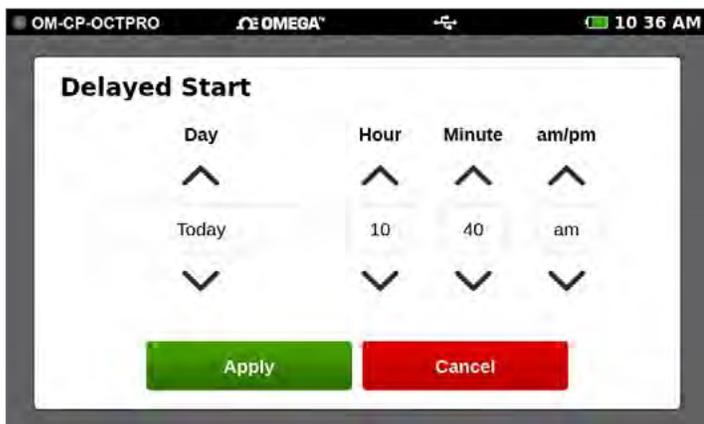

Select Start Logging




Select Delayed Start

- **Day:** Using the up and down arrows, the user is able to adjust the day.
- **Hour:** Using the up and down arrows, the user is able to adjust the hour.
- **Minute:** Using the up and down arrows, the user is able to adjust the minute.
- **am/pm:** Using the up and down arrows, the user is able to select am or pm (12-hour clock only).
- **Apply:** Applies the start or stop time settings and returns the user back to the Logging Configuration screen.
- **Cancel:** Returns the user to the Logging Configuration screen.


LOGGING DATA

Automatic Stop

Selecting Automatic Stop will bring up the following configuration screen.

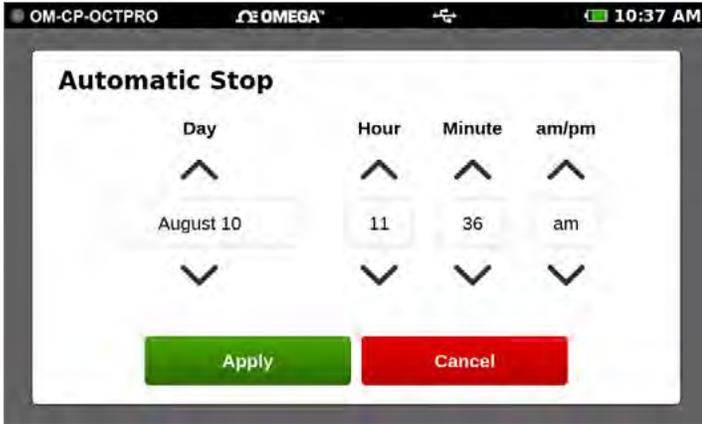

- **Day:** Use the up and down arrows to adjust the day.
- **Hour:** Use the up and down arrows to adjust the hour.
- **Minute:** Use the up and down arrows to adjust the minute.
- **am/pm:** Use the up and down arrows to select am or pm (12-hour clock only).
- **Apply:** Applies the start or stop time settings and returns the user back to the Logging Configuration screen.
- **Cancel:** Cancels the start or stop time settings and returns the user to the Logging Configuration screen.


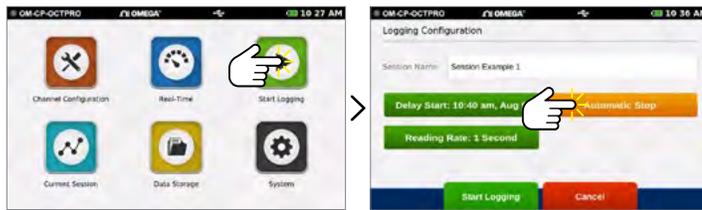


Select Start Logging

Select Automatic Stop

Reading Rate

When the user selects Reading Rate, the following configuration screen will appear. Once the desired reading rate is selected, the user must select Apply to use that option, or Cancel to return to the previous screen. See [page 27](#) for available reading rates.

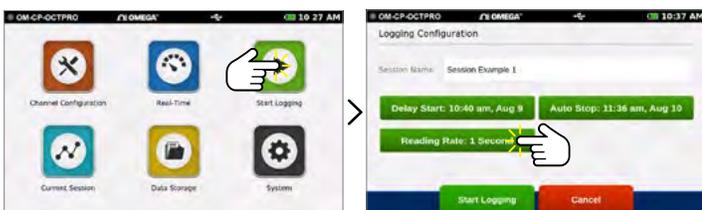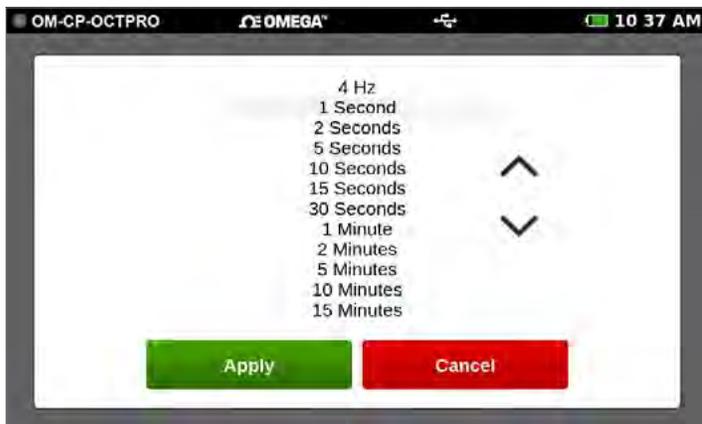


Select Start Logging

Select Reading Rate

LOGGING DATA

Review Session Details and Start Logging

Once the user selects a Session Name, Start Time, Stop Time and Reading Rate, the screen will look similar as it does below. Once the settings are complete, the user will select Start Logging to begin Logging Mode. After selecting Start Logging, the user will be brought to the Home screen.

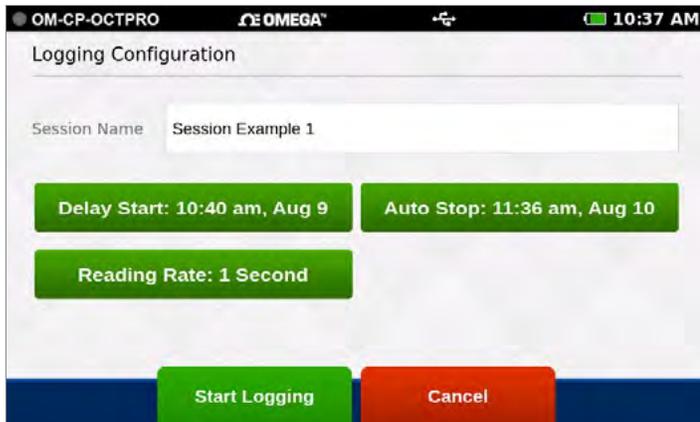

Device Memory Warning


After selecting Start Logging, if the internal memory of the device is 100% full, the user will be notified with a pop-up warning message and two options to choose from. This warning will also appear if the internal memory of the device reaches 100% capacity while actively logging.



- **View Stored Sessions:** Takes the user to the Data Storage screen to delete or remove stored data from the device.
- **Dismiss:** Returns the user back to the Home screen and logging will not start.

Stop Logging

To manually stop a logging session, the user will select the Stop Logging button from the Home screen. **Note:** Access the Home screen at any time by pressing the Home button.

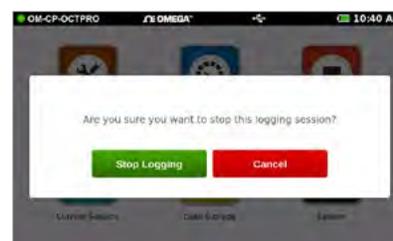

Stop Logging Confirmation


When the user selects Stop Logging, a pop-up screen will emerge prompting the user to confirm the action.

- **Stop Logging:** Ends the current logging session.
- **Cancel:** Continues logging and returns the user to the Home screen.


VIEWING DATA

Real-Time Data


When Real-Time is selected from the Home screen, the device will display data from all enabled channels and update at the user selected reading rates. The Real-time view is also available from the Current Session menu when the device is actively logging.

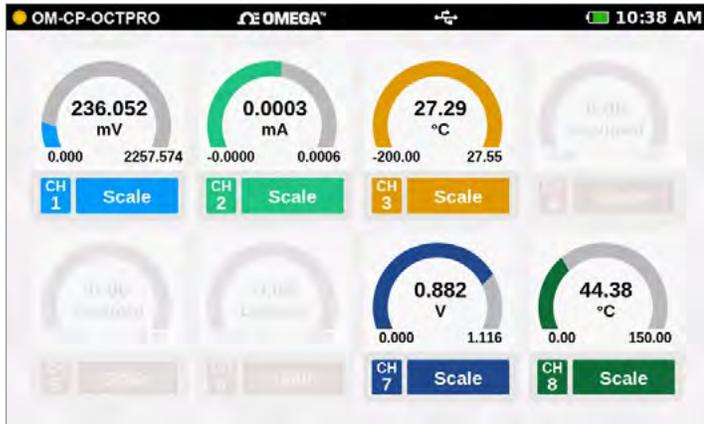

- **Current Reading:** Displayed in the center of the gauge.
- **Minimum:** Displayed on the bottom left of each gauge.
- **Maximum:** Displayed on the bottom right of each gauge.
- **Zero:** (Pulse Only) Resets the displayed reading to zero.
- **Scale:** Scales the readings on the screen. Maximum value will be reset to the current value.

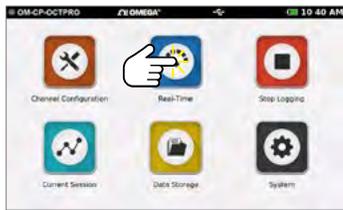


Select Real-Time

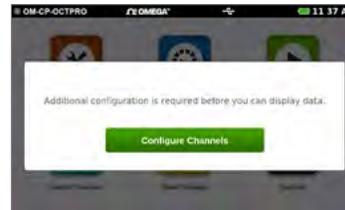

Configuration Warning
Real-Time data is only available if the device channels are configured.

Current Session — Graph View

Select the Current Session button from the Home screen to view the recorded data in various formats, swipe the screen to the left or right to navigate.

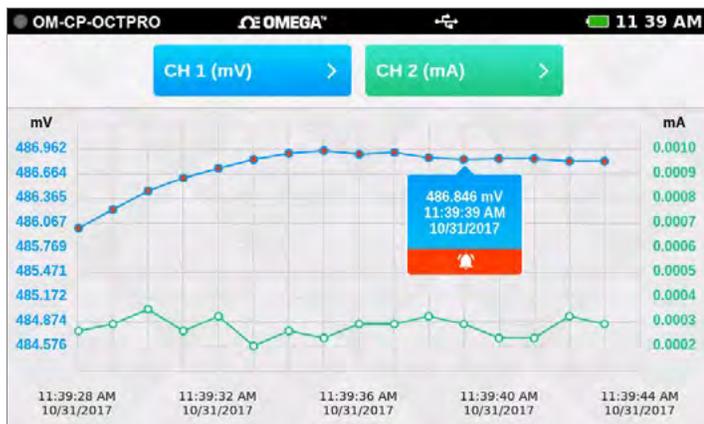

Graph View

- Use the drop down menus at the top to select which channels to view.
- Touch any point on the graph line to display more detailed information.
- Triggered alarm events will be visible within the graph.



Select Current Session



Swipe to Navigate

Swipe Options

- Swipe left at the top of the screen to go to the tabular data view.
- Swipe within the graph to scroll through the graph timeline.


VIEWING DATA

Current Session – Tabular View

Select the Current Session button from the Home screen to view the recorded data in various formats, swipe the screen to the left or right to navigate.

| TIME | CH 1 (mV) | CH 2 (mA) | CH 3 (°C) | CH 4 (Occupied) |
|-------------|-----------|-----------|-----------|-----------------|
| MINIMUM | 236.129 | 0.0001 | 26.57 | |
| MAXIMUM | 404.517 | 0.0003 | 26.70 | |
| AVERAGE | 283.006 | 0.0002 | 26.62 | |
| 10:39:58 AM | 282.513 | 0.0002 | 26.62 | |
| 10:39:59 AM | 282.520 | 0.0002 | 26.62 | |
| 10:40:00 AM | 282.517 | 0.0002 | 26.60 | |
| 10:40:01 AM | 282.460 | 0.0001 | 26.60 | |
| 10:40:02 AM | 282.529 | 0.0001 | 26.60 | |

- Displays the Minimum, Maximum and Average values for the current session.
- Readings that exceeded user selected thresholds/alarms are displayed as red.
- Scroll vertically to see data timeline in tabular format.
- View four channels at a time.
- Swipe left at the top of the screen to see additional active channels.

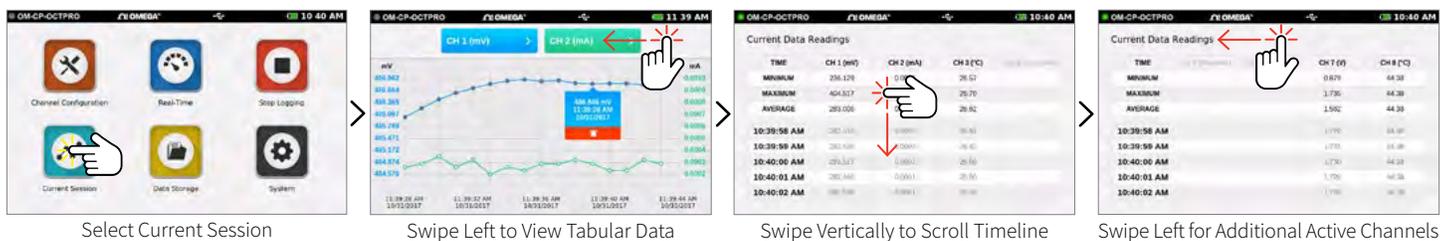

Additional Views

Swipe left and right to rotate through the various screens.

Graph View > Tabular Views > Real-Time View > Current Session Overview

Note: Use the swipe navigation of data views for both current and stored sessions.


MANAGING DATA

Data Storage

Selecting the Data Storage icon will bring up the screen pictured below. Stored sessions are displayed in a scrollable list, swipe vertically to browse the list. Session Information includes the name of the session, the start time and date of the session, and the number of readings. The options available on this screen include the following:



- **INT:** Available percentage of internal memory remaining on the device.
- **EXT:** Available percentage of memory remaining on the external USB drive.
- **Number of Sessions:** The total number of stored sessions on the device.
- **Session Information:** Tap on any row to view session specific options.
- **Delete All:** Erases all stored sessions from the internal memory.
- **Eject USB:** Select this button prior to removing the external USB drive.

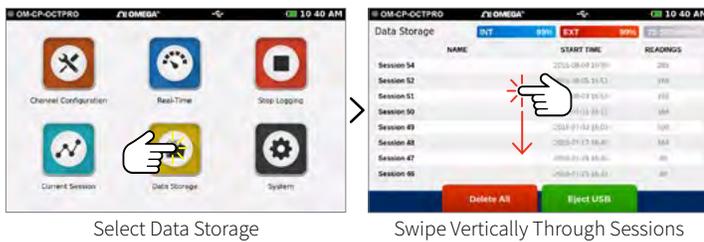

Storage Space

Every channel configured is considered a separate reading, so the number of readings divided by the number of channels gives you the readings per channel. Maximum number of readings per session is 1,000,000 or 5,000,000 user selectable in Device Settings.

| Thermocouple Channels: | Millivolt, Volt, RTD, Thermistor (NTC), Milliamp channels: | Frequency/Counter (Single Channel): |
|--|---|---|
| <ul style="list-style-type: none"> • 1 Hz or slower — 62,000,000 to 150,000,000 readings (depends on number of configured channels) in 1,000,000 or 5,000,000 reading increments. • 4 Hz or faster — 80,000,000 to 150,000,000 readings (depends on number of configured channels) in 1,000,000 or 5,000,000 reading increments. | <ul style="list-style-type: none"> • 1 Hz or slower — 93,000,000 to 164,000,000 readings (depends on number of configured channels) in 1,000,000 or 5,000,000 reading increments. • 4 Hz or faster — 150,000,000 to 173,000,000 readings (depends on number of configured channels) in 1,000,000 or 5,000,000 reading increments. | <ul style="list-style-type: none"> • 1 Hz or slower — 93,000,000 readings in 1,000,000 or 5,000,000 reading increments. |


MANAGING DATA

Saved Session Options

From the Data Storage screen, tap on any row in the list to select a specific session to view options. The Session Options screen features four actions the user can take on any stored session.



- **Copy:** Copies the stored session to an external USB drive. If no USB drive is plugged into the device, the Copy button will not display.
- **View Data:** Views the data of this session in tabular or graph view.
- **View/Edit Note:** Add notes or comments to the session.
- **Delete:** Removes the stored session from the device.

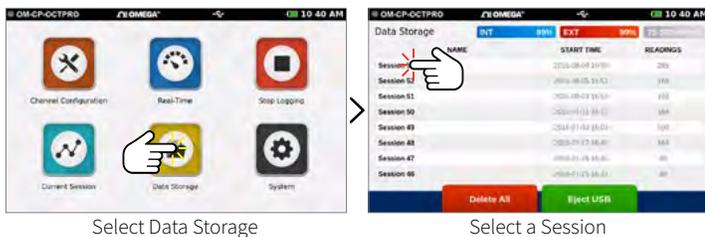


Select Data Storage

Select a Session


Copy Stored Sessions

Sessions can be copied from the internal device memory to an external USB drive. When the Copy option is selected, the Copy Stored Session pop-up will appear to confirm the user's request. **Note:** Data saved to external memory will be in .csv file format.

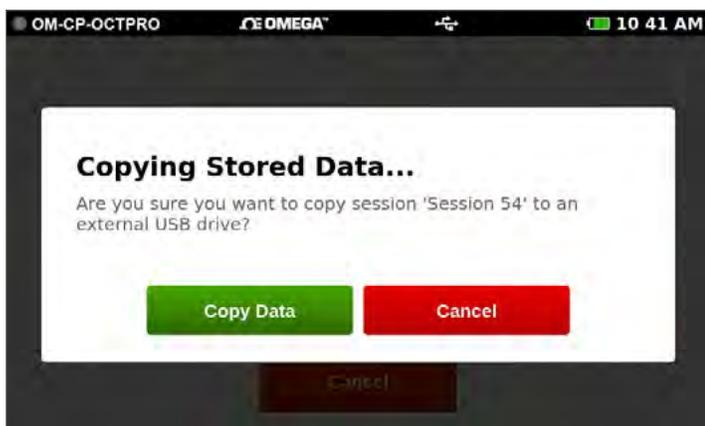

Note: Data can be saved to external memory as .csv and/or .mtb file format (user selectable in System/File Format). Saving as .mtb file format will allow data to be imported into Omega 4 Data Logger Software (version 4.2.13.0 or greater).

- **Copy Data:** The session is copied to the external USB drive.
- **Cancel:** Cancels the copy and takes the user back to the Options screen.

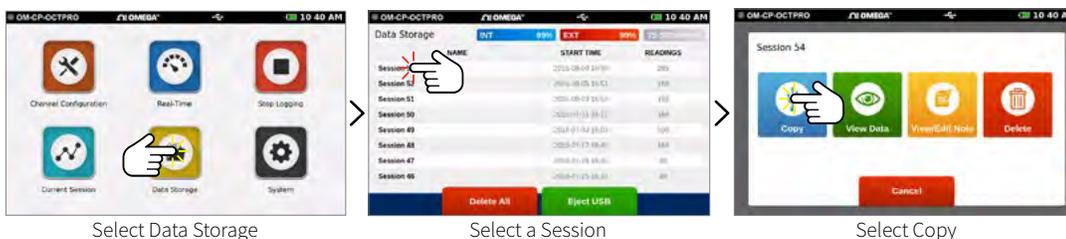

Select Data Storage

Select a Session


Select Copy

MANAGING DATA


View Data Sessions

When the View Data option is selected, the user is presented with the Tabular Data view of that session. From this screen the user can swipe left and right to navigate other views of the recorded data from that session (see swipe navigation options on **page 17**).

| TIME | CH 1 (mV) | CH 2 (mA) | CH 3 (°C) | CH 4 (Occupied) |
|-------------|-----------|-----------|-----------|-----------------|
| MINIMUM | 236.129 | 0.0001 | 26.57 | |
| MAXIMUM | 404.517 | 0.0003 | 26.70 | |
| AVERAGE | 283.006 | 0.0002 | 26.62 | |
| 10:39:58 AM | 282.513 | 0.0002 | 26.62 | |
| 10:39:59 AM | 282.520 | 0.0002 | 26.62 | |
| 10:40:00 AM | 282.517 | 0.0002 | 26.60 | |
| 10:40:01 AM | 282.460 | 0.0001 | 26.60 | |
| 10:40:02 AM | 282.529 | 0.0001 | 26.60 | |

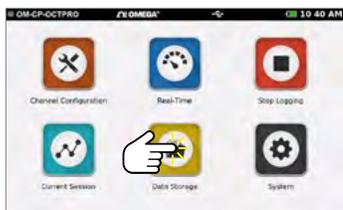

Select Data Storage

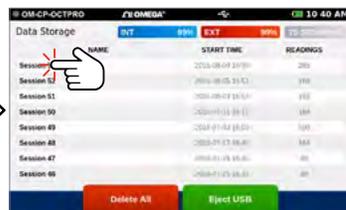



Select a Session




Select View Data

View/Edit Note

When the View/Edit Note option is selected, the user is presented with a text entry screen. Text entered here is stored as a note associated with a particular session. This can be accessed and edited by users as desired.

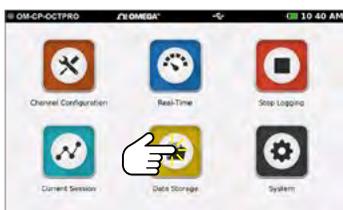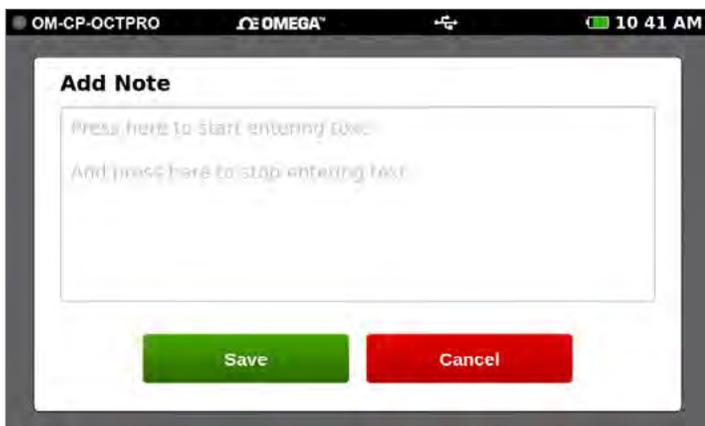

Select Data Storage

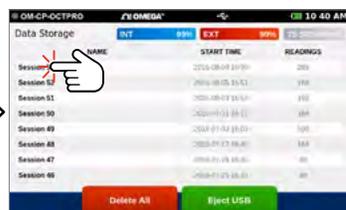

Select a Session



Select View/Edit Note


Note Flag
When a note has been added to a logging session, a notes icon appears in the list of sessions.

Delete a Note
To delete a note, edit to remove all text and click **Save**.

MANAGING DATA

Delete Stored Session

When the Delete session option is selected, the user is presented with a pop-up screen confirming the request.

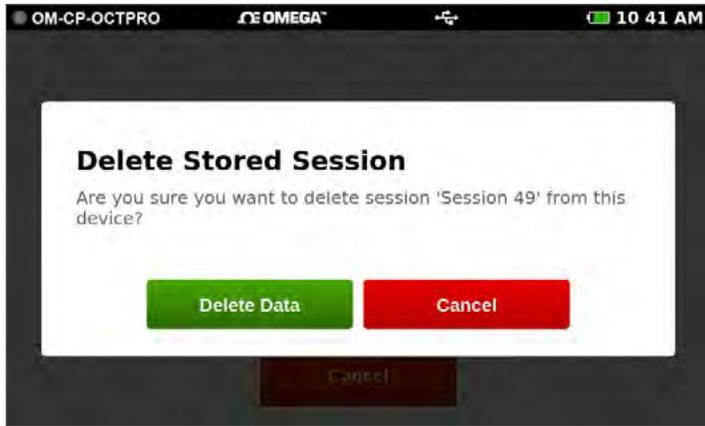


Deleting Stored Data Confirmation

When Delete Data is selected a pop-up screen will display a progress bar and confirm when action is complete. After data is successfully removed the user will be returned to the Data Storage screen.

Warning: Deleting a session is a permanent action.



Select Data Storage

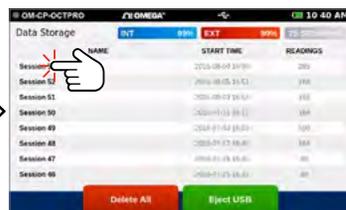

Select a Session



Select Delete

Delete All

If a user selects the Delete All option, they will be presented with a confirmation screen. Selecting Cancel will return the user to the Data Storage screen and the stored data will not be deleted.



Select Data Storage



Select Delete All

MANAGING DATA

No Stored Sessions

Before first use or after all data has been deleted, the Data Storage screen on the device will resemble the screen shown below.



Select Data Storage

DEVICE SETTINGS

Device Settings

When the System button is selected from the Home screen, the user is presented with options, preferences and information as shown below. The System panel displays an overview of information specific to the device including:



- Hardware Version
- Software Version
- Serial Number
- Internal Memory Used and Available
- Number of Stored Sessions
- Factory Calibration Date




Select System



File Format

Data from the Titan S8 can be saved to external memory in one of two formats.


- **USB Flash File Format:** .csv spreadsheet, .mtb file (for import into Omega 4 Data Logger Software version 4.2.13.0 or greater) or both.
- **Data Logging File Readings Limit:** Choose between 1 million or 5 million file readings limit.

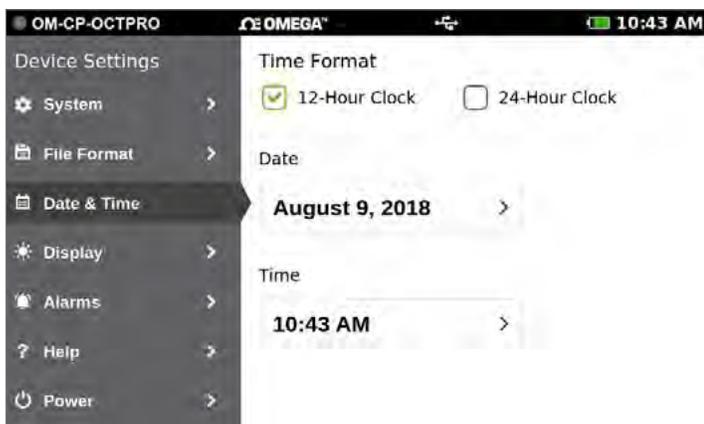

Date & Time

The Date & Time screen will display the current date and time as well as provide the user with 12-Hour or 24-Hour clock options.


DEVICE SETTINGS

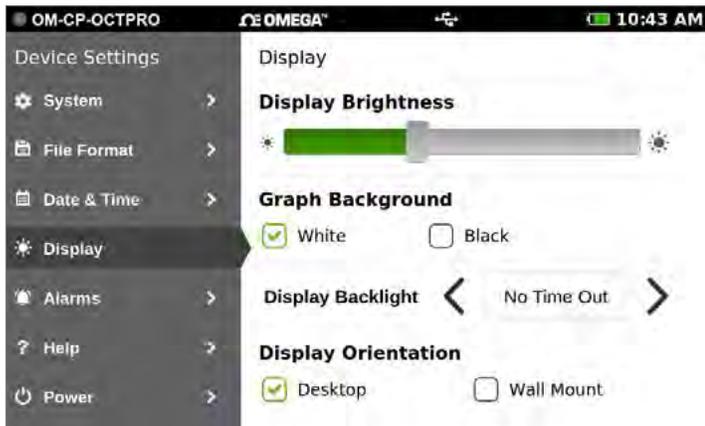

Display

The Display screen allows the user to adjust options for the touch-screen display including:

- **Display Brightness:** User adjustable screen brightness level.
- **Graph background:** Select white or black.
- **Display Backlight:** User selectable timeout period.
- **Display Orientation:** Changing the display orientation requires a reboot of the device.

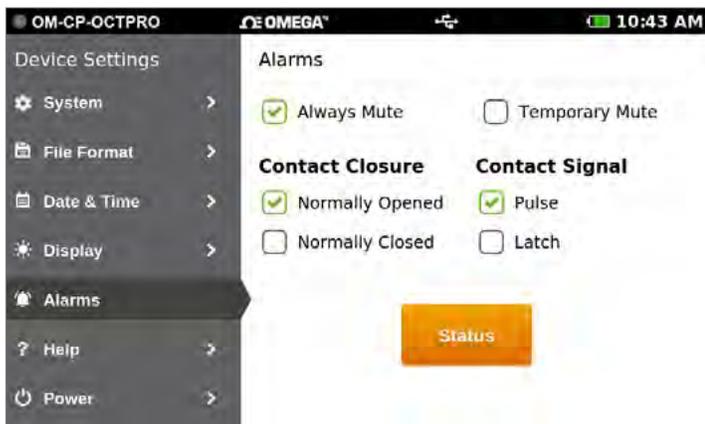

Alarms

The Alarms screen provides the user with two Contact Closure options for when an alarm is triggered.

- **Always/Temporary Mute**
- **Contact Closure:** Normally Open / Closed
- **Contact Signal:** Pulse / Latch
- **Status:** Shows if there are any alarms triggered.

Help

Provides Omega contact information to the user.



Power

Provides sleep mode, power off via screen and factory reset.



Warning: Factory reset will restore the unit to Factory Settings. This will delete all saved sessions and configurations.

SPECIFICATIONS

| GENERAL | |
|--------------------------------|--|
| Dimensions | 6.65 in x 4.40 in x 1.41 in (168.9 mm x 111.8 mm x 35.8 mm) <i>Data logger only</i> |
| Touch Screen Dimensions | 5 inches |
| Number of Channels | 8 |
| Weight | 1.3 lbs (20.8 oz) |
| IP Rating | IP20 |
| Start Modes | Immediate Start & Delay Start |
| Memory | 1,000,000 or 5,000,000 readings |
| Battery Type | Rechargeable 3.7 V Lithium Ion Battery Pack |
| Battery Life | <ul style="list-style-type: none"> Continuous on-screen sampling: 7-9 hours depending on display setting and reading rate Stand-by mode: 100 hours |
| Data Format | Exported .csv file format, .mtb or both |
| Time Accuracy | ±1 minute/month |
| Operating Environment | 0 °C to +50 °C (32 °F to +122 °F) 0 %RH to 95 %RH non-condensing |
| Enclosure Material | Polycarbonate, TPE Protective Boot |
| Calibration | Factory calibration is recommended annually |

| 0 - 24 mA | |
|-----------------|------------------------|
| Range | -5 mA to 50 mA |
| Resolution | 0.0001 mA |
| Accuracy | ±0.024 mA (0 to 24 mA) |
| Input Impedance | 30 Ω |

| 0 - 100 mV | |
|-----------------|-----------------------|
| Range | -100 mV to 2450 mV |
| Resolution | 0.0001 mV |
| Accuracy | ±0.1 mV (0 to 100 mV) |
| Input Impedance | 1 GΩ |
| Maximum Voltage | 3.0 V |

| 0 - 10 V | |
|-----------------|-----------------------------|
| Range | -0.5 V to 12.0 V |
| Resolution | 0.0001 V |
| Accuracy | ± 0.01 V (-0.5 V to 12.0 V) |
| Input Impedance | 1 GΩ |
| Maximum Voltage | 25 V |

Specifications subject to change. See Omega's terms and conditions at www.omega.com.

| FREQUENCY / PULSE | |
|-------------------|---------------|
| Maximum Count | 4,000,000,000 |
| Maximum Frequency | 25 KHz |
| Input Signal | 0 V to 12 V |
| Input Impedance | 58 KΩ |

| TEMPERATURE PT-100 (2-WIRE RTD) (0.00385 CURVE) | |
|---|--|
| Range | -200 °C to +850 °C (Probe Dependent) (18.5 Ω to 390.5 Ω) |
| Resolution | 0.01 °C |
| Accuracy | ±0.1 °C (-200 °C to +400 °C) (Probe Dependent) ±0.034 Ω (18.5 Ω to 247.1 Ω) |

| TEMPERATURE PT-100 (3-WIRE RTD) (0.00385 CURVE) | |
|---|--|
| Range | -200 °C to +850 °C (Probe Dependent) (18.5 Ω to 390.5 Ω) |
| Resolution | 0.01 °C |
| Accuracy | ±0.1 °C (-200 °C to +400 °C) (Probe Dependent) ±0.034 Ω (18.5 Ω to 247.1 Ω) |

| TEMPERATURE PT-100 (4-WIRE RTD) (0.00385 CURVE) | |
|---|--|
| Range | -200 °C to +850 °C (Probe Dependent) (18.5 Ω to 390.5 Ω) |
| Resolution | 0.01 °C |
| Accuracy | ±0.1 °C (-200 °C to +400 °C) (Probe Dependent) ±0.034 Ω (18.5 Ω to 247.1 Ω) |

| TEMPERATURE NTC-1 (2252) | |
|--------------------------|---|
| Range | -25 °C to +150 °C (Probe Dependent) (29,380 Ω to 41.9 Ω) |
| Resolution | 0.01 °C |
| Accuracy | ±0.50% FSR (Probe Dependent) |

| TEMPERATURE NTC-2 (10K) | |
|-------------------------|---|
| Range | -25 °C to +150 °C (Probe Dependent) (102,900 Ω to 238 Ω) |
| Resolution | 0.01 °C |
| Accuracy | ±0.50% FSR (Probe Dependent) |

RTD Note (All RTD Configurations)

Temperature Specifications based on ideal 100 Ω PT RTD Compliant with IEC 751(1983) and ITS-90. Accuracy based on 4-wire configuration.

BATTERY WARNING: Battery may explode or fire if mistreated. Do not disassemble or dispose of in fire. Do not charge except specified with charging condition. Do not heat above 212 °F, or short circuit. Do not crush or modify.

SPECIFICATIONS

| THERMOCOUPLE TYPE | RANGE | RESOLUTION | ACCURACY |
|-------------------|---------------------|------------|----------|
| J | -200 °C to +760 °C | 0.1 °C | ±0.5 °C |
| K | -270 °C to +1370 °C | 0.1 °C | ±0.5 °C |
| T | -270 °C to +400 °C | 0.1 °C | ±0.5 °C |
| E | -270 °C to +980 °C | 0.1 °C | ±0.5 °C |
| R | -50 °C to +1760 °C | 0.5 °C | ±2.0 °C |
| S | -50 °C to +1760 °C | 0.5 °C | ±2.0 °C |
| N | -270 °C to +1300 °C | 0.1 °C | ±0.5 °C |
| B | 50 °C to 1820 °C | 0.5 °C | ±2.0 °C |

Measurement Accuracy

- At room temperature (25 °C ±10 °C) after 60 minute warm-up period.
- Temperature calibrated accuracy is thermocouple dependent.
- Accuracy does not include Cold Junction Compensation (CJC). CJC error: ±1.5 °C

Reading Rate Information

All channels will use the same reading rate.

Reading rates will be capped at 4 Hz when a temperature channel is selected.

- 4 KHz (Supports single channel of voltage or current measurement only)
- 2 KHz (Supports single channel of voltage or current measurement only)
- 1 KHz (Supports single channel of voltage or current measurement only)
- 500 Hz (Supports single channel of voltage or current measurement only)
- 250 Hz (Supports single channel of voltage or current measurement only)
- 100 Hz (Supports single channel of voltage or current measurement only)
- 50 Hz (Supports single channel of voltage or current measurement only)
- 25 Hz (Supports single channel of voltage or current measurement only)
- 10 Hz (Supports multiple channels of voltage or current measurement only)
- 4 Hz
- 1 Second
- 2 Seconds
- 5 Seconds
- 10 Seconds
- 15 Seconds
- 30 Seconds
- 1 Minute
- 2 Minutes
- 5 Minutes
- 10 Minutes
- 15 Minutes
- 30 Minutes
- 1 Hour
- 2 Hours
- 5 Hours
- 10 Hours
- 12 Hours
- 24 Hours

INDEX

| | | | |
|--|-----------|--------------------------------------|-----------|
| Product Overview..... | 2 | Viewing Data | 17 |
| Device Overview | 2 | Real-Time Data | 17 |
| External Features | 2 | Current Session — Graph View | 17 |
| Device Orientation | 3 | Current Session — Tabular View | 18 |
| Device Ports | 3 | | |
| Sensor Types & Measurement Ranges | 4 | Managing Data | 19 |
| Powering, Charging & Downloading Data | 4 | Data Storage..... | 19 |
| | | Storage Space | 19 |
| User Interface | 5 | Saved Session Options..... | 20 |
| Top Menu Bar | 5 | Copy Stored Sessions..... | 20 |
| Home Screen | 5 | View Data Sessions | 21 |
| First Time Use..... | 6 | View / Edit Note | 21 |
| Select Screen Orientation | 6 | Delete Storage Sessions..... | 22 |
| Set Up Date & Time | 6 | Delete All | 22 |
| Channel Configuration | 7 | No Stored Sessions..... | 23 |
| Channel Setup | 7 | | |
| Measurement Setup | 8 | Device Settings..... | 24 |
| Measurement Units | 8 | System | 24 |
| Engineering Units | 9 | File Format..... | 24 |
| Setting Up Engineering Units..... | 10 | Date & Time | 24 |
| Keyboard Function | 11 | Display..... | 25 |
| Alarms | 11 | Alarms..... | 25 |
| Factory Calibration | 12 | Help..... | 25 |
| Channel Configuration Overview | 12 | Power..... | 25 |
| Save Configuration Settings | 13 | Technical Specifications | 26 |
| Load Configuration Settings | 13 | Battery Life..... | 26 |
| Wiring Diagram | 13 | Reading Rate Information..... | 27 |
| | | | |
| Logging Data | 14 | | |
| Start Logging | 14 | | |
| Delayed Start | 14 | | |
| Automatic Stop | 15 | | |
| Reading Rate | 15 | | |
| Review Session Details and Start Logging | 16 | | |
| Device Memory Warning | 16 | | |
| Stop Logging | 16 | | |

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a trademark of OMEGA ENGINEERING, INC.

© Copyright 2018 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at omega.com*

TEMPERATURE

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- Transducers & Strain Gages
- Load Cells & Pressure Gages
- Displacement Transducers
- Instrumentation & Accessories

FLOW/LEVEL

- Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- Totalizers & Batch Controllers

pH/CONDUCTIVITY

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

DATA ACQUISITION

- Communications-Based Acquisition Systems
- Data Logging Systems
- Wireless Sensors, Transmitters, & Receivers
- Signal Conditioners
- Data Acquisition Software

HEATERS

- Heating Cable
- Cartridge & Strip Heaters
- Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater Treatment
- pH, Conductivity & Dissolved Oxygen Instruments